

Foreword

Dear Owner, thank you for choosing Chery Commercial Vehicle. This manual has been prepared based on the actual operating conditions of vehicles manufactured by Chery Commercial Vehicle (Anhui) Co., Ltd. (hereinafter referred to as "the Company" or "Chery Commercial Vehicle"). This model is designed for urban logistics and combined passenger-and-cargo use. It is equipped with an efficient electric powertrain system, balancing operating economy, driving safety and vehicle durability. The information in this manual is current at the time of printing. Chery Commercial Vehicle reserves the right to revise and interpret this manual and to make product changes after printing without prior notice. Some illustrations in this manual are schematic and for reference only. If an illustration differs from the actual vehicle, the actual vehicle shall prevail.

To help ensure driving safety, extend vehicle service life and reduce operating costs, carefully read this Owner's Manual before using the vehicle for the first time. It will help you become familiar with the vehicle's structure, functions, operating methods and relevant Company requirements, so that you can use and maintain the vehicle correctly, make full use of its performance, drive safely and preserve the vehicle's value.

Caution

When operating the vehicle, comply strictly with all applicable local laws and regulations.

This manual provides operating instructions for vehicle use and maintenance. The actual configuration of your vehicle is subject to the purchase contract. If you have any questions about the vehicle or the documents supplied with it, contact your sales and service centre.

Chery Commercial Vehicle (Anhui) Co., Ltd. continuously upgrades and improves its products. Due to differences in model configurations, some descriptions in this manual may differ from the actual configuration of your vehicle. Changes to the configuration and performance of later models may be made without prior notice. The condition of the vehicle actually delivered to you shall prevail. Do not compare the contents of manuals for other versions with the configuration or performance of your vehicle and request additional equipment on the basis of such differences.

This manual is an important document for the vehicle warranty. Keep it in the vehicle for convenient reference.

The copyright and final right of interpretation of this manual belong to Chery Commercial Vehicle (Anhui) Co., Ltd.

Contents

Foreword	Unlocking and Locking.....	33
Notice to Users	Doors.....	34
Important Information	Bonnet.....	36
Environmental Protection and Certification	Tailgate.....	37
Disclaimer	Windows.....	37
Vehicle Overview	Steering Wheel.....	39
Vehicle Information.....	Exterior Rearview Mirrors.....	40
Exterior Overview.....	Interior Rearview Mirror (if equipped).....	41
Interior Overview.....	Exterior Lighting.....	42
Infotainment Display.....	Wipers.....	45
Instrument Pack (if equipped).....	Cargo Compartment Tie-down Points.....	46
Instrument Warning and Indicator Lamps... ..	Cabin Storage.....	46
Voice Commands.....	Cargo Compartment Monitoring.....	48
Vehicle Settings.....		
System Update.....	Driving the Vehicle	
Restore Factory Settings.....	Preparations and Checks.....	49
	Starting the Vehicle.....	50
Seats and Safety	Gear Shifting.....	50
Driver's Seat Adjustment.....	Powering Off the Vehicle.....	51
Front Passenger Seat Adjustment (if equipped).....	Driving Settings.....	51
Head Restraint Adjustment.....	Maximum Energy Efficiency.....	52
Seat Ventilation and Heating (if equipped)... ..	One-pedal Mode.....	52
Easy Entry/Exit (if equipped).....	Braking and Vehicle Stability Systems.....	52
Seat Belts.....	Driver Monitoring System (DMS).....	54
Airbags.....	Intelligent Scenario Assistance System.....	54
Anti-theft Alarm System.....	Acoustic Vehicle Alerting System (AVAS).....	56
	Multi-collision Brake System.....	56
Vehicle Controls	Sun Visor.....	56
Keys.....	Comfort and Convenience	
	Remote Control.....	58
	Air Conditioning.....	58

Network Connection.....	61
Music.....	61
Radio.....	62
Sound.....	62
Smartphone Projection.....	63
Navigation.....	63
Alcohol Interlock.....	63
Dash Cam (if equipped).....	64

Driver Assistance and Active Safety

ADAS Overview.....	65
ADAS User Guide.....	68
Adaptive Cruise Control (ACC).....	70
Intelligent Cruise Assistance (ICA).....	75
Forward Safety Assistance.....	75
Lateral Safety Assistance.....	79
Blind Spot Assist (if equipped).....	81
Camera System.....	81
Traffic Sign Recognition (TSR).....	84
Intelligent Speed Assistance (ISA).....	84
Lane Keeping Assist (LKA).....	85

Power Supply and Charging

12 V Power Supply.....	86
Wireless Charging (if equipped).....	86
Power Outlets.....	87
Convenience Power Supply.....	88
Charging Port Flap.....	89
Vehicle Charging Instructions.....	90
Vehicle Charging - AC Charging.....	91
Vehicle Charging - DC Fast Charging.....	92
Vehicle State of Charge and Charging Display	93
Scheduled Charging.....	93

Charging with the Portable Charging Connector (if equipped).....	93
Vehicle-to-Load (V2L) Discharging.....	94

Maintenance and Service

Maintenance Notes.....	96
Routine Maintenance.....	96
Front Wiper Blade Replacement.....	96
Adding Windscreen Washer Fluid.....	97
Adding Coolant.....	98
Adding Brake Fluid.....	99
Tyre Inspection and Maintenance.....	100
Tyre Pressure Monitoring System.....	101
Winter Tyres.....	102
Snow Chains.....	102
Brake Pad and Brake Disc Inspection and Maintenance.....	102
Air-conditioning Filter Inspection and Maintenance.....	103
Fuse Box.....	103
12 V Battery Maintenance.....	103
High-voltage Traction Battery Maintenance and Recycling.....	104
Exterior Cleaning and Maintenance.....	105
Interior Cleaning and Maintenance.....	107
Car Wash Mode.....	108

Emergency Rescue

Warning Symbol Information.....	109
Vehicle Tools.....	109
Placing the Warning Triangle.....	110
Fire Extinguisher.....	110
Emergency Call.....	111
Emergency Evacuation.....	111

Jump Starting.....	111
Tyre Inflation.....	112
Tyre Repair.....	113
Replacing the Spare Wheel (if equipped)....	114
Vehicle Emergency Rescue Information.....	116
Rescue Protective Equipment.....	116
Disconnecting the High-voltage Circuit.....	117
Towing an Accident-Damaged Vehicle.....	117
Vehicle Lifting.....	119
Water-immersed Vehicle Rescue.....	119
Vehicle Fire Rescue.....	119
High-voltage Traction Battery Leakage Rescue	120
Vehicle Cutting Areas.....	120

Specifications and Parameters

Vehicle Specifications.....	122
Mass Parameters.....	122
Towing Hitch Specifications.....	123
Drive Motor Specifications.....	123
Wheel and Tyre Specifications.....	124
High-voltage Traction Battery Specifications	125
Brake System and Suspension Specifications	125
Recommended Fluids and Capacities.....	126
Seat Specifications.....	126

Privacy Protection

Personal Information Protection.....	127
Event Data Recorder (EDR).....	132

Notice to Users

For your safety, comply with local laws and regulations when driving and observe the following precautions:

Driver assistance systems are designed to improve comfort and convenience and do not provide fully automated or driverless driving. The driver remains fully responsible for driving the vehicle and must always monitor the surroundings, keep both hands ready on the steering wheel and drive safely. Do not rely on the system to handle unexpected situations, as this may result in an accident. Read the limitations of the driver assistance functions in this manual. Use them with caution in complex or changing traffic, rain, snow or icy conditions, on slippery or waterlogged roads, or when visibility is poor.

When the vehicle is powered off and enclosed, do not leave children, pets or others unattended inside, as this may cause danger or serious injury or death.

Failure to wear a seat belt, or wearing it incorrectly, may result in serious injury or death. Always wear the seat belt correctly.

Do not use seat covers that cover the sides of the seats. In an accident, they may prevent the seat side airbags from deploying correctly, reducing protection for occupants.

The front passenger airbag is integrated into the trim on the passenger side of the instrument panel. Do not place an anti-glare mat, decorative mat or any objects on the instrument panel. In an accident, such items may obstruct correct airbag deployment, seriously reduce protection, or become projectiles and cause secondary injury.

Do not place coins, keys, chip cards or other metal objects in the wireless charging area. Metal objects may heat up, prevent normal charging or cause a safety hazard. If a metal object is found between the phone and the charging pad, switch off wireless charging immediately. To avoid burns, do not remove the object with your bare hand immediately.

If a malfunction indicator on the instrument pack illuminates while driving, drive the vehicle to a safe, suitable place to stop, then contact an Authorised Service Centre for inspection.

Do not drive unless the seat, rearview mirrors and steering wheel have been correctly adjusted and the seat belt is fastened. Otherwise, an accident or serious injury may result.

Stay alert while driving. Do not drive after drinking alcohol or taking medicines that may cause drowsiness, fatigue, headache, blurred vision or other sedative effects, as this can impair your ability to control the vehicle and may result in an accident, injury or death.

Always drive carefully and assess whether the weather and road conditions are suitable for travel. Remain aware of other vehicles and pedestrians so you can react accurately and promptly to avoid accidents.

Stay fully focused when driving. Making or answering phone calls, checking messages or similar activities while driving can distract you and may result in an accident, injury or death.

For other precautions, see the "Tip", "Caution" and "Warning" sections in this manual. Read all related warnings and cautions carefully. Ignoring them may result in personal injury or vehicle damage.

Warning



warning

A warning indicates that failure to follow the warning may result in personal injury or death to you or others.

Caution



caution

A caution indicates that failure to follow the instruction may cause related vehicle functions to become unavailable and, in severe cases, may damage the vehicle.

Description



Caution

An information symbol indicates helpful tips or useful detailed information.

Illustration Description

Illustrations in this manual are generic and show certain vehicle features or functions to aid understanding. They may differ from the actual vehicle due to configuration, optional equipment or functions. Vehicle functions may also change with software updates or feature activation, so related text and illustrations may differ from the vehicle and are for reference only. The actual vehicle prevails. Some illustrations highlight key areas for clarity.

Illustration Information



Indicates an enlarged detail of the object being described.



Indicates the direction of movement of the object.



Indicates the object being described.

If equipped

The phrase “if equipped” after a title or name indicates that the described configuration or function is fitted only to certain models and may not be fitted to this vehicle.

Environmental Protection and Certification

This publication uses certified compliant paper from safe and reliable sources. It is certified by the Forest Stewardship Council (FSC®), reflecting our commitment to preserving a greener environment for future generations. The FSC® mark shown in this publication indicates that the paper is sourced from FSC®-certified forest resources.

The Owner's Manual and Warranty and Maintenance Manual together define the rights, obligations and agreements between you and the Company regarding product quality assurance and aftersales service. Read and follow both manuals before using the vehicle. Losses caused by misuse, negligent operation, improper use or unauthorised modification may invalidate claims, and an Authorised Service Centre may reject related warranty applications.

Countries and regions have strict rules governing vehicle modifications and accessories. Do not alter the vehicle structure, electrical system or components without permission. Unauthorised modifications can reduce component performance, cause faults or serious incidents such as fire, endangering occupants.

Without our prior written authorisation, no part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, including electronic, mechanical or recording methods.

Vehicle Information

Vehicle Identification Number (VIN)

When contacting an Authorised Service Centre, provide the Vehicle Identification Number (VIN).




The Vehicle Identification Number (VIN) is located at the lower-left corner of the windscreen.

Caution

The vehicle diagnostic connector is located at the lower left side of the instrument panel. The vehicle identification number can be read from the electronic control units using the manufacturer's dedicated diagnostic tool at an Authorised Service Centre.

Drive Motor Model/Identification Location

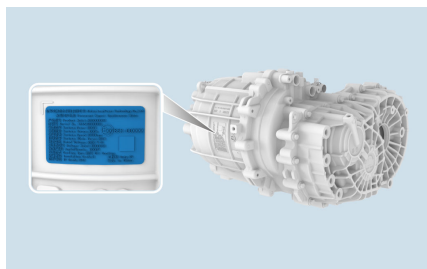

The drive motor code/identification is located on the left side of the motor housing.


Traction Battery Label Location

The traction battery labels are affixed to the front and rear end faces of the traction battery.

caution

When the traction battery is serviced or recycled, its identification code must be provided and uploaded. If the label on the traction battery is damaged, contact an Authorised Service Centre promptly.

Microwave Window

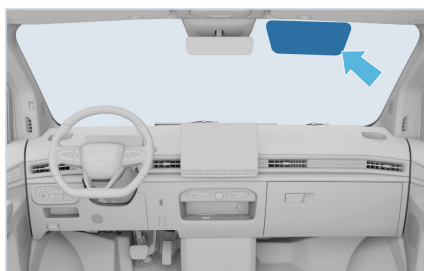

The microwave window is located at the upper right side of the interior rearview mirror base on the windscreen.


The electronic vehicle identification should be installed within the microwave window area. It must not be obstructed by the interior rearview mirror mounting bracket, sensor bracket or similar components.

caution

Keep the windscreen clean and dry. Do not apply film or attach metal or other materials to the microwave window, so that the electronic vehicle identification can be installed correctly and its data read reliably. Do not cover, squeeze or remove the electronic vehicle identification. If it is damaged, apply for a replacement promptly from the issuing authority.


Exterior Overview

Front Exterior Overview

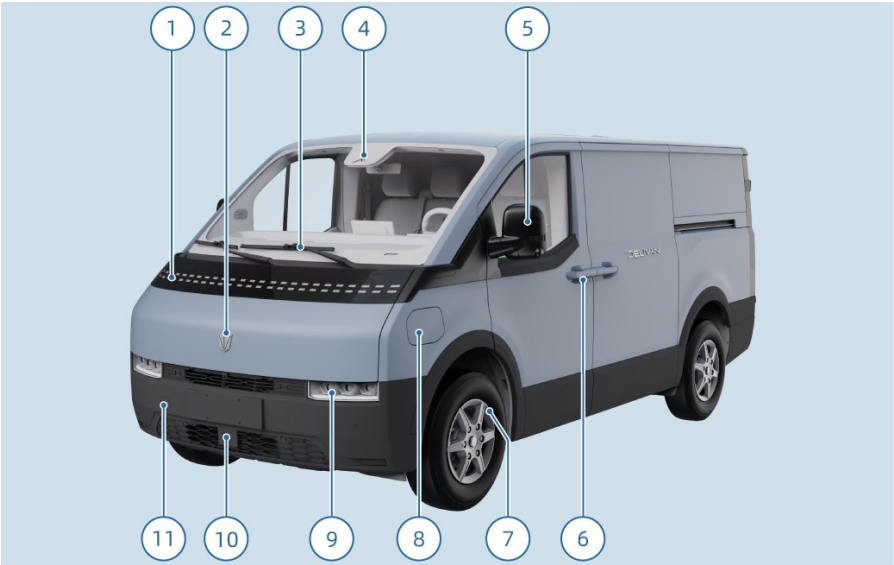


No.	Name	No.	Name
1	Front Full-width Lamp	7	Wheels
2	Vehicle Badge	8	Charging Port
3	Wipers	9	Headlamps
4	Front-view Camera	10	Front Millimetre-wave Radar
5	Exterior Rearview Mirrors	11	Front Towing Eye Cover
6	Exterior Door Handle	12	-

Rear Exterior Overview

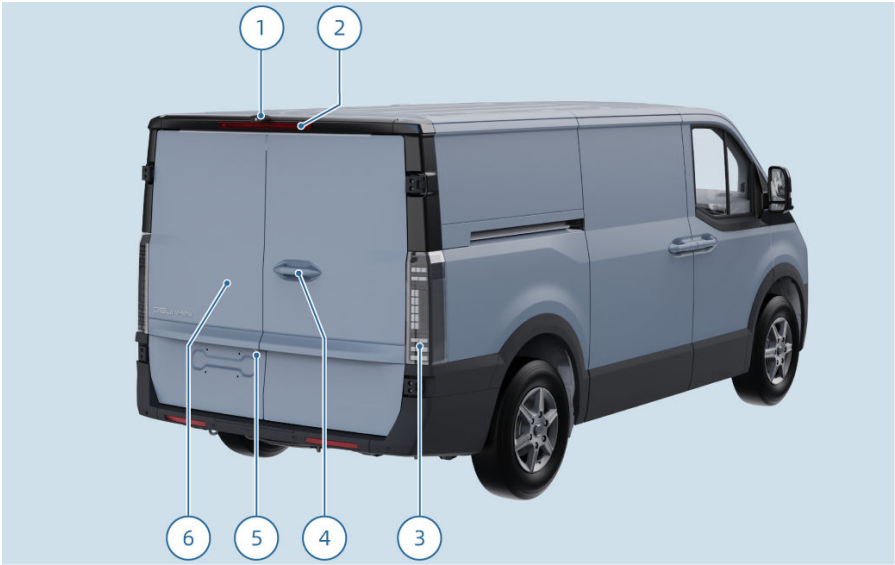

No.	Name	No.	Name
1	Streaming Rearview Camera	4	Tailgate Handle
2	High-mounted Stop Lamp	5	Rear Surround-view Camera (if equipped) / Rear Parking Camera (if equipped)
3	Rear Combination Lamp	6	Tailgate

Interior Overview

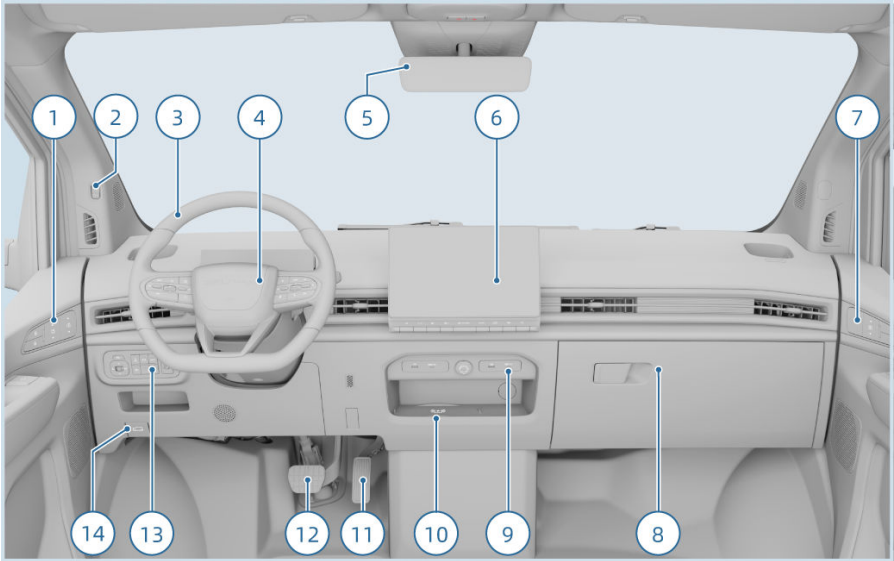


No.	Name	No.	Name
1	Door LocksandWindow Switch	8	Glove Box *
2	Driver Monitoring System Camera	9	Power Outlets
3	Steering Wheel	10	Wireless Charging
4	Driver Frontal Airbag/Horn	11	Accelerator Pedal
5	Optical Rearview Mirror/Streaming Rearview Mirror	12	Brake Pedal
6	Infotainment Display	13	Left-hand Steering Wheel Control Panel
7	Front Passenger Window Switch	14	Bonnet Release Handle

Infotainment Display

Interface Overview


Vehicle Overview

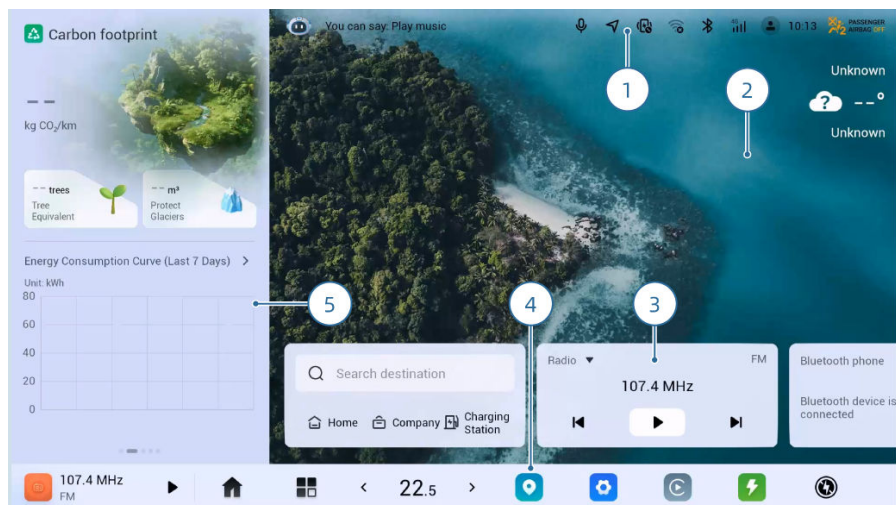

No.	Name	Description
1	Status Bar	The status bar at the top of the infotainment display shows real-time vehicle information, including remaining range, selected gear, voice assistant, wireless charging, Wi-Fi, Bluetooth, 4G network, account centre and warning icons.
2	Wallpaper and Home Screen	Swipe left or right with three fingers to switch home screens.
3	Home Screen Widget Card Area	Cards can be customised for Navigation, Multimedia, Bluetooth Phone, Energy Management and other functions.
4	Navigation Bar	Provides quick controls for music, one-touch return to the home screen, Bluetooth calls and more.
5	Shortcut Card Area (if equipped)/Integrated Instrument Area	The map screen is displayed by default. Swipe left or right with one finger to switch shortcut cards. On lower-specification models, the integrated instrument area continuously displays instrument information.

For instructions on operating the infotainment display, see the “Infotainment Manual”.

Infotainment Display Angle Adjustment

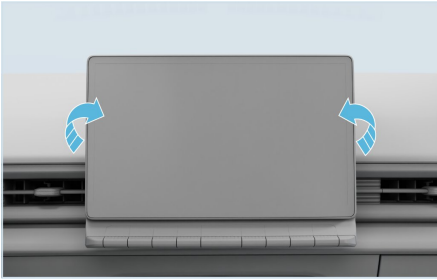


Swivel the infotainment display left or right to adjust its angle.

Instrument Pack (if equipped)

The instrument pack is the vehicle's main information display and shows operating parameters and status information in real time. For driving safety, the driver should keep attention on the road and traffic conditions at all times and avoid operating the instrument pack while driving.

Instrument Pack Display Areas

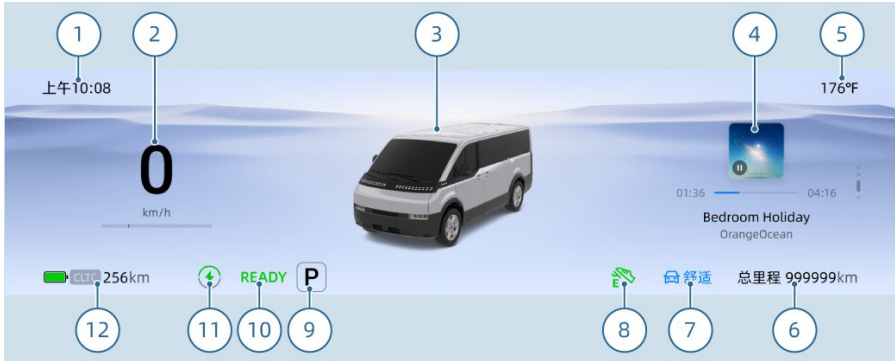

No.	Description
1	Time
2	Vehicle Speed Information
3	Centre Information Area
4	Right Information Area
5	Current Outside Temperature
6	Mileage Information
7	Drive Mode
8	One-pedal Mode
9	Gear Information
10	Vehicle Status
11	Regenerative Braking Level
12	Driving Range Information

For details of the indicator lamps in the instrument pack, see [Instrument Warning and Indicator Lamps](#).

Instrument Warning and Indicator Lamps

When vehicle power is switched on, some fault indicators illuminate briefly for a system self-check. If any fault indicator remains illuminated or flashes after the vehicle starts, contact an Authorised Service Centre immediately for inspection and repair.

An operation indicator lamp remains illuminated to indicate the operating status of a vehicle system.
A malfunction indicator remains illuminated or flashes to warn the driver of a fault in a vehicle system.

Indicator Lamp	Name	Description
	Rear Fog Lamp	Steady illumination indicates that the rear fog lamp is on.
	Main-beam Headlamps	Steady illumination indicates that the main-beam headlamps are on.
	Dipped-beam Headlamps	Steady illumination indicates that the dipped-beam headlamps are on.
	Left Direction Indicator	When the left turn signal is switched on, the left turn signal lamp flashes. When the hazard warning lamps are switched on, both left and right turn signal lamps flash.
	Right Direction Indicator	When the right turn signal is switched on, the right turn signal lamp flashes. When the hazard warning lamps are switched on, both left and right turn signal lamps flash.
	Position Lamps	Steady illumination indicates that the position lamps are on.
	Tyre Pressure Monitoring System Fault Indicator Lamp	When illuminated continuously, the indicator means there is a tyre pressure fault. Check whether tyre pressure is too low or tyre temperature is too high. If tyre pressure is normal, contact an Authorised Service Centre for inspection and repair as soon as possible.
	Anti-lock Braking System Fault Indicator Lamp	Steady illumination indicates an ABS fault. Contact an Authorised Service Centre as soon as possible.
	Electronic Stability Control Status Indicator Lamp	Steady illumination indicates that Electronic Stability Control is off.
		When flashing, the indicator means Electronic Stability Control is operating. When illuminated continuously, it means the system has a fault. Contact an Authorised Service Centre for inspection and repair as soon as possible.

Vehicle Overview

Indicator Lamp	Name	Description
	Electronic Parking Brake System Status Indicator Lamp	When illuminated continuously, the indicator means the Electronic Parking Brake is active. Flashing during emergency braking is normal and requires no action. If it flashes at other times, the system has a fault; contact an Authorised Service Centre for inspection and repair as soon as possible.
		Steady illumination indicates an electronic parking brake fault. Contact an Authorised Service Centre as soon as possible.
	Auto Hold Status Indicator Lamp	Steady illumination indicates that Auto Hold is enabled.
		Steady illumination indicates that Auto Hold is active.
		Steady illumination indicates an Auto Hold fault. Contact an Authorised Service Centre immediately.
	Hill Descent Control Status Indicator Lamp	When illuminated continuously, the indicator means Hill Descent Control is switched on; when flashing, it means Hill Descent Control is active.
		Steady illumination indicates a Hill Descent Control fault. Contact an Authorised Service Centre immediately.
	Low-voltage Power Supply System Fault Indicator Lamp	Steady illumination indicates a low-voltage battery charging system fault or low 12 V battery charge.
	Traction Battery Fault Indicator Lamp	Steady illumination indicates a serious traction battery fault.
		Steady illumination indicates a traction battery fault.
	Water Pump Fault Indicator Lamp	Steady illumination indicates a coolant pump fault.
	Charging Status Indicator Lamp	Steady illumination indicates that the vehicle is charging.
	Seat Belt Unfastened Indicator Lamp	A steady indicator lamp means the seat belt is unfastened or not correctly fastened. Fasten the seat belt correctly.

Indicator Lamp	Name	Description
	Airbag Fault Indicator Lamp	Steady illumination indicates an airbag fault. Contact an Authorised Service Centre as soon as possible.
	Powertrain Fault Indicator Lamp	Steady illumination indicates a powertrain fault. Contact an Authorised Service Centre as soon as possible.
	Electric Drive System Fault Indicator Lamp	Steady illumination indicates a drive motor fault. Contact an Authorised Service Centre as soon as possible.
	Lane Departure Warning Status Indicator Lamp	Steady illumination indicates that Lane Departure Warning is limited.
		Steady illumination indicates that Lane Departure Warning is enabled.
		Steady illumination indicates a Lane Departure Warning fault. Contact an Authorised Service Centre as soon as possible.
	Lane Keeping Assist Status Indicator Lamp	Steady illumination indicates that Lane Keeping Assist is limited.
		Steady illumination indicates that Lane Keeping Assist is enabled.
		Steady illumination indicates a Lane Keeping Assist fault. Contact an Authorised Service Centre as soon as possible.
	Brake System Status Indicator Lamp	Steady illumination indicates a braking system fault. Contact an Authorised Service Centre as soon as possible.
		Steady illumination indicates low brake fluid or a braking system fault. Contact an Authorised Service Centre immediately.
	Windscreen Washer Fluid Level Indicator Lamp	Flashing indicates that the windscreen washer fluid level is low. Add windscreen washer fluid.
	Door Ajar Indicator Lamp	Steady illumination indicates that one or more doors are not fully closed.

Indicator Lamp	Name	Description
	Electric Power Steering Status Indicator Lamp	When illuminated continuously, the indicator means the electric power steering system has not been initialised or calibrated. Contact an Authorised Service Centre immediately for inspection and repair.
		Steady illumination indicates an electric power steering fault. Contact an Authorised Service Centre immediately.
	Traction Battery Overtemperature Indicator Lamp	When illuminated continuously, the indicator means the traction battery system has detected excessive temperature or battery thermal runaway. Contact an Authorised Service Centre immediately for inspection and repair.
	Adaptive Cruise Control Status Indicator Lamp	Steady illumination indicates that Adaptive Cruise Control is limited.
		Steady illumination indicates that Adaptive Cruise Control is in standby.
		Steady illumination indicates that Adaptive Cruise Control is active.
		Steady illumination indicates an Adaptive Cruise Control fault. Contact an Authorised Service Centre as soon as possible.
	Forward Collision Warning/Automatic Emergency Braking Indicator Lamp	Steady illumination indicates that Forward Collision Warning/Automatic Emergency Braking is off.
		When illuminated continuously, the indicator means Forward Collision Warning/Automatic Emergency Braking has a fault. Contact an Authorised Service Centre for inspection and repair as soon as possible. When flashing, Forward Collision Warning is issuing a warning and Automatic Emergency Braking is active.
	Traffic Sign Information Reminder Indicator Lamp	When illuminated continuously, the indicator means the Traffic Sign Information system has recognised the current road traffic sign. Observe local traffic regulations.
	Speed Limit Sign Indicator Lamp	Steady illumination indicates a current speed limit of 80 km/h. Flashing indicates that the vehicle is exceeding the speed limit; reduce speed.

Indicator Lamp	Name	Description
	Speed Limit Sign Indicator Lamp	Steady illumination indicates that the speed limit sign function is off.
		Steady illumination indicates that no speed limit is detected for the current road.
	High-voltage Insulation Fault Indicator Lamp	Steady illumination indicates a general high-voltage system fault. Contact an Authorised Service Centre as soon as possible.
		When illuminated continuously, the indicator means a serious fault has occurred in the high-voltage system. Pull over safely, switch off the vehicle, disconnect the power supply and contact an Authorised Service Centre for inspection and repair.
	Remote Key Not Detected Indicator Lamp	Steady illumination indicates that no remote key is detected.
	Anti-theft Alarm Trigger Indicator Lamp	Flashing indicates that the vehicle anti-theft alarm has been triggered.
	Charging Connector Connection Indicator Lamp	Steady illumination indicates that the charging connector is connected.
	Blind Spot Detection Warning/Door Opening Warning Indicator Lamp	When illuminated continuously, the indicator means the Blind Spot Detection/Door Opening Warning system has a fault. Contact an Authorised Service Centre for inspection and repair as soon as possible.
	Lighting System Fault Indicator Lamp	Steady illumination indicates a vehicle lighting fault. Contact an Authorised Service Centre as soon as possible.
	High-voltage Disconnect Fault Indicator Lamp	Steady illumination indicates a high-voltage power system disconnection warning. Contact an Authorised Service Centre immediately.
	Powertrain Power Limited Warning Lamp	Steady illumination indicates that vehicle powertrain output is limited. Contact an Authorised Service Centre immediately.
	Energy Recovery Level Indicator Lamp	Steady illumination indicates that energy recovery is off.
		Steady illumination indicates that the energy recovery level is "Low".

Indicator Lamp	Name	Description
	Energy Recovery Level Indicator Lamp	Steady illumination indicates that the energy recovery level is "High".
TMS	Thermal Management Fault Indicator Lamp	Steady illumination indicates a general vehicle thermal management system fault. Contact an Authorised Service Centre immediately.
TMS		When illuminated continuously, the indicator means there is a serious fault in the vehicle thermal management system. Pull over safely, switch off the vehicle and contact an Authorised Service Centre for inspection and repair.
	Coolant Level Indicator Lamp	Steady illumination indicates a low coolant level. Contact an Authorised Service Centre as soon as possible.
	Low Refrigerant Indicator Lamp	Steady illumination indicates a low refrigerant level. Contact an Authorised Service Centre as soon as possible.
	Hill Assist Indicator Lamp	Steady illumination indicates a hill assist system fault. Contact an Authorised Service Centre as soon as possible.
READY	READY Indicator Lamp	Steady illumination indicates that the vehicle is ready to drive and a gear can be selected.

Voice Commands

The voice system is a core intelligent interaction function designed to provide convenient and safe voice control. It supports operation of multiple vehicle functions by voice command. Voice data is processed locally in real time only and is not stored, transmitted or used for other purposes, helping protect user information.

System Wake-up Methods

The intelligent voice system can be woken in the following ways:

Default Wake Word: Say "Hi, Robot".

Voice Wake-up Settings

The system supports multi-zone voice wake-up and can be configured as required. On the infotainment display, go to →**Voice**→**Front**

Passenger Wake-up, turn front passenger voice wake-up on/off.

Caution

Driver voice wake-up is enabled by default and cannot be turned off.

Personalisation Settings

The voice assistant supports various personalised settings. On the infotainment display, go to →**Voice**Enter the settings screen to personalise the user experience.


Voice-controlled Windows

Voice control can independently raise or lower the driver or front passenger window.

Other Settings

Continuous Conversation Wait Time: On the infotainment display, go to  → **Voice** → **Continuous Conversation Wait Time**, you can set the pause wait time for continuous conversation.

Vehicle Settings

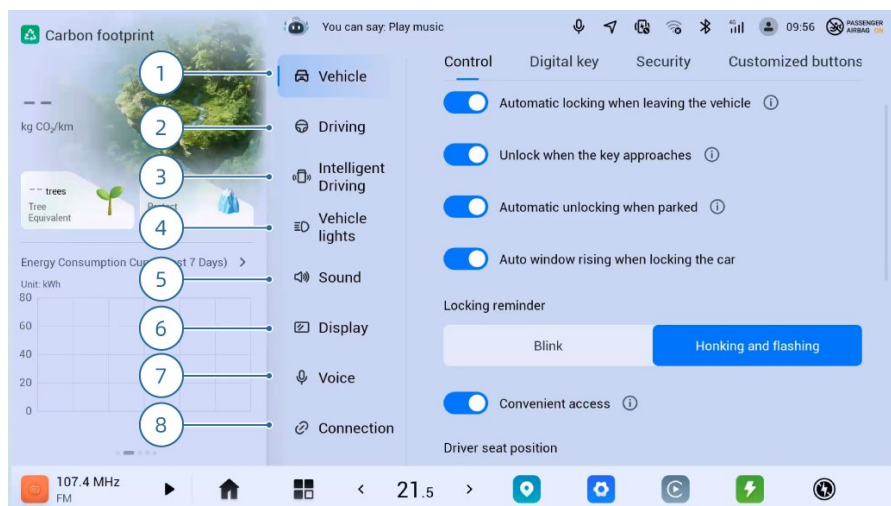

On the infotainment display, tap  Open the “Settings” screen to personalise vehicle functions.

No.	Function	Setting Options
1	Vehicle	Settings are available for doors/windows/locks, digital keys, steering wheel, safety and other functions.
2	Driving	Settings are available for Drive Mode, Energy Recovery, One-pedal Mode and other functions.
3	Driver Assistance	Settings are available for driver assistance, active safety, passenger safety and other functions.
4	Exterior Lighting	Exterior and interior lighting settings can be adjusted.
5	Sound	You can adjust media volume, voice and navigation volume, and call volume; and set system prompt sounds, the Acoustic Vehicle Alerting System sound, and lock confirmation light/sound feedback.
6	Display	You can set the theme mode, screen brightness and screen-off time.

7	Language	You can customise the voice assistant, including voice tone and other settings.
8	Connection	You can configure Bluetooth, Wi-Fi, wireless hotspot and intelligent connectivity.

For instructions on operating the infotainment display, see the “Infotainment Manual”.

System Update

The vehicle supports remote Over-the-Air (OTA) system updates, allowing convenient vehicle software updates to optimise functions and user experience.

System Update Conditions:

1. The vehicle network connection must be normal. The update package requires a mobile network or Wi-Fi connection.
2. The vehicle must be parked (shifted into P).
3. Before updating, make sure the traction battery has sufficient charge and the vehicle is neither charging nor supplying external power.
4. The E-Call emergency call function has not been triggered.
5. Disconnect any third-party device connected to the OBD port.
6. Some vehicle functions are unavailable during an update. Park the vehicle in a safe location.

The update procedure is as follows:

1. When a new system update is available, a notification appears on the infotainment display.
2. Use the Vehicle Update app on the infotainment display to view the current version or perform an update.
3. Tap Update and follow the on-screen instructions to complete the update.
4. During the update, the infotainment display shows the update progress.
5. After the update, the infotainment display shows the vehicle update result, including implemented configuration changes and related update content.
6. If the remote system update fails, contact an Authorised Service Centre.

Restore Factory Settings

You can restore vehicle data to factory settings as required, for example before selling or scrapping the vehicle. After a factory reset, cloud data and all apps are restored to their factory state, the infotainment system remains at the current version, and the keys continue to function normally.

Restore as follows:


1. Shift the vehicle into P.
2. On the infotainment display, go to  → **System** → **Restore Factory Settings**.
3. After confirmation, the system clears local vehicle data and restores the default settings.
4. When complete, the vehicle returns to the pending activation state.

Driver's Seat Adjustment

Before driving, use the driver seat adjustment controls to set the seat to a suitable position.

Correct Driving Position

For maximum occupant protection, seats, head restraints, seat belts and airbags must be used together. Correct use of all safety systems is required for optimum protection.

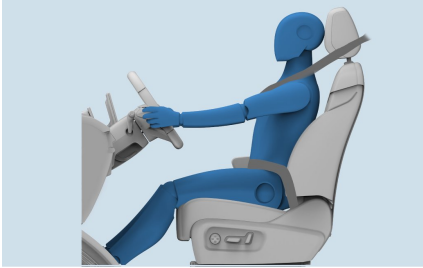

Adjust the seat to the correct position:

- Adjust the seat height so that you can clearly see the surroundings and all displayed information.
- Adjust the seat-to-pedal distance so that the pedals can be fully depressed comfortably.
- Adjust the seat backrest so your back is fully supported and the backrest is not excessively reclined.
- Adjust the steering wheel so there is at least 25 cm between the driver's chest and the steering wheel.
- Adjust the head restraint so that its centre is level with the driver's eyes.
- Position the diagonal section of the seat belt between the neck and shoulder.
- Position the lap section of the seat belt across the hips, not the abdomen.

warning

- Do not use any type of seat cover or modify the seat upholstery yourself. In a collision, this may severely restrict deployment of the seat-mounted side airbag, preventing effective protection and causing serious injury or death.

warning

- Do not hang objects from the seats or head restraints. In a collision or during rapid acceleration or deceleration, these objects may increase the risk of injury.
- Only one person may occupy each seating position while the vehicle is moving. Each seat belt is designed for one person. Sharing a seat belt prevents proper protection and may cause serious injury or death in a collision or during rapid acceleration/deceleration.
- Excessively reclining a seat backrest while driving reduces seat belt protection and may cause serious injury or death in a collision.

Manual Adjustment (if equipped)

Seat Fore/Aft Adjustment



Pull the seat adjustment lever, move the seat to the desired position, then release the lever to lock it.

caution

After releasing the seat adjustment lever, rock the seat to make sure the latch is fully engaged in the rail and there is no looseness.

Seat Height Adjustment



Move the lever up or down to adjust the driver's seat height.

Seat Backrest Adjustment




Pull and hold the handle, adjust to the desired position, then release the handle to lock it.

Seat Armrest Adjustment



Pull the armrest upward to stow it; lower it to use it.

Power Adjustment (if equipped)

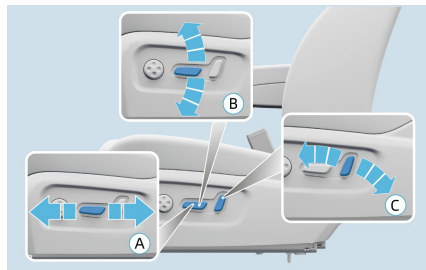

Seat Fore/Aft Adjustment

As shown in A, move the seat adjustment switch forward/backward to adjust the seat fore/aft position.

Seat Height Adjustment

As shown in B, move the rear of the switch up or down to adjust the seat height.

Seat Backrest Adjustment

As shown in C, move the switch forward/backward to adjust the seat backrest angle.

Seat Lumbar Support Adjustment



Press the control up, down, left or right to adjust the lumbar support vertically and fore/aft.

warning

- Do not adjust the driver's seat while driving, as this may cause loss of vehicle control and an accident.
- Before adjusting a seat, check the area around it. Avoid trapping or colliding with rear-seat occupants, especially children, or pets.
- When adjusting the seat, make sure that your hands, body or objects are not in

warning

the seat's path of movement to avoid a trapping injury.

- Do not allow children to adjust the seats, as there is a risk of trapping injury.

Front Passenger Seat Adjustment (if equipped)


Front Passenger Armrest Adjustment




Pull the strap in the direction of the arrow to open the front passenger armrest.
Push the front passenger armrest upward to stow it.

Head Restraint Adjustment

Head Restraint Height Adjustment

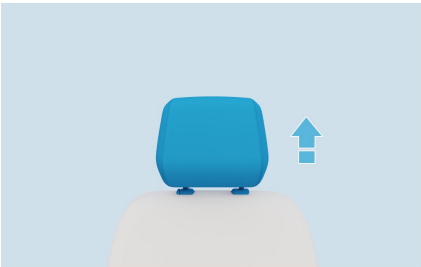

Adjusting Upward: Pull the head restraint upward to the desired position.

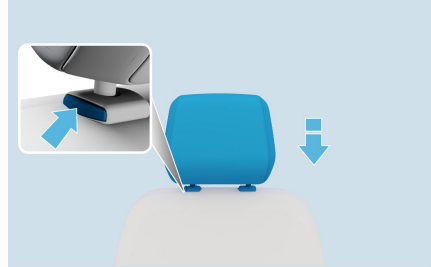


Adjusting Downward: Press and hold the left release button while pushing the head restraint down to the desired position.

caution

After adjustment, move the head restraint up and down to make sure it is locked in place.

Head Restraint Removal

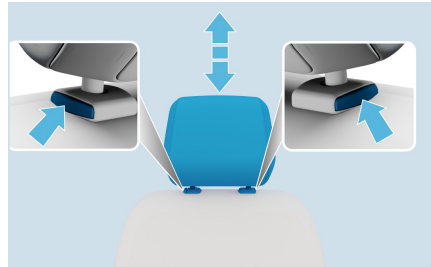

Removing the Head Restraint: To remove a head restraint, first recline the seat backrest slightly, press and hold the buttons on both sides below the head restraint, then pull the head restraint upwards.

Refitting the Head Restraint: Insert the two head restraint guide rods into their original holes. When you hear a "click" or the head restraint can no longer move up or down freely, it is secured. Adjust it to the appropriate height.

Seat Ventilation and Heating (if equipped)

Seat Heating



On the air conditioning screen, tap , cycle through Off-Low-Medium-High-Off to adjust seat heating intensity.

warning

- Avoid using seat heating for extended periods to prevent low-temperature burns.
- Before using seat heating, make sure the seat cushion is dry. A damp cushion may cause seat heating to malfunction and increase the risk of burns.
- When using seat heating, do not cover the seat with cushions, blankets or similar items, as this may damage components or create a safety hazard.

Seat Ventilation



On the air conditioning screen, tap , cycle through Off-Low-Medium-High-Off to adjust seat ventilation intensity.

Easy Entry/Exit (if equipped)

On the infotainment display, go to  → **Vehicle** → **Easy Entry/Exit**, turn Easy Entry/Exit on or off.

When Easy Entry/Exit is enabled:

- When exiting the vehicle: open the driver's door and the driver's seat will automatically move to its rearmost position to facilitate exit.
- After entering the vehicle: close the driver's door. If the system recognises the user account, the driver's seat automatically moves to the driving position saved for that account. If no position is saved or the account is not recognised, the seat returns to the last memorised driving position.

Seat Belts

Seat Belt Overview

warning

Incorrect seat belt use or failure to wear a seat belt may cause serious injury or death. Do not sit in an area without a seat and seat belt or on a seat with a damaged belt. Each seat belt is for one person only; never share a belt between occupants, including children.

All occupants must wear seat belts correctly while the vehicle is moving. Correct seat belt use reduces the risk and severity of injury during emergency braking or an accident.


Fasten the seat belt

warning


- When using a seat belt, make sure it is not loose, twisted or otherwise incorrectly positioned.
- Replace a seat belt if it has been used in a serious accident, shows signs of severe wear, has been cut, or if its pretensioner has deployed.

warning

- Do not make any replacement or modification that could impair seat belt operation.
- When a seat belt is not in use, make sure it does not contact sharp objects.

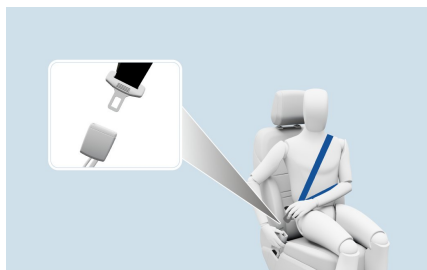

1. Adjust the seat to a suitable position.
2. Pull the seat belt out slowly and insert the tongue into the buckle until it clicks.
3. Position the lap belt as low as possible across the hips and make sure the shoulder belt runs across the shoulder and chest.

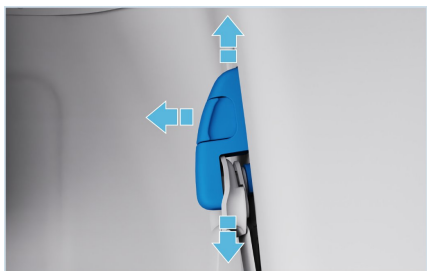

4. Pull the seat belt height adjuster outward, move it up or down to the appropriate height, then release the adjuster.

Seat Belt Use During Pregnancy

caution

A seat belt provides effective protection only when worn correctly.



When a pregnant occupant wears a seat belt, the shoulder belt should pass over the shoulder, across the centre of the chest and to the side of the abdomen. The lap belt should lie flat across the thighs, as low as possible below the abdomen.

Seat Belt Reminder

The seat belt indicator on the instrument pack reminds the driver and front passenger to wear their seat belts correctly.

While the vehicle is moving, if the driver or front passenger is not wearing a seat belt, the indicator lamp  illuminates and a warning tone sounds.

Seat Belt Pretensioning and Load Limiting

The outer front driver and passenger seat belts are equipped with pretensioners and load limiters, while the front passenger centre belt has a load limiter only. In frontal, side or rear impacts, these devices improve occupant protection. Depending on impact severity, the pretensioner tightens the belt rapidly while the load limiter reduces pressure on the occupant's chest.

Airbags

Introduction to the Airbag System

Airbags are passive supplemental restraint devices used together with seat belts. The airbag system is operational only when the vehicle is powered on. If a seat belt is not worn or is

worn incorrectly, the protection provided by the airbags in a collision may be reduced or lost.

Airbag Locations

1. Front Passenger Frontal Airbag
2. Front Passenger Side Airbag
3. Driver Side Airbag
4. Driver Frontal Airbag

Airbag Deployment Conditions

In a frontal or side collision, whether the frontal or side airbags and other safety devices deploy depends on many factors, including the severity, angle and speed of impact and the type of object struck.

warning

- The airbag system can provide protection only once in an accident. If an airbag has deployed, the relevant airbag system components must be replaced.
- Do not drive the vehicle after an airbag has deployed. Contact an Authorised Service Centre immediately to have the airbag system components replaced.
- After any collision, contact an Authorised Service Centre as soon as possible to have the airbags and their installation areas inspected for damage.

Effects of Airbag Deployment

The airbag system operates only when the vehicle is powered on. In a severe collision, the airbags and seat belts work together to protect occupants and reduce the severity and risk of injury.

Caution

If a collision causes the airbags to deploy, the vehicle will automatically shut down the high-voltage system to help ensure safety.


warning

- Do not place any objects in the area of the driver's airbag or the front passenger instrument panel, as they may cause death or serious injury if the airbag deploys.
- Do not place a dashboard mat, anti-glare mat or any other covering on the instrument panel. Such items may interfere with proper airbag deployment and prevent the airbag from providing effective protection, increasing the risk of serious injury or death in an accident.

Driver Frontal Airbag

The driver frontal airbag is installed inside the steering wheel and is marked "AIRBAG" on the airbag cover. When deployment conditions are met in a frontal collision, it inflates between the driver and the interior trim to provide cushioning protection for the driver's chest.

Front Passenger Frontal Airbag

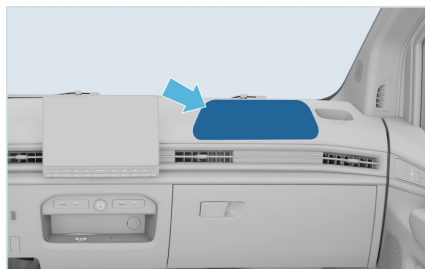

The front passenger frontal airbag is installed inside the passenger side of the instrument panel and is marked "AIRBAG" on the cover. When deployment conditions are met in a frontal collision, it inflates between the passenger and the interior trim to provide cushioning protection for the passenger's chest.

Seat Side Airbags



The side airbags are installed on the outer sides of the driver and front passenger seats and the seats are marked "AIRBAG". When deployed, the side airbags can effectively reduce injuries caused by side impacts.

warning

- Never use seat covers on the seatbacks. Seat covers may interfere with deployment of the seat side airbags, preventing them from providing proper protection and creating a risk of serious injury or death.
- Do not place any objects between the outer side of the seat and the door trim panel, as they may cause injury or death if the airbag deploys.


Anti-theft Alarm System

After the vehicle is locked and enters armed mode, if a door, bonnet or tailgate is opened illegally, the anti-theft system triggers audible and visual alarms to indicate unauthorised entry. After a warning is triggered, it ends when any of the following conditions is met:

- The vehicle is unlocked.
- The warning cycle ends.

Keys

Key Overview

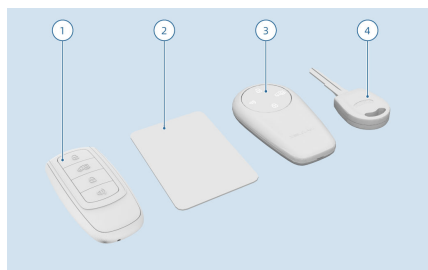

1. RF Key
2. NFC Card Key
3. Remote Key
4. Mechanical Key

NFC Card Key

The NFC card key can be used to unlock, lock and start the vehicle:

- **Unlock:** With the vehicle locked, hold the NFC key card against the NFC sensing area at the front of the driver's exterior rearview mirror to unlock the vehicle.
- **Lock:** With the vehicle unlocked, hold the NFC key card against the NFC sensing area at the front of the driver's exterior rearview mirror to lock the vehicle.

warning


- Do not bend, twist or cut the card key, as this may cause it to stop working.
- Avoid exposing the card key surface to corrosive substances or chemicals.
- Do not place the card key between a phone and the wireless charging pad.
- Do not use similar cards, such as bank cards, transport cards, ID cards or access cards, together with the key card by overlapping or presenting them simultaneously.

Mechanical Key

Unlock or lock the doors as follows:



1. Insert the mechanical key into the exterior door handle lock-cylinder cover and prise the cover open.

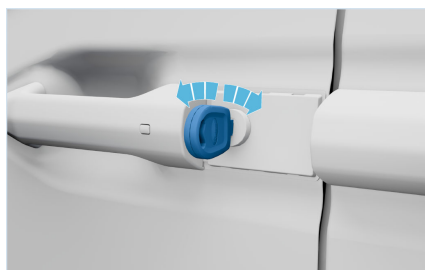


2. Insert the mechanical key. Turn it clockwise to unlock the door and anticlockwise to lock the door.

Caution

The mechanical key is supplied separately. Keep it safe; if it is lost, contact an Authorised Service Centre.


RF Key

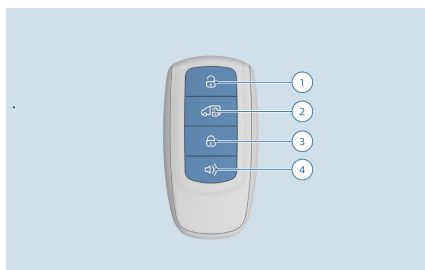

1. **Unlock:** Briefly press the unlock button to unlock the passenger compartment; press and hold for 2.5 s to lower all windows.

2. **Cargo Compartment Unlock:** Briefly press the cargo compartment unlock button to unlock the cargo compartment.
3. **Lock:** Briefly press the lock button to lock the vehicle.
4. **Vehicle Search:** Press the vehicle search button twice; the horn sounds and the hazard warning lamps flash.

Remote Key

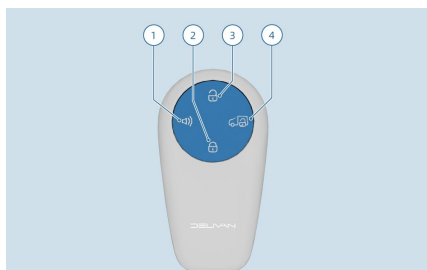

1. **Vehicle Search:** With the vehicle locked, press the vehicle search button twice in succession; the horn sounds and the hazard warning lamps flash.
2. **Lock:** Briefly press the lock button to lock the vehicle.
3. **Unlock:** Briefly press the unlock button to unlock the passenger compartment.
4. **Cargo Door Unlock:** Briefly press the cargo door unlock button to unlock the cargo door.

Remote Key Charging



When the remote key battery is low or completely discharged, the remote key can be **Wireless Charging** to restore basic remote-control functions.

warning

Keep the battery out of the reach of children. If swallowed, it may cause serious injury or death.

Caution

- Wipe the battery surface clean before installation, as fingerprints may affect battery service life.
- If you are uncertain about tasks such as replacing the remote key battery, consult an Authorised Service Centre.

Phone Key (if equipped)

Function Overview

After activating a mobile vehicle key, your phone can replace the NFC key card and remote key for locking/unlocking and starting the vehicle. Vehicle key authorisation also allows sharing vehicle access with family or friends. Supported types include Bluetooth, NFC and UWB mobile keys.

Types of Phone Key

1. Bluetooth Phone Key:

- Mobile app: after activating the mobile Bluetooth key, open the mobile app and enter the control screen to lock/unlock the vehicle, switch the air conditioning on or off, sound the horn and perform other functions.
- Hands-free operation: after activating the mobile Bluetooth key, use the exterior door-handle button to unlock and open the door. If Approach Unlocking and Walk-away Locking are enabled, carrying the phone towards or away from the vehicle automatically unlocks or locks the vehicle.

2. NFC Phone Key:



After activating the mobile phone NFC key, hold the phone against the NFC key sensing area in front of the driver's exterior rearview mirror to lock or unlock the vehicle.

Caution

Phone Key is the collective term for Bluetooth Phone Key, NFC Phone Key and UWB Phone Key.

caution

Enable Approach Unlocking and Walk-away Locking only when it is safe to do so for your normal vehicle-use environment.

Unlocking and Locking

Proximity Auto-unlock


When proximity auto-unlock is enabled, carrying a valid smart key into the vehicle sensing area will automatically unlock the doors.

On the infotainment display, go to  → **Vehicle** → **Controls** → **Proximity Key Unlock**, tap to turn this function on or off.

Caution


- Proximity auto-unlock is available only when a valid UWB phone key is being carried.
- When the vehicle is successfully unlocked, the direction indicators flash.
- If no door, bonnet or tailgate is opened within 30 seconds after unlocking the vehicle, all doors will lock automatically.

Keyless Entry

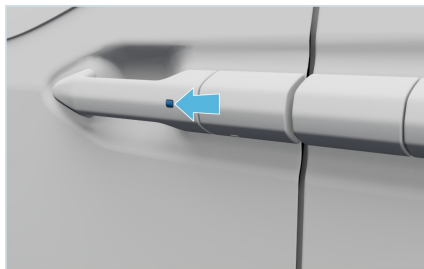

When carrying a valid remote key, lightly press the button on the exterior handle to unlock or lock the driver's door.

Locking/Unlocking with the Central Lock Buttons

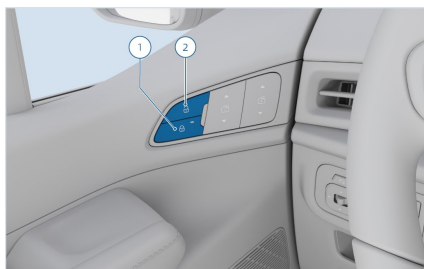

1. **Lock Button:** When the vehicle is unlocked, press the lock button to lock the vehicle. The button indicator illuminates.
2. **Unlock Button:** When the vehicle is locked, press the unlock button to unlock the vehicle. The button indicator illuminates.

Automatic Locking While Driving

When all doors are closed and the vehicle is unlocked, the doors lock automatically when vehicle speed exceeds 15 km/h.

Automatic Unlocking When Parked

When automatic unlocking when parked is enabled, depress the brake pedal and shift from any other gear into P; the vehicle unlocks automatically.

On the infotainment display, go to  → **Vehicle** → **Controls** → **Automatic Unlocking When Parked**, tap to turn this function on or off.

Walk-away Auto-lock

When walk-away auto-lock is enabled:

- After unlocking the vehicle and getting out, if no vehicle operation is performed for 20-30 seconds, the vehicle will lock automatically.
- After unlocking the vehicle and getting out, the vehicle will lock automatically when you move beyond a certain distance from it.

On the infotainment display, go to  → **Vehicle** → **Controls** → **Walk-away Auto-lock**, tap to turn this function on or off.

Caution

When the vehicle is successfully locked, the lamps flash and an audible confirmation sounds.

caution

- To protect your vehicle and personal belongings, make sure the vehicle is locked before leaving it.
- Walk-away auto-lock may be affected by electromagnetic interference around the vehicle. Make sure the vehicle is locked before leaving.

warning

When walk-away auto-lock is enabled, make sure no person (especially a child) or pet is left inside the vehicle before leaving, to avoid an accident.

Superlocking

After the central locking system has locked the vehicle, superlocking can be activated by locking again. Once superlocked, the doors can be opened only after unlocking with the mechanical key or remote key; they cannot be opened from inside or outside by other means. Trigger the

locking command again within 3 seconds to activate superlocking.


caution

Walk-away auto-lock and remote locking only perform normal door locking and do not activate the superlocking function. This helps prevent occupants from being trapped inside the vehicle due to inadvertent operation and improves safety.

Doors

Opening a Door from Outside

Front Doors

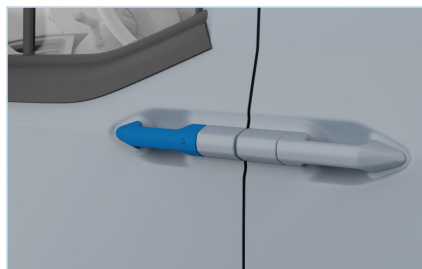

When the vehicle is unlocked, pull the exterior door handle outward to open the door.

Caution

- When the vehicle is locked, approach it while carrying a valid Bluetooth phone key (if equipped) or remote key, press the exterior door unlock button, and pull the handle outward to open the door.
- If the vehicle is involved in a collision and receives a collision signal, all doors will unlock automatically. Pull the exterior door handle to open a door.


caution

- Before moving off, make sure all doors and the bonnet are fully closed.
- Before opening a door from outside, check for other road users around

caution

the vehicle. Open the door only after confirming that it is safe to do so.

Sliding Door

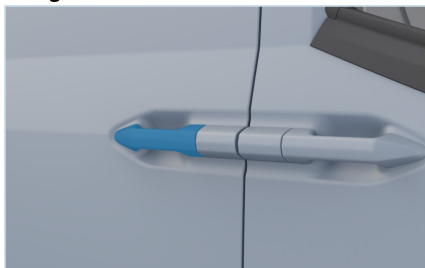

When the vehicle is unlocked, pull the exterior door handle outward to open the sliding door, then slide it rearward to the fully open position until it locks in place.

Caution

- When the vehicle is locked, approach it while carrying a valid Bluetooth phone key (if equipped) or remote key, press the exterior door unlock button, and pull the handle outward to open the door.
- If the vehicle is involved in a collision and receives a collision signal, all doors will unlock automatically. Pull the exterior door handle to open a door.

warning

- Before driving, make sure all sliding doors are fully closed. A sliding door that is not fully closed may open unexpectedly while driving, causing injury or an accident.
- Do not operate a sliding door while the vehicle is moving, as this may cause an accident.
- When closing a sliding door, keep all parts of your body away from the edge of the door to avoid being trapped.

Opening a Door from Inside

Front Doors



Pull the interior door handle to open the door.


caution

- Before moving off, make sure all doors, the bonnet and the tailgate are fully closed.
- Before opening a door from inside, check for other road users around the vehicle. Open the door only after confirming that it is safe to do so.

warning

Do not leave anyone requiring supervision (especially children) or pets unattended in the vehicle, as this may result in accidental injury.

Sliding Door

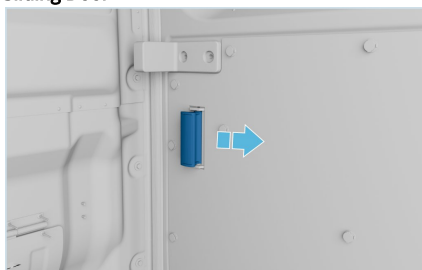


When the vehicle is unlocked, pull the interior handle rearward and slide the door to the fully open position until it locks in place.

⚠ caution

- Before moving off, make sure all doors, the bonnet and the tailgate are fully closed.
- Before opening a door from inside, check for other road users around the vehicle. Open the door only after confirming that it is safe to do so.
- If the sliding door is closed with insufficient force, it may not latch correctly. Open it and close it again.
- If a sliding door is not fully closed, a warning message will be shown on the instrument pack display.

⚠ warning

- When closing a sliding door, keep your hands away from the edge of the door to avoid being trapped.
- When closing a sliding door, supervise young children carefully to avoid trapping injuries.

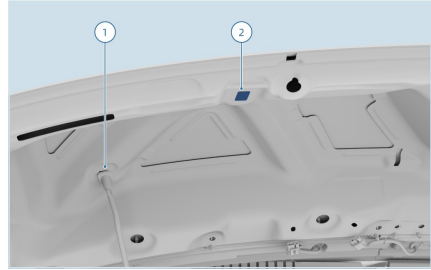


3. Raise the bonnet and place the support rod in position ① or ② to adjust the opening angle.

⚠ warning

Do not drive the vehicle if the bonnet is not fully closed or the safety catch is not fully engaged.

Closing the Bonnet

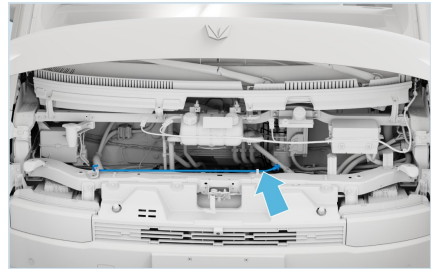


1. Before closing the bonnet, support it with your right hand. With your left hand, remove the support rod from the support slot and secure it in its designated position on the inside of the bonnet. Hold the bonnet with both hands and lower it.
2. When the bonnet is approximately 20-30 cm above the latch position, apply a downward force so that it drops with enough speed to latch securely.
3. After closing the bonnet, try to lift its front edge to make sure it is fully latched. If it is not fully latched, repeat the closing procedure.

Bonnet

Opening the Bonnet

Open the bonnet as follows:

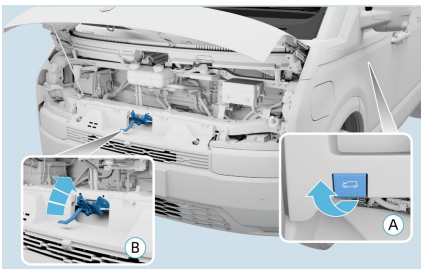

1. From inside the vehicle, pull the bonnet release handle (A).
2. Move the bonnet safety catch release lever in the direction of the arrow (B) to release the bonnet safety catch.

caution

- Take care not to trap your hands when closing the bonnet. Keep your hands away from the bonnet closing area.
- Before opening or closing the bonnet, make sure no person or object is within the movement area of the front storage compartment, otherwise there is a risk of collision or trapping.


Tailgate

Opening the Right Tailgate Door from Outside



When the vehicle is unlocked, pull the handle to open the right tailgate door.

Opening the Right Tailgate Door from Inside

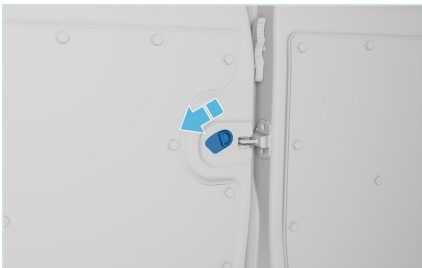

When the vehicle is unlocked, press the switch on the right tailgate door down and to the left to open the right tailgate door.

Opening the Left Tailgate Door

1. First open the right tailgate door from inside or outside the vehicle.



2. Operate the handle on the side of the left tailgate door to open the left tailgate door.

Closing the Tailgate

1. When closing the tailgate, close the left tailgate door first;
2. then close the right tailgate door.

warning


- In strong winds, an open tailgate may swing and cause injury or damage to passing pedestrians, other road users or vehicles.
- In some situations, using the tailgate may reduce the warning effectiveness of the rear combination lamps. When using the tailgate in low-light conditions, use additional warning devices (such as a highly reflective warning triangle or similar device) to alert other vehicles and pedestrians.
- Do not close the left and right tailgate doors at the same time, as this may damage the locking mechanism.

Windows

Power Window Adjustment

The driver can use the window switches on the driver's side to operate both driver and front passenger windows. The front passenger can use

the switch on their side to open or close the corresponding window.

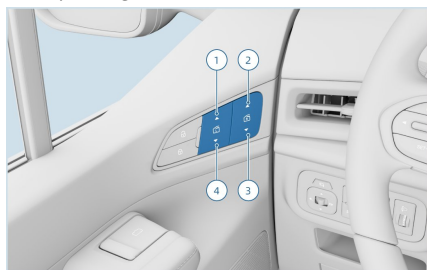

1. Driver's Window Close Button
2. Front Passenger Window Close Button
3. Front Passenger Window Open Button
4. Driver's Window Open Button

Opening or Closing the Windows with the Buttons

- **Partial Opening/Closing:** Press and hold the window switch, then release it when the window reaches the desired position; the window stops moving.
- **One-touch Up/Down:** Briefly press and release the window switch; the window automatically opens or closes fully.

Caution

While a window is moving, operate its switch again in either direction to stop the window.

Automatic Window Closing When Locking

When Automatic Window Closing When Locking is enabled, all windows close automatically after the vehicle is locked from outside.

On the infotainment display, go to **Settings→Vehicle→Controls→Automatic Window Closing When Locking**, tap to turn this function on or off.

Caution

If automatic window closing fails (any window is not fully closed), the turn signal lamps flash and the horn sounds as a reminder.

Window Anti-pinch Function

The vehicle is equipped with an anti-trap window function. If a window encounters an obstacle while closing automatically, anti-trap is triggered and the window lowers a short distance to protect the trapped object.

The window anti-pinch zone extends from 4 mm to 200 mm below the fully closed position.

warning

Do not test the window anti-pinch function with any part of your body or any object.

caution

- Even if the vehicle is equipped with an anti-trap window function, never place any part of your body or any object through a window while it is closing automatically.
- In some situations, such as with thin or soft obstacles, the window anti-pinch function may not be triggered.

Window Thermal Protection

The motor thermal protection function helps prevent damage to the power window motor from improper operation. If the windows are operated frequently, thermal protection may activate and window commands will not be executed. Operation can resume after thermal protection is released.

Window Initialisation

If the anti-trap function is not operating or one-touch window raising/lowering is unavailable, initialise the windows as follows:

1. Press and hold the window-up switch until the power window reaches the fully closed position and stalls for approximately 0.3 seconds. Upper-stop initialisation is then complete.
2. After upper-stop initialisation is complete, lower the power window fully until it stalls for approximately 0.3 seconds. Lower-stop initialisation is then complete.

caution


For lower-stop initialisation, the window raising and lowering processes must be completed continuously. If either process is interrupted, initialisation will fail.

3. After continuously completing one upper-stop initialisation and one lower-stop initialisation, raise the window to the top again to complete travel learning.

Steering Wheel

Steering Wheel Position Adjustment

Adjust the steering wheel to a suitable position as follows:

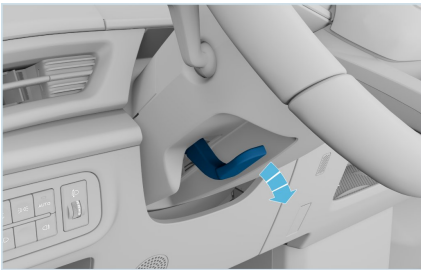


1. Centre the steering wheel and move the steering wheel release lever downward to unlock it.
2. Hold the steering wheel with both hands and adjust it forward, backward, up or down to the desired position.
3. Move the steering wheel release lever upward to lock the steering wheel.

caution

- After locking the steering wheel, move it to make sure the steering column is securely locked.
- Do not adjust the steering wheel while driving, as this may cause an accident.
- Keep at least 25 cm between the driver's chest and the steering wheel to reduce the risk of injury if the airbag deploys.


Steering Wheel Button Controls

Left-hand Steering Wheel Buttons

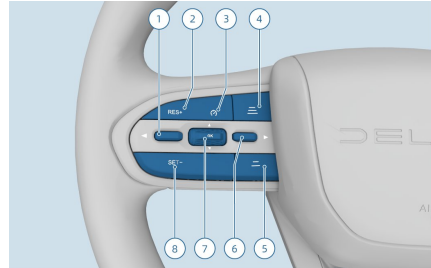

1. Instrument Pack: Scroll Left
2. Adaptive Cruise: Increase Speed
3. Adaptive Cruise Control On/Off
4. Adaptive Cruise: Increase Following Distance
5. Adaptive Cruise: Decrease Following Distance
6. Instrument Pack: Scroll Right
7. OK button: move it up or down to adjust the screen and backlight brightness.
8. Adaptive Cruise: Decrease Speed


Right-hand Steering Wheel Buttons

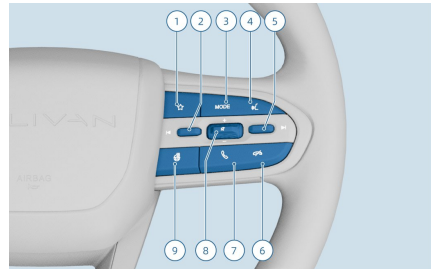

1. Customisable Button
2. Previous Multimedia Track
3. Mode Selection
4. Voice Control
5. Next Multimedia Track
6. End Call
7. Answer Call
8. Volume adjustment/mute: briefly press up or down to adjust the volume; press and hold to adjust continuously. When muted, this cancels mute and adjusts the volume in the selected direction.
9. Heated Steering Wheel (if equipped)

Heated Steering Wheel (if equipped)

Steering wheel heating helps keep your hands warm and comfortable in cold weather, improving driving safety and comfort.

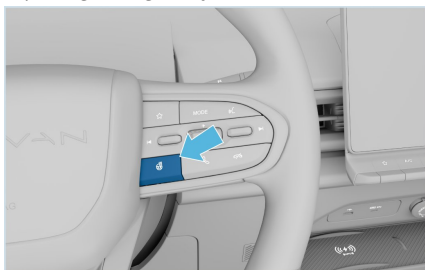

Press the heated steering wheel switch on the steering wheel to turn heating on or off.

Exterior Rearview Mirrors


Exterior Rearview Mirror Adjustment

Exterior rearview mirrors are essential to driving safety. Adjust their angles to obtain a clear view of traffic to the sides and rear of the vehicle and better understand the surroundings.

Adjustment:



1. Move the exterior rearview mirror selector left or right to select the left or right mirror.

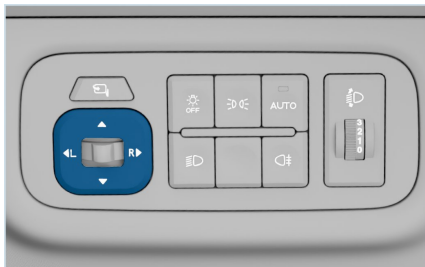

2. Press the up/down/left/right adjustment buttons to move the mirror to the desired position.



3. After adjusting the exterior rearview mirrors, return the mirror selector to the centre position.

warning

- Do not drive the vehicle unless the exterior rearview mirrors have been adjusted to the correct position.
- Do not adjust the exterior rearview mirrors while driving, as this may cause an accident.

caution


- Do not lean on or press the exterior rearview mirrors by hand, as this may damage them and cause a malfunction.
- Do not hang or place heavy objects on the exterior rearview mirrors, as this may damage them and cause a malfunction.

Folding the Exterior Rearview Mirrors



Vehicle Controls

When parking in a narrow space or driving on a narrow road, fold the exterior rearview mirrors to help prevent them from being scraped or damaged by other vehicles or obstacles.

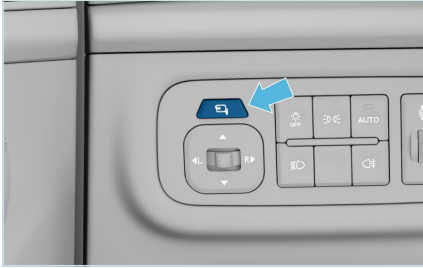

Press the power-folding mirror button to fold or unfold both exterior rearview mirrors.

warning

Never drive with the exterior rearview mirrors folded. This reduces rearward visibility and may result in an accident.

Automatic Mirror Folding When Locking

When you lock the vehicle, the exterior rearview mirrors fold automatically. When you unlock the vehicle, they unfold automatically.

caution

- Do not manually force or fold the exterior rearview mirrors, as this may damage the mirrors and their motors.
- Before folding or unfolding the exterior rearview mirrors, make sure there are no obstacles around them to prevent scratching or damage.
- Due to field-of-view requirements, the folding angles of the left and right exterior rearview mirrors are different. They may therefore fold at different times during automatic folding; this is normal.

Exterior Rearview Mirror Heating


Exterior rearview mirror heating can quickly remove frost, mist and water from the mirror

surfaces to improve rearward visibility and driving safety.

On the infotainment display, go to **Vehicle Controls and Settings** → **Vehicle** → **Controls** → **Rearview Mirror Heating**, tap to turn this function on or off.

Interior Rearview Mirror (if equipped)

Manually Adjusting the Interior Rearview Mirror

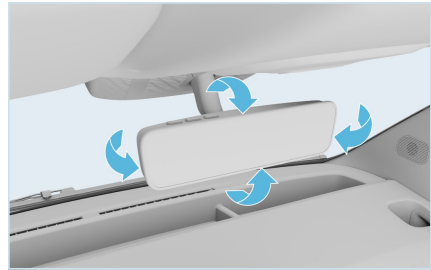

After adjusting the driver's seat to a suitable position, manually adjust the interior rearview mirror so the driver can clearly observe traffic behind the vehicle.

The interior rearview mirror must be adjusted manually up, down, left and right.

warning

- Do not adjust the interior rearview mirror while driving.
- Do not install any items around the interior rearview mirror, as they may obstruct the driver's view of the road.


Conventional Interior Rearview Mirror (if equipped)



Move the interior rearview mirror tab to adjust the anti-glare setting.

Streaming Interior Rearview Mirror (if equipped)

After the vehicle is powered on, the streaming rearview mirror switches on automatically and displays a live image of the area behind the vehicle.

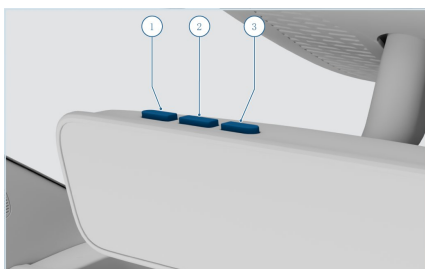

1. Function Button
2. Decrease Button
3. Increase Button

Brightness Adjustment:

Press the function button to select brightness adjustment mode, then use the increase/decrease buttons to adjust streaming rearview mirror brightness through 15 levels.

Angle Adjustment:

Press the function button to select angle adjustment mode, then use the increase/decrease buttons to adjust the streaming rearview mirror vertically through 7 levels.

Field-of-view Adjustment:

Press the function button to select field-of-view adjustment mode, then use the increase/decrease buttons to zoom the streaming rearview mirror view through 3 levels.

Conventional Mirror Mode:

Press and hold the function button to switch off the streaming rearview mirror. The mirror then operates as a conventional mirror. Press and hold the function button again to reactivate streaming mode.

Exterior Lighting

Dipped-beam Headlamps



Press the dipped-beam button on the lighting control panel to switch on the dipped-beam headlamps.


Headlamp Levelling



Set the headlamp level according to the vehicle load.

Move the control up or down to set the headlamp level to 0, 1, 2 or 3.

Main-beam Headlamps

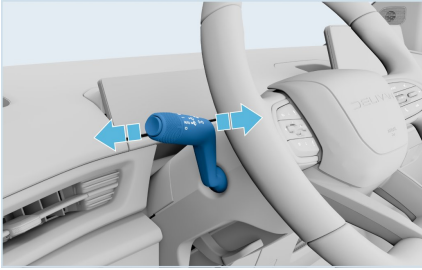

Switching On Main Beam: With dipped beam on, push the left steering-column stalk forward to switch on main beam.

Switching Off Main Beam: With main beam on, pull the left steering-column stalk rearward to switch it off.

Main-beam Flash: Pull the left steering-column stalk fully rearward and release it; the main-beam headlamps flash once.

warning

Do not attach or place decorations on the lighting control stalk, as this may affect driving safety.

caution

When meeting oncoming traffic at night, switch to dipped-beam headlamps.

Automatic Headlamps


When Automatic Headlamps is enabled, the vehicle switches the dipped-beam headlamps on/off according to ambient light.



Press the Auto Headlamp button to turn the automatic headlamp function on or off. When enabled, the indicator on the Auto Headlamp button illuminates.

Position Lamps

Position lamps indicate the vehicle's position and presence, allowing other road users to see the vehicle at night or in low-visibility conditions and helping reduce the risk of accidents.

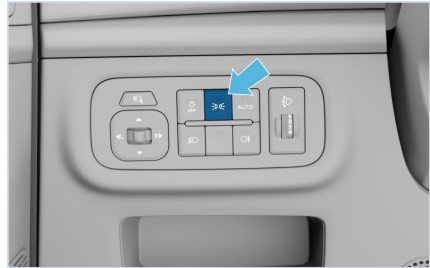


Press the position lamp button to turn the position lamps on/off. When enabled, the button indicator illuminates.

caution

When visibility is poor, switch on the position lamps to make the vehicle more visible to other road users.

Direction Indicators

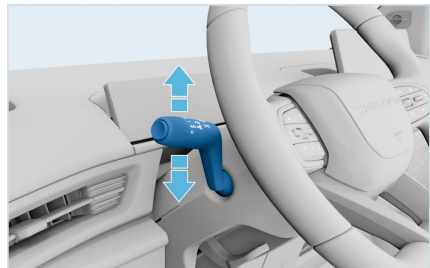

Left Direction Indicator

- Move the left steering-column stalk downward to the first position; the left direction indicator flashes three times and then switches off automatically.

- Move the left steering-column stalk downward to the second position; the left direction indicator flashes continuously.

Right Direction Indicator

- Move the left steering-column stalk upward to the first position; the right direction indicator flashes three times and then switches off automatically.
- Move the left steering-column stalk upward to the second position; the right direction indicator flashes continuously.

Follow-me-home Lighting

When Follow Me Home is enabled, after you leave the vehicle and close the doors, the dipped-beam headlamps and position lamps remain on for a period to illuminate the road ahead.

On the infotainment display, go to **Settings→Exterior Lighting→Follow-me-home Lighting**, tap to turn this function on or off.


Hazard Warning Lamps

In emergencies such as severe haze, snow, heavy rain or sandstorms, or if the vehicle has a fault and cannot be driven normally, switch on the hazard warning lamps to alert other road users.



Press the hazard warning lamp switch to turn on the hazard warning lamps. The turn indicators in the instrument pack and all vehicle turn signal lamps flash. Press the switch again to turn them off.

Reading Lamp

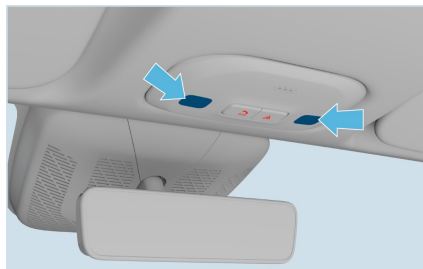

When the interior is dark, the interior reading lamps provide suitable illumination for occupants without interfering with normal driving.


Touch the reading lamp to turn it on or off.

Automatic Reading Lamp

On the infotainment display, go to **Settings→Exterior Lighting→Automatic Reading Lamp**, tap to turn this function on or off.

When Automatic Reading Lamp is enabled, the reading lamps illuminate when a door is opened.


Front Door Step Lamp

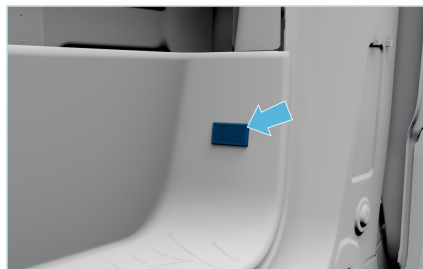

The front door step lamp is located as shown.

The front door step lamp illuminates automatically when the door is opened and switches off when the door is closed.

Rear Dome Lamp

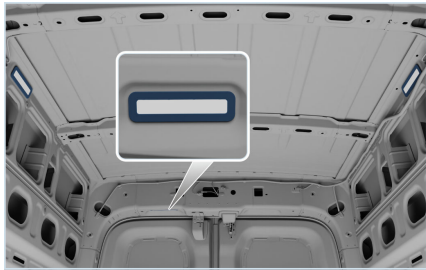

When the vehicle is unlocked, the rear dome lamp illuminates when either sliding door is opened.

On the infotainment display, go to **Settings→Exterior Lighting→Rear Dome Lamp**, tap to turn the rear dome lamp on/off.

Intelligent Welcome Lighting


When Smart Welcome Lighting is enabled, unlocking or locking the vehicle illuminates the exterior lamps and interior ambient lighting to provide a welcome or farewell lighting effect.

On the infotainment display, go to **Settings→Exterior Lighting→Intelligent Welcome Lighting**, tap to turn Intelligent Welcome Lighting on/off.

Wipers


The windscreen wipers remove rainwater and dirt from the windscreen, keeping it clear, improving driver visibility and enhancing driving safety.

Mist Wipe Mode

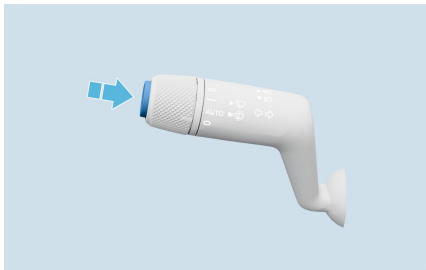

Briefly move and release the wiper stalk (mist wipe); the front wipers perform one wipe cycle.

Wash Mode

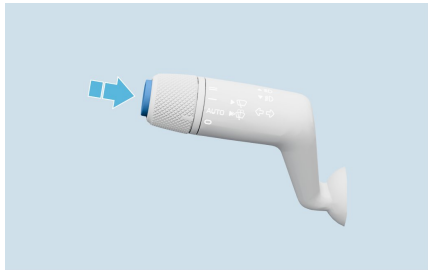

Press and hold the end of the wiper stalk to spray washer fluid while the front wipers operate. When the switch is released, spraying stops and the wipers continue wiping briefly.

Add washer fluid regularly. See [“Adding Windscreen Washer Fluid”](#).


Caution

If a washer nozzle is blocked, use a suitable tool to clear the obstruction.

caution

- Do not operate the windscreen washer when the reservoir is empty, as this may damage the washer pump.
- Before winter, replace the windscreen washer fluid with one suitable for winter temperatures to prevent freezing.

Automatic Wipers

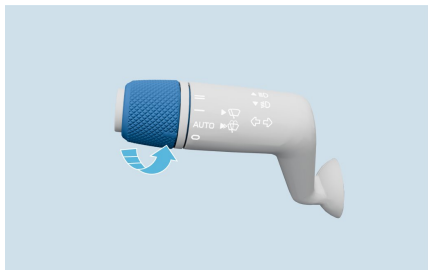


Turn the front wiper switch to AUTO to enable automatic wiping. When the rain sensor detects rain, the system operates the front wipers and adjusts wiping speed according to the selected sensitivity.

Wiper Sensitivity Settings

On the infotainment display, go to **Vehicle→Controls→Automatic Wiper Sensitivity**, set automatic wiper sensitivity; four levels are available.


Manual Wiper

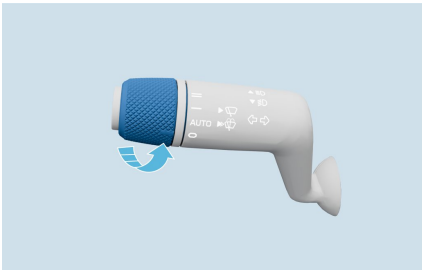

Rotate the front wiper switch to turn the front wipers on or off.

- =: Front wipers operate continuously at high speed.
- -: Front wipers operate continuously at low speed.
- AUTO: Enables the automatic wiper function.
- 0: Front wipers off.

Cargo Compartment Tie-down Points

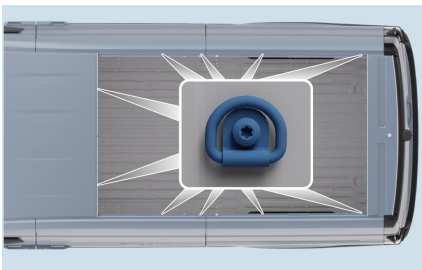


The front of the cargo compartment has two tie-down points, with four on each side.

Cabin Storage

The passenger compartment provides convenient storage spaces for everyday items.

Instrument Panel Storage

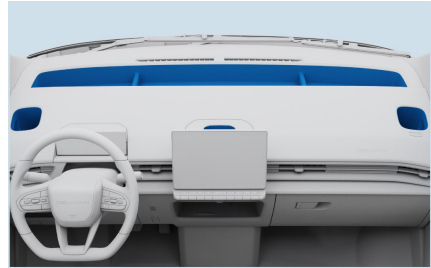


Several storage areas are provided on top of the instrument panel. Store only items that will not affect driving safety.

Door Storage Compartment



The handle storage compartment is located in the front door armrest.

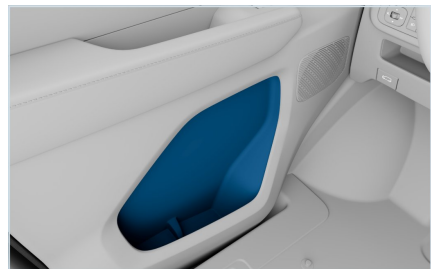


The front door storage compartment is located at the bottom of the front door.

caution

Do not leave lighters or other flammable or explosive items in the vehicle, as high temperatures may cause them to explode or catch fire and damage the vehicle.

Front Door Trim Storage Compartment

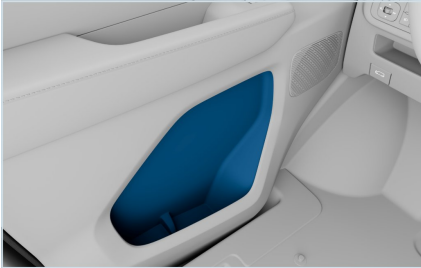

A storage compartment is provided at the bottom of each front door for storing items.

warning


1. Do not place small or sharp objects in the front door storage compartments. They may fall out on bumpy roads and become lodged around the pedals, affecting driving safety.
2. Take care when placing or removing items from the door storage compartment to avoid accidentally pulling the emergency door release handle and opening the door.

Left-side Storage Compartment



A storage compartment is located at the lower left of the driver's steering wheel. It can be used to store small items such as a driving licence, vehicle registration document or bank card.

Front Passenger Armrest Storage Compartment and Cup Holders (if equipped)

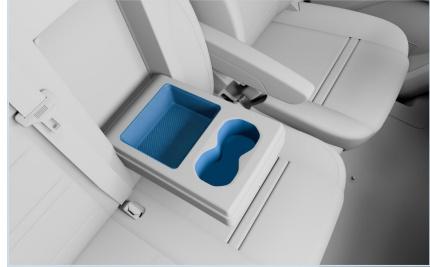

The armrest provides two cup holders and one storage compartment.

Under-seat Storage Compartment (if equipped)

The under-seat storage compartment is located beneath the front passenger seat. Open it as follows.

Opening the Under-seat Storage Compartment



1. Pull the seat cushion release strap while lifting the front of the seat cushion.



2. Move the seat cushion forward slightly, then fold the rear of the seat cushion to open the under-seat storage compartment.


Closing the Under-seat Storage Compartment
To close the under-seat storage compartment, reverse the opening procedure.

caution

Do not sit on the seat if the under-seat storage compartment is not fully closed, as this may damage the vehicle.

Do not open the under-seat storage compartment while the vehicle is moving.


Glove Box (if equipped)

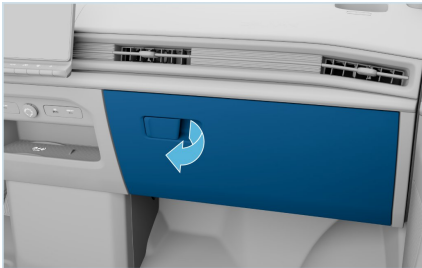

Open: Pull the glove box handle to open the glove box.

Close: Push the glove box lid until it is fully closed.

Coat Hook (if equipped)

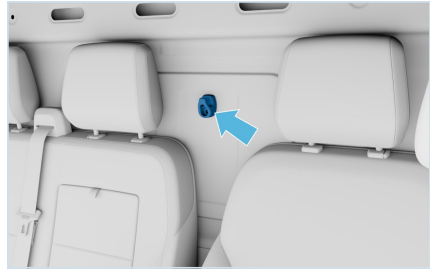

Coat hooks are provided on the cargo compartment partition behind the seats for occupant use.

caution

Do not hang heavy objects on the coat hooks, as this may damage them.

Cargo Compartment Monitoring

Monitors cargo status to reduce transport losses. On the infotainment display, tap  →  Enter the Cargo Compartment Monitoring screen. Cargo Compartment Monitoring provides abnormality detection, live preview and access to historical records.

Preparations and Checks

For driving safety, follow the specified driving requirements whenever you use the vehicle.

Pre-driving Checks

Before each journey, it is recommended that you check the following:

- Check that all vehicle lamps operate correctly.
- Check the area around the vehicle for obstacles.
- Check underneath the vehicle for fluid leaks (excluding air conditioning condensate).
- Check that the tyre pressures are correct.
- Check that the remaining driving range is sufficient for the journey.
- Check that visibility through all windows and exterior rearview mirrors is good.
- Check the instrument pack for warning messages.
- Check the pedal area for obstructions.
- Check that the wiper system operates correctly.
- Check that the seats and seat belts operate correctly.

Driving in Rain

Visibility may be reduced when driving in rain. Observe the following precautions:

- Make sure the wiper function and wiper blades operate correctly.
- Make sure the vehicle lighting system is operating normally.
- Make sure the tyre pressures are correct.
- Make sure the vehicle braking system is operating normally.
- If necessary, switch on the rear fog lamp to alert road users behind.

Driving Through Water

When driving through water, observe the following precautions to avoid vehicle damage or functional faults:

- Before driving through water, slow down or stop to check the water depth. The water must not be above the lower edge of the vehicle body. If the depth or road conditions

are unknown, take another route and do not force the vehicle through.

- When driving through water, do not stop; maintain a low speed.
- After driving through water, gently apply the brakes to remove water and restore braking performance. Avoid emergency braking unless necessary.
- Drive slowly through water and do not stop in the water, as this may damage the vehicle.
- After driving through water, perform the following checks as soon as it is safe to do so:
 - Lightly depress the brake pedal. Heat generated by friction will dry the brake pads. Check that the brakes operate normally.
 - Check that the horn operates correctly.
 - Turn the steering wheel to check that power steering operates correctly.
 - Check that the exterior lamps operate correctly.

Driving in Cold Weather

For travel in cold weather, carry out the following preparations and checks:

- While driving, use windscreen defrosting (and mirror heating) as necessary.
- If driving on icy, snowy or rain-slick roads, fit snow chains as required.
- When driving on icy or snow-covered roads, reduce speed and drive carefully. Avoid hard braking, rapid acceleration and sudden steering, as these may cause loss of control and an accident.
- When driving in winter conditions, fit winter tyres to all four wheels. All four winter tyres must have the same diameter, brand, construction and tread pattern.
- On icy or snow-covered roads or in low-temperature rain or snow, park the vehicle on a gentle section of road and select P. Use wheel chocks if necessary.
- Use fluids suitable for winter temperatures (coolant and windscreen washer fluid).

Long-distance Driving

Before a long journey, observe the following precautions:

- For your safety, check the vehicle condition before setting off on a long journey.
- Plan the route in advance and make sure the vehicle has sufficient driving range.
- Obey traffic regulations, take regular breaks and never drive while distracted.

Driving at Night

Visibility is reduced at night. Observe the following precautions when driving at night:

- Never drive while fatigued.
- Before driving, check that the horn and vehicle lighting system operate correctly.
- Pay attention to road conditions within the illuminated area.
- Use the dipped-beam and main-beam headlamps correctly.
- Do not look directly at the headlamps of oncoming vehicles.
- To avoid a collision with the vehicle ahead due to delayed reaction in an emergency, increase the following distance appropriately.
- Avoid overtaking at night where possible. If overtaking is necessary, do so only after confirming that the surrounding and road conditions permit it.
- If visibility is impaired, drive carefully at low speed, observe the surrounding and road conditions, and be ready to brake at any time in an emergency.


Starting the Vehicle

The vehicle is equipped with a keyless entry system. You only need to carry a valid key with you to enter and start the vehicle.

1. After unlocking the vehicle, enter the vehicle while carrying the key.
2. Depress the brake pedal. The vehicle enters READY mode and the "READY" indicator on the instrument pack illuminates, indicating that the power system is ready and the vehicle can be shifted and driven.

Gear Shifting

The vehicle uses a column-mounted selector with four positions: Park (P), Reverse (R), Neutral (N) and Drive (D).

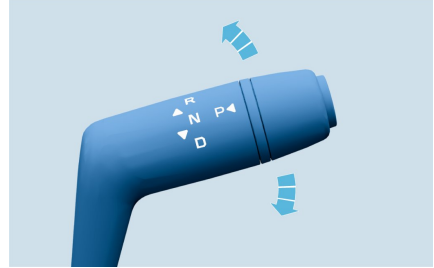

Reverse (R)

When reversing is required, shift to R. The gear display area in the instrument pack shows R to indicate that the gear has been selected successfully.

Depress the brake pedal and move the gear selector fully upward to shift into R; the reversing lamps illuminate.

Neutral (N)

For a temporary stop, shift to N. The gear display area in the instrument pack shows N to indicate that the gear has been selected successfully.


- When in D, move the gear selector up one position and hold it to shift into N.
- When in R, move the gear selector down one position and hold it to shift into N.
- With the vehicle in P, depress the brake pedal, push the selector lever up or down by one position and hold it to shift to N.

Drive (D)

When driving forward is required, shift to D. The gear display area in the instrument pack shows D to indicate that the gear has been selected successfully.

Depress the brake pedal and move the gear selector fully downward to shift into D.

Park (P)

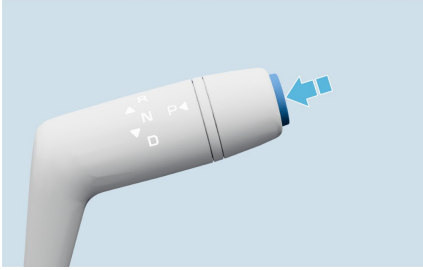

When the vehicle is stationary, press the P button fully to shift into Park. Depress the brake pedal and move the gear selector up or down to select another gear.

caution

- The vehicle must be stationary before shifting into P or R.
- Before powering off the vehicle, make sure it is in P and the electronic parking brake is applied.
- If switching conditions are not met, the instrument pack displays a message. Follow the displayed instructions.
- Do not coast in N while driving, as this may damage the vehicle or create a hazardous situation.

Powering Off the Vehicle

When all doors, including the bonnet and tailgate, are closed and the vehicle is locked from outside, the vehicle powers off automatically.

Infotainment Display Power-off

On the infotainment display, go to  → **System** → **Power Management**, tap “Enable” to power off the vehicle.

Emergency Power-off

If an emergency requires rapid high-voltage shutdown, press and hold the hazard warning lamp switch for more than 5 seconds. The vehicle will perform an automatic emergency power-down.

Vehicle Power-on Retention Mode

Enable Vehicle Power-on Retention Mode to keep the vehicle powered and maintain the cabin environment during a brief absence.

On the infotainment display, go to  → **System** → **Power Management**, tap the button to turn Vehicle Power-on Retention Mode on/off.

warning

Never leave children, infants or pets unattended in the vehicle.

caution

- Make sure you have the key with you before leaving the vehicle.
- This function continuously consumes battery power.

Driving Settings

Drive modes change vehicle operating characteristics to provide different driving experiences. Select the appropriate drive mode according to current driving conditions.

Drive Mode Settings

On the infotainment display, go to  → **Driving** → **Drive Mode**, switch the drive mode.

- Eco Mode: Slower power response to help extend driving range.
- Comfort Mode: Smooth power response.
- Sport Mode: Faster power response.
- Personalised Mode: Adjust individual drive mode parameters to suit your requirements.

Energy Recovery

When the vehicle brakes or coasts, the regenerative braking system converts kinetic energy into electrical energy and stores it in the traction battery, helping extend driving range.

Energy Recovery Mode

On the infotainment display, go to  → **Driving** → **Energy Recovery Level**, set the energy recovery level.

- Off: Energy recovery is disabled.
- Weak: Low energy recovery during coasting, with little deceleration.
- Strong: High energy recovery during coasting, with noticeable deceleration.

caution

Regenerative braking intensity may affect ride comfort. Excessive regenerative braking may cause discomfort, so select an appropriate level.

warning

- Energy recovery may be limited when ambient temperature is extremely high or low.
- Energy recovery may be limited when traction battery state of charge is high and will recover as the charge level decreases.

Maximum Energy Efficiency

When the vehicle state of charge is low, you can enable Maximum Energy Efficiency mode. The system then switches off or disables certain functions to reduce energy consumption and increase driving range.

On the infotainment display, go to  → **Driving** → **Maximum Energy Efficiency**, tap to turn this function on or off.

One-pedal Mode

The vehicle is equipped with One-Pedal Mode. When it is enabled, releasing the accelerator pedal automatically decelerates the vehicle until it comes to a stop.

On the infotainment display, go to  → **Driving** → **One-pedal Mode**, tap to turn this function on or off.

caution

- The deceleration provided by One-pedal Mode varies with battery condition, vehicle speed, road conditions and other factors. Do not rely solely on this mode for braking.
- When the vehicle comes to a stop, the braking system automatically holds the vehicle stationary. Press the accelerator pedal to release the hold and continue driving.
- In an emergency, use the brake pedal to brake the vehicle.

Braking and Vehicle Stability Systems

The vehicle is equipped with service braking and parking braking systems, integrated with ABS, TCS and VDC to provide multiple layers of driving safety support.

Service Brake System

The service brake is hydraulic and acts on all wheels to slow and stop the vehicle while driving. Depress the brake pedal to brake, maintaining appropriate pedal travel and force. The service brake is the vehicle's primary braking system and should be used correctly in daily driving.

Electronic Parking Brake System

Electronic Parking Brake System

When the vehicle is switched off and parked for an extended period, the hydraulic braking system applies braking force to the rear wheels to provide static parking braking.

On the infotainment display, go to  → **Drive Mode** → **Electronic Parking Brake System**, tap to turn this function on or off.

Auto Hold

After the vehicle comes to a complete stop, the hydraulic braking system automatically maintains brake pressure so the vehicle remains stationary without the driver continuously depressing the brake pedal. When starting,

depressing the accelerator gradually releases brake pressure for a smooth take-off.

On the infotainment display, go to  → **Drive Mode** → **Auto Hold**, tap to turn this function on or off.

Comfort Stop

During braking on a level road, the system continuously monitors vehicle speed, deceleration and brake pressure. As the vehicle approaches a stop, it moderates brake pressure while meeting the driver's braking demand, providing a smoother stop and reducing pitch/judder for improved braking comfort.

On the infotainment display, go to  → **Drive Mode** → **Comfort Stop**, tap to turn this function on or off.

Vehicle Stability System

The Vehicle Stability System is an active safety assistance system integrating functions such as ABS and TCS. It continuously monitors vehicle speed, steering angle, body attitude and wheel status to improve stability and reduce skidding, fishtailing and loss-of-control risks. During high-speed cornering, emergency lane changes, slippery-road driving or heavy-load operation, if understeer, oversteer or another unstable tendency is detected, the system automatically adjusts drive power and independently brakes appropriate wheels to correct the vehicle path and maintain stability, improving safety in complex conditions.

Caution

- Vehicle Stability Control is a driver assistance function only and cannot overcome the physical limits of the road surface or prevent accidents caused by speeding, overloading, aggressive driving or dangerous operation.
- If the stability system indicator remains illuminated while driving, the system has a fault and stability control, traction control and brake assist functions may be unavailable. Drive at low speed and have

Caution

the vehicle inspected at an Authorised Service Centre as soon as possible.

- Do not modify the chassis, tyres or braking system without authorisation. Doing so may cause the vehicle stability system to malfunction or become inoperative.
- When driving with a heavy load or on rainy, icy or snowy roads, reduce speed and steer and brake smoothly, allowing the stability systems to assist safe driving.

Anti-lock Braking System (ABS)

During high-speed emergency braking, ABS automatically adjusts braking force at each wheel to prevent wheel lock and retain steering control for obstacle avoidance. When ABS operates, the brake pedal may vibrate and a slight operating noise may be heard; this is normal. Keep the pedal firmly depressed. ABS does not operate at very low speeds.

Traction Control System (TCS)

When starting, accelerating or driving on icy, snowy, muddy or slippery roads, TCS can reduce drive-wheel spin, optimise power delivery, improve stability and reduce abnormal tyre wear.


Vehicle Dynamic Control (VDC)

VDC continuously monitors vehicle motion. If a loss-of-control tendency such as skidding or fishtailing occurs during cornering or an emergency lane change, the system adjusts power output and individually controls wheel braking force to correct the vehicle path and reduce driving risk.

Caution

The electronic safety systems described above are only assistance functions and cannot overcome the physical limits of the road surface. Do not speed, overload the vehicle or drive aggressively.

Driver Monitoring System (DMS)

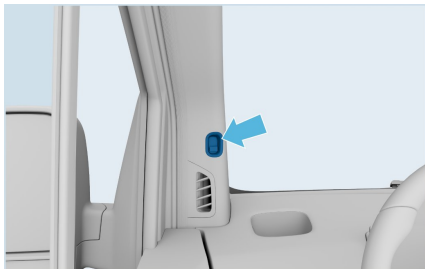

The Driver Monitoring System uses a camera on the inside of the vehicle A-pillar to monitor driver status, including fatigue, distraction and mobile phone use.

Caution

Do not obstruct the camera area, apply stickers to it or cover it with modifications. Do not remove or modify camera hardware yourself, otherwise the system will become inoperative.

Turn the DMS function on or off

On the infotainment display, go to  → **Driver Assistance** → **Driver Monitoring**. Driver fatigue and driver distraction reminders can be turned on or off.

Driver Fatigue Alert: when the DMS camera detects fatigued driving, such as drowsiness or prolonged continuous driving, the system provides safety alerts through audible warnings and the instrument display.

Driver Distraction Alert: when the DMS camera detects distracted driving, such as failing to watch the road for an extended period or using a mobile phone, the system provides safety alerts through audible warnings and the instrument display.

System Unavailable

The Driver Monitoring System may not operate under the following conditions, including but not limited to:

- When affected by strong light such as direct sunlight, backlighting or vehicle lamps.
- At night or in low-light conditions.
- When entering or leaving tunnels or in other situations with sudden changes in lighting.
- The eyes or face are obscured, including but not limited to by low-transmittance sunglasses or spectacle frames.
- Accessories that alter head or facial features, such as hats, scarves, masks, head coverings or face coverings.
- Small eyes, long eyelashes, false eyelashes, cosmetic contact lenses or contact lenses may cause false system warnings.
- The driver's camera is obstructed or faulty.
- The driver's head is outside the camera field of view.
- The driver's face is outside the camera field of view due to seat adjustment, seating posture or similar reasons.

Caution

Do not ignore fatigue or distraction warnings from the Driver Monitoring System. If such a warning appears, adjust your driving behaviour promptly or stop safely to rest as soon as possible. Many factors can interfere with DMS, so remain focused, monitor traffic, road and vehicle conditions, and drive safely at all times.

Intelligent Scenario Assistance System

The vehicle provides Scenario Modes that can coordinate seats, air conditioning, windows, ambient lighting, infotainment audio/video, exterior rearview mirrors and other cabin equipment with one action. This avoids step-by-step adjustment, supports driving, parking, rest and entertainment scenarios, and also allows custom personal scenarios for greater comfort and convenience.

Car Wash Mode

On the infotainment display, go to  → **Scenario Mode** → **Car Wash Mode** Enter Car Wash Mode.

When preparing to wash the vehicle, enable Car Wash Mode. The vehicle automatically checks component closure status and performs actions such as closing windows, disabling automatic wipers and Walk-away Locking, and folding exterior rearview mirrors to reduce the risk of water ingress during washing.

Towing Mode

On the infotainment display, go to  → **Scenario Mode** → **Towing Mode** Turn this function on or off. The following conditions must all be met to switch Towing Mode:

- Vehicle speed ≤ 3 km/h
- The gear position is P or N
- Vehicle power is in ON mode
- Electronic Parking Brake (EPB) is available
- Charging connector not connected
- Depress the brake pedal

When the operating conditions are not met, the Towing Mode button is greyed out and unavailable.

Rest Mode

On the infotainment display, go to  → **Scenario Mode** → **Rest Mode** Enter Rest Mode.

In Rest Mode, four rest durations are available: 15 minutes, 30 minutes, 45 minutes and a custom duration. The custom duration can be set up to 2 hours.

When Rest Mode is entered, the vehicle automatically closes windows, locks doors, switches off lamps and the instrument pack (if equipped), and pauses media playback. Air conditioning changes to Rest Mode and the seat moves to a comfortable position. The seat position can be set manually and memorised for the next use.

Rest Mode will automatically exit in the following situations:

- Tap “Exit Rest Mode” on the screen.

- When the vehicle is powered off or traction battery state of charge falls below 20%.
- The vehicle is in a gear other than P.
- Walk-away locking.
- Depress the brake pedal.

Lending Mode

On the infotainment display, go to  → **Scenario Mode** → **Lending Mode** Enter Lending Mode.

Lending Mode is intended for temporary vehicle lending and can restrict certain vehicle functions. Loan Mode can be entered only when a user account is signed in, P is selected and the PIN is entered. Once Loan Mode is active, speed limits, function access restrictions and other controls apply, and signing out of the personal account is not supported.

Custom Mode

On the infotainment display, go to  → **Scenario Mode** → **Custom Mode** Enter Custom Mode.

After signing in to a personal account, you can create custom scenarios, with up to 10 scenario tasks. Each task can combine functions to coordinate doors/windows, air conditioning, seats, navigation and other devices.

Conditions Where Use Is Prohibited

1. Large seat-back recline adjustments are disabled while driving to prevent interference with driver control in sudden road situations.
2. When the vehicle state of charge is low ($\leq 20\%$), the system restricts high-power scenarios to prioritise power for vehicle starting.
3. After any scenario is activated, you can use a voice command or tap “Exit Scenario” on the screen at any time.
4. Some base-specification models do not support certain scenario functions. Available functions depend on vehicle specification.

i Caution

All intelligent scenarios are fully available only when the vehicle is stationary and in Park (P).

Acoustic Vehicle Alerting System (AVAS)

Because the vehicle is relatively quiet at low speed, nearby pedestrians may not notice it approaching. To improve safety, the Acoustic Vehicle Alerting System emits a warning sound below 20 km/h to alert pedestrians.

! caution


- The low-speed pedestrian warning sound is enabled by default and cannot be turned off.
- A warning sound is emitted continuously whenever the vehicle reverses at any speed, and the reversing sound is clearly different from the forward-driving sound.
- When the vehicle is completely stationary, the low-speed pedestrian warning sound is not emitted.

Multi-collision Brake System


Secondary Collision Mitigation is designed to bring the vehicle to a stop as soon as possible after an initial collision and keep it stationary where possible, reducing unexpected movement and further injury from a secondary collision.

After a collision is detected, the vehicle braking system actively applies a certain amount of braking force to bring the vehicle to a stop as soon as possible.


Sun Visor

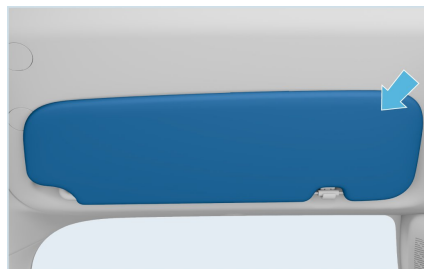

The sun visor can be used to block sunlight while driving.

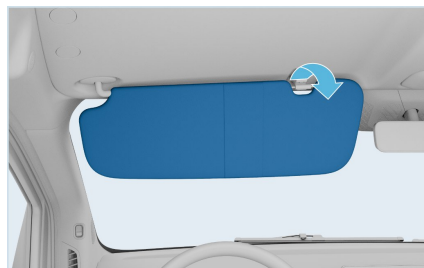

To block light from the front, fold down the main sun visor.

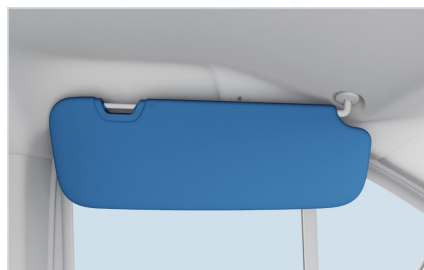


To block light from the side, remove the main sun visor from its retaining clip and rotate it towards the side window.

! caution

- Do not place thick or heavy objects on the sun visor, as this may interfere with its operation.
- Install it outside the driver's primary field of view to ensure driving safety.

Sun Visor Ticket Holder

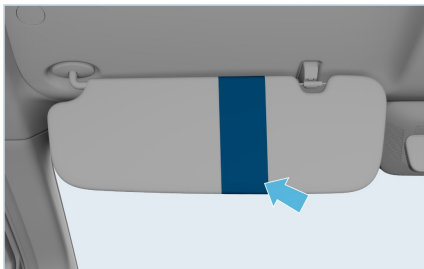

The ticket holder is located on the inner side of the sun visor and can be used to hold parking tickets and similar items.

Remote Control

Some vehicle functions can be controlled remotely. Log in to your account in the app and bind the vehicle to use remote control functions for greater convenience.

You can use the following controls for the bound vehicle:

Comfort Controls:

- Remotely switch the air conditioning on/off and set the temperature.
- Switch One-touch Demist/Defrost on/off.
- Switch steering wheel heating on/off.
- Switch the driver/front passenger seat heating/ventilation on/off.
- Activate One-touch Heating.
- Activate One-touch Cooling.
- Activate vehicle air purification.

Body Controls:

- Unlock/lock the vehicle.
- Locate the vehicle remotely.
- Control the windows remotely.
- Unlock/lock the tailgate (if equipped).

Charging and Discharging Controls:

- [Scheduled Charging](#).
- [Scheduled Battery Heating](#).

One-touch Vehicle Preparation:

By default, One-touch Vehicle Preparation includes “One-touch Cooling” and “One-touch

Heating”. You can also customise One-touch Vehicle Preparation before a journey by activating or scheduling multiple Comfort Control functions and setting a navigation destination.

Vehicle Management Controls:


- Remote Start: After tapping the button in the app, depress the brake pedal within 3 minutes to power on the vehicle.
- Towing Alarm: This function is off by default. When enabled, you will receive a push notification if the vehicle is moved.

Air Conditioning

Air Conditioning Control

Infotainment Display Control

Tap the temperature icon in the infotainment display navigation bar to open the air conditioning control screen.

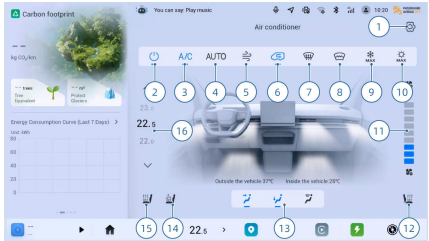


No.	Name	No.	Name
1	Air Conditioning Settings	9	A/C MAX
2	A/C Switch	10	Heating MAX
3	A/C Switch	11	Blower Speed Adjustment
4	AUTO Mode	12	Front Passenger Seat Heating*
5	One-touch Ventilation	13	Air Distribution Mode
6	Recirculation/Fresh Air Mode	14	Driver's Seat Ventilation*
7	One-touch Demist/Defrost	15	Driver's Seat Heating*
8	Heated Windscreen*	16	Temperature Adjustment

Comfort and Convenience

***: if equipped**
Button Control


The physical air conditioning controls are located below the infotainment display.

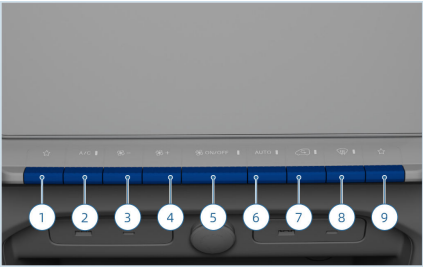

No.	Name	No.	Name
1	Customisable Button	6	AUTO Mode Button
2	A/C Switch	7	Recirculation/Fresh Air Toggle Button
3	Decrease Blower Speed	8	Heated Windscreen
4	Increase Blower Speed	9	Customisable Button
5	A/C Switch		

i Caution


- The air conditioning system is powered by the traction battery. Using it reduces the vehicle driving range.
- When switched on, the air conditioning resumes the state used when it was last switched off.

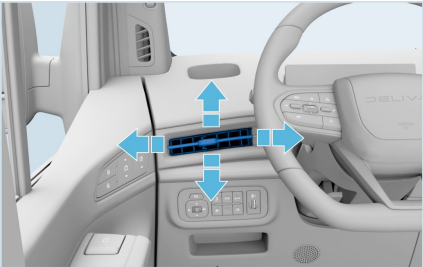

Move the centre vent thumbwheel left or right to open or close the vent. Move it up, down, left or right to adjust the airflow direction.

Air Vent Adjustment

Centre Air Vent Adjustment

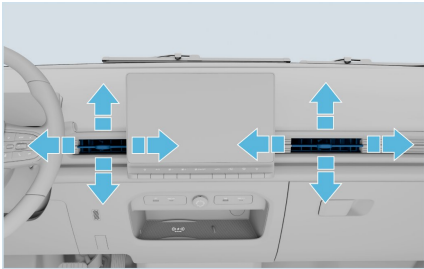

Move the centre vent thumbwheel left or right to open or close the vent. Move it up, down, left or right to adjust the airflow direction.


Side Air Vent Adjustment

A/C Switch



Press the button below the infotainment display **A/C** Turn air conditioning cooling or heating mode on or off.

Blower Speed Adjustment

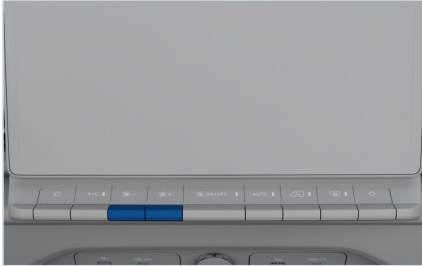

Press the button below the infotainment display **⚙️** and **⚙️** Adjust the air conditioning blower speed.

A/C Switch



Press the button below the infotainment display **⚙️** ON/OFF: Turn the air conditioning on or off.

AUTO Mode (if equipped)

When Automatic A/C mode is on, the system automatically controls airflow mode, fresh-air/recirculation mode, cooling and heating according to factors such as interior and exterior temperature, sunlight, air quality and glass condition, improving comfort and cabin air quality.



Press the button below the infotainment display **AUTO** Switch Automatic A/C mode on or off. When Automatic mode is on, the system automatically adjusts outlet temperature, airflow mode, recirculation mode and fan speed.

Recirculation/Fresh Air Mode



Press the button below the infotainment display **↻**, switch between recirculated air and fresh air.


One-touch Defrost/Demist



Press the button below the infotainment display **🌬️** Turn the windscreen demisting function on or off.

Customisable Button

The customisable button can be assigned to a frequently used function screen according to personal preference.

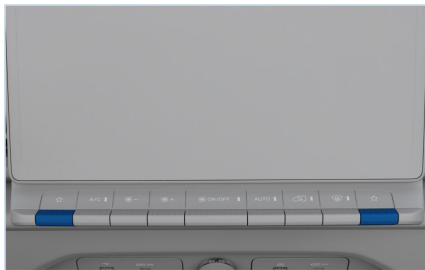

Press the button below the infotainment display  quickly access the function screen.

Caution

Press and hold the custom button to open the function selection screen, then select the desired function to assign it to the custom button.

Network Connection

Bluetooth Connection

After the vehicle and mobile device are connected by Bluetooth, calls can be made/answered and music can be played via the infotainment display.

On the infotainment display, go to  → **Connection** → **Bluetooth Settings**, turn Bluetooth on or off.

On the Bluetooth settings screen, select the mobile device to be paired and follow the on-screen instructions. After pairing, confirm on the phone whether communication data such as contacts and call history may be synchronised to the vehicle for convenient in-vehicle calling. Music from the phone can also be played through the vehicle audio system.

Wi-Fi Settings

Connecting to a network via Wi-Fi can reduce mobile data usage.

On the infotainment display, go to  → **Connection** → **Wi-Fi Settings**, switch Wi-Fi on or off. When switched on, the vehicle automatically scans for available wireless networks. Select the desired network and enter the password to connect.

Hotspot Settings

When the vehicle hotspot is enabled, it can provide network access to phones, tablets and other devices.

On the infotainment display, go to  → **Connection** → **Hotspot Settings**, enter the Hotspot Settings screen. After enabling the hotspot, configure the required hotspot settings.

Intelligent Connectivity


On the infotainment display, go to  → **Connection** → **Intelligent Connectivity**, enter the Intelligent Connectivity screen, where you can select and bind a compatible device.

Network Management

On the infotainment display, go to  → **Connection** → **Network Management**, enter the Network Management screen. Here you can enable or disable mobile data and view data usage.

Music

The vehicle supports several audio sources. When using entertainment functions, you can select NetEase Cloud Music, USB Music or Bluetooth Music as required.

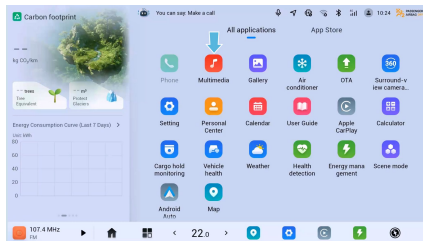

On the infotainment display, go to **App Centre** → **All Apps** → **Multimedia**, enter the

Multimedia screen, where you can switch audio sources and control playback.

USB Audio



1. Insert a USB drive containing music files into the USB port below the infotainment display.
2. On the infotainment display, switch the audio source to the USB Music screen. Recognised songs are displayed and you can select the desired music for playback.

Bluetooth Audio

After switching the audio source to Bluetooth Music, connect your mobile phone via Bluetooth to play audio from the mobile device through the vehicle speakers.

Radio


Use the radio to search for and listen to broadcasts, music and other programmes.

On the infotainment display, go to **All Apps** → **Multimedia** → **Radio**, enter the Radio screen.


1. Band Selection: Tap to switch bands
2. Station Search: Tap to scan for radio stations
3. Station List: Tap to open the station list
4. Playback Information: Displays the current station name, frequency unit and band
5. Playback Controls: Tap to change to the previous/next station or play/pause
6. Favourite/Unfavourite: Tap to toggle favourite status

Sound


On the infotainment display, go to **Settings** → **Sound**, enter the Sound screen. Sound-related settings can be configured here.

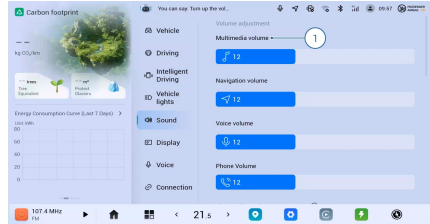


1. Volume Adjustment: Drag the volume bar to adjust multimedia, navigation, voice and phone volume.

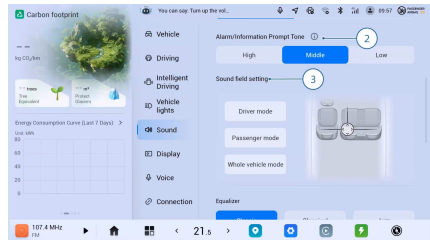

2. Prompt Volume: Set the prompt volume to High, Medium or Low.
3. Sound Field Settings: Set to Driver, Front Passenger or All Seats mode.

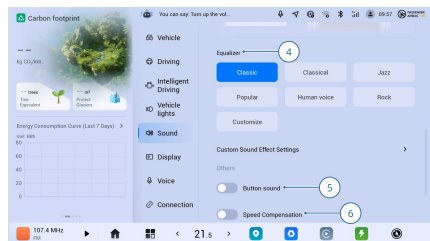

4. Equaliser: Select Classic, Classical, Jazz, Pop, Vocal, Rock or Custom.
5. Touch Sound: When enabled, a tone sounds when screen buttons are touched.
6. Speed Compensation: Turn the speed compensation function on or off.

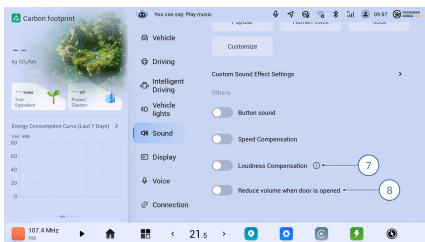

7. Loudness Compensation: Turn the loudness compensation function on or off.
8. Volume Reduction When Door Opens:
 - When this function is enabled and the driver's door is open, the system determines whether to reduce the volume based on the current multimedia volume.
 - If the current multimedia volume is >5 , opening the door sets the volume to the fixed level 5. If the current multimedia volume is ≤ 5 , the volume remains unchanged.
 - When the door is closed, the volume returns to the original setting.

Smartphone Projection

A mobile phone screen can be projected to the infotainment display. After projection, supported phone apps such as navigation, music and calls can be operated via the infotainment display. You can use smartphone projection in the following ways:

- **Wireless connection:** after the infotainment system and device are paired via Bluetooth, a prompt appears. After confirmation, the device automatically connects to the hotspot and completes loading, then opens the smartphone projection screen. Bluetooth remains connected throughout.
- **Wired connection:** connect the device to USB from any infotainment screen. After loading, the smartphone projection screen opens automatically; disconnect the cable to end the connection.

caution

- If a device is already connected, disconnect it before connecting another device.
- While a device is connected wirelessly, do not turn off the vehicle hotspot or Bluetooth, as this may interrupt projection.

Intelligent Connectivity

Tap the name of a disconnected device to connect it. Tap the name of a connected device again to disconnect it. Tap the delete icon to remove the device from the connected-device list.

Navigation

Map navigation provides intelligent route planning, navigation, real-time traffic information and place search services to improve safety and convenience when travelling.

On the infotainment display, go to **Navigation** → , open Navigation Settings.



1. Navigation
2. Announcement
3. Map
4. Other

Alcohol Interlock

The vehicle can be started only after the breath alcohol test has been passed.

Dash Cam (if equipped)

The dash cam can continuously record video and audio information while the vehicle is being driven, providing objective evidence for determining responsibility in traffic accidents.

ADAS Overview

ADAS uses a range of sensors to provide driving, parking and safety assistance functions, helping provide a safer and more comfortable driving experience.

ADAS Function Overview

ADAS is designed only to assist the driver and is not autonomous or driverless driving. It cannot replace attentive driving and accurate judgement or fully cope with every situation caused by changes in traffic, road conditions, visibility, weather or other environmental factors. The driver remains fully responsible for all driving actions and safe vehicle operation.

ADAS functions are divided into three categories: Driver Assistance, Parking Assistance and Safety Assistance:

- **Driving Assistance:** provides Adaptive Cruise Control (ACC) and Intelligent Cruise Assistance (ICA), offering different levels of intelligent assistance to make driving easier.
- **Parking Assistance:** provides multiple parking assistance functions, including Rear View Camera (if equipped) and Around View Monitor (AVM) (if equipped), to assist the driver when parking.
- **Safety Assistance:** Provides comprehensive front, side and rear safety assistance to support safe driving.

Due to differences in vehicle configuration, software/service version or market region, the vehicle may not have all functions described in this manual, or function behaviour may differ. Always refer to the actual equipment and functions of your vehicle.

warning

- After a driver assistance function is activated, depressing the brake pedal exits the function. The system then no longer controls the vehicle, and the driver must maintain control.
- Before using ADAS, the driver must carefully read and understand the

warning

relevant agreements and supporting documents and fully understand how to use ADAS, including the ADAS User Guide, general limitations and errors, the meaning, scope and operation of each function, and all cautions. Follow all operating instructions strictly. Failure to do so may cause an accident, property damage, injury or death. Chery accepts no liability for losses or injury caused by failure to follow this manual.

- ADAS cannot replace attentive driving and accurate driver judgement. When driver assistance is active, keep your hands on the steering wheel, remain alert to surrounding hazards and intervene or take control when necessary. Failure to do so may cause an accident, property damage, injury or death.
- In this manual, “intervene in vehicle control” and similar wording is used as a concise description of driver actions when using ADAS. During ADAS operation, however, the driver remains the sole person responsible for driving and must continuously monitor the vehicle, system operation, external environment and relevant targets, respond as necessary, and immediately intervene and control the vehicle using the methods specified in this manual whenever required to ensure safety. Failure to do so may cause an accident, property damage, injury or death.
- The driver must use ADAS functions legally and in accordance with local laws and regulations. Do not add functions, apps, tools or modules to ADAS for improper or unlawful purposes, and do not unlawfully collect or use personal or geographic information. Chery is not responsible for unlawful conduct resulting from misuse, incorrect use or unauthorised modification of ADAS services and may retain relevant data as

! warning


evidence for authorities following lawful procedures.

- If radar, cameras or other sensors or related vehicle parts require replacement, have them replaced at an Authorised Service Centre. Do not install parts not approved by Chery or make modifications not approved by Chery. Chery accepts no liability for accidents, property damage, injury or death arising from replacement of these components outside an Authorised Service Centre.

ADAS Sensors

The vehicle is equipped with two types of sensors: ultrasonic sensors and millimetre-wave radar.

The vehicle is equipped with surround-view cameras, around-view cameras, a front-view camera and an in-cabin Driver Monitoring System camera.

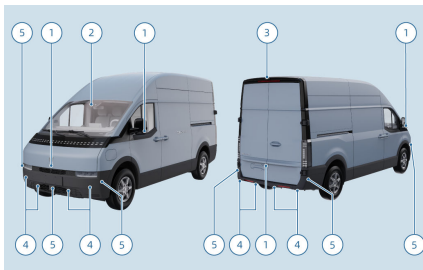Sensor Location

No.	Name
1	Surround-view Camera (if equipped)/ Parking Camera (if equipped)
2	Front-view Camera
3	Rear-view Camera
4	Ultrasonic Sensors (if equipped)
5	Millimetre-wave Radar (if equipped)

i Caution

The number and configuration of radar sensors and cameras vary by vehicle specification. Refer to the actual vehicle.

Cleaning and Maintenance

Regularly inspect and clean all radar sensors and cameras, keeping them free from dust, water and other contamination. Keep the windscreen clean and free from frost or mist to maintain ADAS operation and accuracy. Dirt, obstructions or deposits on radar/camera surfaces, or a dirty, frosted or misted windscreen, may affect ADAS function or performance.

Common cases of dirt, obstructions or deposits on radar/camera surfaces and recommended actions are as follows:

- Dust, mud (including sand and water stains), bird droppings or other contamination on the radar or camera window surface
Rinse with running clean water or a dedicated window cleaner until adhered dirt softens or comes away, then wipe the surface clean with a dry optical cloth, cotton cloth or lint-free cloth until no obvious stains remain on the window.
- Ice or frost on the radar or camera window surface
Use warm water or a cleaning fluid containing antifreeze. After the contamination has melted, wipe the surface dry with a dry optical cleaning cloth, cotton cloth or lint-free cloth until no obvious stains remain on the window.
- Natural condensation on the radar or camera window surface
Use a dry optical cleaning cloth, cotton cloth or soft lint-free cloth to wipe away condensation until no obvious water marks remain on the window surface.
- When driving in poorly lit or easily obstructed environments such as one-sided elevated roads, tunnels, deserts, grasslands or snow-covered areas
Drive the vehicle away from the current environment as soon as possible and continue

driving for approximately 15 minutes. This type of obstruction fault will clear automatically and requires no further action.

Caution

- If driving in blowing sand, a sandstorm or other heavy-dust conditions, avoid high-speed driving and prolonged exposure to dust to reduce the risk of damage to ADAS sensor windows.
- Use the vehicle demisting function when necessary to prevent the windscreen from frosting or misting.
- Use a neutral cleaner with a pH of 6-8, such as 99% isopropyl alcohol solution or soapy water, to clean radar stains. After cleaning, rinse the radar surface with clean water and dry it with a clean lint-free cloth.
- Do not apply film, wax, non-original paint, vehicle wrap or coatings over the external radar area, as this will affect radar sensing performance.
- Do not clean radar with a cleaning brush or an automatic car wash equipped with brushes, as sand or gravel trapped in the brush may abrade the sensor window and housing.
- Do not use hot water to remove ice or snow from sensor windows, as this may crack them.
- Do not rub the sensor window forcefully, as this may damage its optical coating.
- Do not scrape dirt, ice or snow from the window or housing surface with metal or other hard objects, as this may damage the window surface.
- When using a pressure washer, maximum pressure must not exceed 8 MPa and the nozzle must remain at least 30 cm from the radar window. Do not aim the nozzle directly at the radar window. Keep the nozzle moving and do not spray one area continuously.

Limitations

Radar sensors and cameras have the following limitations, including but not limited to:

- Although radar and camera technologies play an important role in detecting the surrounding environment, they still have detection blind spots.
- Radar and cameras may fail to detect objects, for example recognising only part of or completely missing certain vehicles, people, animals or other obstacles.
- Radar and cameras may produce false detections, such as incorrectly estimating an object's distance or speed, or detecting an object when none is present.

Many factors can affect radar or camera detection performance and may result in missed or false detections.

warning

- Do not clean optical windows or housings with strong alkalis or acids, ammonia-based cleaning solvents, bleach, cement remover, tar remover, adhesive remover, polishing agents or paint stripper.
- If radar or a camera needs replacement, have it replaced at an Authorised Service Centre. Do not fit parts not approved by an Authorised Service Centre or carry out unapproved modifications.
- If the windscreen, wing, exterior rearview mirror, bumper or tailgate needs replacement, visit an Authorised Service Centre to ensure radar and cameras are handled correctly.
- If the area where an ADAS sensor such as radar or a camera is installed is damaged or impacted, causing sensor displacement or damage, ADAS may become unavailable. Have the vehicle inspected and repaired at an Authorised Service Centre.
- After replacing ADAS sensors such as radar or cameras, perform ADAS calibration promptly. Failure to calibrate

warning

ADAS successfully may affect normal operation.

- Failure to follow the above instructions may affect safe driving, cause an accident, and result in property damage, injury or death.

caution

- Do not obstruct the radar sensors or cameras.
- Keep radar and camera surfaces dry and clean. Promptly wipe away water droplets, dust, mud and sand, and prevent icing on the surfaces in cold weather.
- When washing the vehicle with high-pressure water, avoid spraying radar sensors and cameras directly.
- Do not use sharp, corrosive or abrasive objects to clean radar or cameras. Make sure cleaning materials contain no hard particles such as sand or gravel.
- Do not forcibly scrape or wipe strongly adhered contamination from radar or camera surfaces, such as dried mud, muddy water stains, bird droppings or thick frost. First rinse with clean water, antifreeze-containing fluid or dedicated window cleaner and allow the contamination to soften, melt or wash away before wiping, to avoid scratching the sensors with hard particles or cleaning tools.
- In cold weather, use a cleaner containing antifreeze to remove dirt from radar or camera surfaces to prevent the sensor window from icing.
- Millimetre-wave radar sensors are installed inside the front and rear bumpers. To avoid affecting radar performance, keep the bumpers clean and do not repaint them, fit body kits, apply unsuitable vehicle wraps or colour-change films, or install metal/alloy decorative parts (including electroplated

caution

parts). If repainting is required, visit an Authorised Service Centre.

ADAS User Guide

Limitations

ADAS uses multi-sensor fusion algorithms, and many factors can affect its performance and prevent expected operation. For example, due to real traffic conditions and other limitations, the actual high-confidence sensing distance and actual detection range of sensors may be less than their maximum laboratory detection range. Common ADAS limitations include, but are not limited to, vehicle equipment issues (including driver misuse), vehicle positioning issues (unavailable positioning, need for repositioning or reduced accuracy), external environmental effects (weather, visibility and road environment), and surrounding vehicles or other road users. These factors may cause inappropriate warnings/displays, failure to control the vehicle as expected, system exit or improper operation. Here and below, “improper” includes not performed, delayed, incorrect or unexpected operation.

Vehicle equipment issues (including those caused by driver misuse)

- ADAS sensors such as radar sensors and cameras are not calibrated.
- ADAS sensors such as radar sensors and cameras are damaged, for example due to a traffic accident.
- ADAS sensors such as radar and cameras are dirty or obstructed, for example by mud, plastic bags, ice or snow.
- The installation position of ADAS sensors such as radar and cameras changes, for example when the bumper, windscreen, exterior rearview mirror, body panel such as a wing or power tailgate, or vehicle frame is deformed or damaged by a collision or other cause.

- Body attachments or modifications cause obstruction or interference, such as bicycle racks, side steps, oversized or raised licence plate frames; excessively thick repainting; vehicle wraps, colour-change film or window film containing metal on the body, roof or windows; adhesive tape, stickers or rubber coatings; or films that obstruct ultrasonic sensors or cameras.
- The exterior rearview mirrors are not correctly unfolded.
- The wiper setting is inappropriate, for example the driver selects an incorrect wiper setting, causing ADAS to misjudge rainfall intensity.

Vehicle positioning issues (positioning unavailable, repositioning required, reduced accuracy, etc.)

The vehicle must be repositioned in the following situations:

- ADAS restarts.
- Vehicle positioning may be unavailable near special areas such as borders or military bases.
- Restart the vehicle after it has been moved without being driven, for example by towing, ferry transport or parking in a multi-storey automated garage.

Caution

Drive for a short distance in an open area to restore vehicle positioning.

Vehicle positioning accuracy may decrease or become unavailable in the following situations:

- Heavy rain or thunderstorms.
- Intense solar activity disturbs the ionospheric environment.
- The vehicle positioning antenna is covered by a metallic obstruction, including metallic colour-change film.
- The vehicle cannot connect to the network for an extended period.

- Some remote areas, such as uninhabited western regions.
- Areas such as tunnels or beneath elevated roads.

External environmental effects (weather, visibility, road conditions, etc.)

- The temperature is extremely high or low.
- Severe weather such as heavy rain, heavy snow, dense fog or severe haze.
- Poor surrounding visibility, for example due to dense smoke, exhaust from nearby vehicles, water spray or dust.
- Ambient light is low, for example at dawn, dusk, night or in poorly lit tunnels.
- Sudden changes in ambient brightness, such as at tunnel entrances or exits.
- Strong light, backlight or glare, for example direct or oblique sunlight on the camera or interference from the headlamps of oncoming or following vehicles.
- There are stationary obstacles nearby, such as posts, tables, chairs or open doors.
- Nearby objects have unusual surfaces or structures, such as glass, sponge or foam.
- Thin, pointed, low or suspended obstacles are nearby, such as chains, poles, low stones, bushes, planters, sharp pillar corners or partially open roller doors.
- Complex road conditions, such as steep slopes, sharp or continuous bends, winding/narrow/off-road/rough roads, unusually wide lanes, confused or unclear lane markings, crossing lane markings and road boundaries; roads near ditches, steps or cliffs; and construction areas such as zones with traffic cones.
- Poor road conditions, such as wet/slippery or loose surfaces (standing water, ice, snow, mud, gravel or sand); collapsed roads, grooves or pits (potholes, uncovered drains or fire-service access pits); or unclear/damaged lane markings or road signs.

Influence from surrounding vehicles and other road users

- Other nearby equipment or noise causes interference on the same frequency.
- Atypical targets are nearby, such as large flatbed vehicles, road-maintenance vehicles, vehicles with colours very similar to a large uniform background, unusually long two-wheelers or three-wheelers, pedestrians carrying umbrellas, unusually shaped or modified vehicles, or accident-damaged vehicles positioned at an angle, overturned, with a power tailgate open or a warning triangle placed nearby.
- Complex traffic situations, such as a vehicle suddenly appearing and rapidly approaching, sudden hard braking by the vehicle ahead, pedestrians, cyclists, small animals or other obstacles, or when entering/exiting ramps, junctions or toll stations.

warning

- Do not use ADAS functions after the vehicle has been scraped or involved in a collision, including a minor collision. Have the vehicle inspected at an Authorised Service Centre immediately after such an event.
- Due to system limitations, ADAS may also exhibit other unexpected or unintended behaviours, including but not limited to:
 - The system may issue an inappropriate warning or intervention if it misinterprets the driver's actions.
 - ADAS may not detect or respond to sudden environmental hazards, such as a sudden strong crosswind or other abrupt airflow changes around one side of the vehicle, and may not control the vehicle as expected.
 - Other behaviours caused by the limitations described in this section, such as inappropriate warnings or displays, inappropriate vehicle


warning

intervention, system exit or improper operation.

- The driver must remain alert to surrounding hazards and intervene or take control when necessary, such as by slowing, braking or steering, to ensure safe driving. Failure to do so may cause an accident, property damage, injury or death.

Driver Assistance Function Restart

If a driver assistance function is abnormal or unresponsive, restart the driver assistance system as follows:

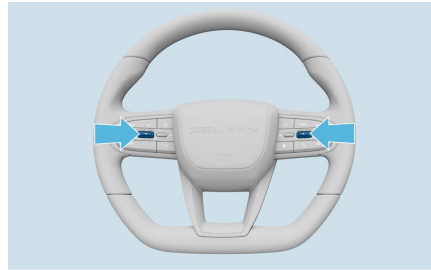


Make sure P is selected. Press and hold the confirmation button on the left side of the steering wheel for approximately 5 seconds, release it, then press and hold the mute button on the right side until the infotainment display turns off to restart the system.

Adaptive Cruise Control (ACC)

Adaptive Cruise Control (ACC) assists with longitudinal speed and following distance but does not control steering. When active with no target vehicle ahead, it maintains the cruise speed set by the driver. If a slower vehicle appears ahead, it automatically accelerates/decelerates to maintain following distance and can follow the vehicle ahead to a stop and move off again.

Adaptive Cruise Control Activation

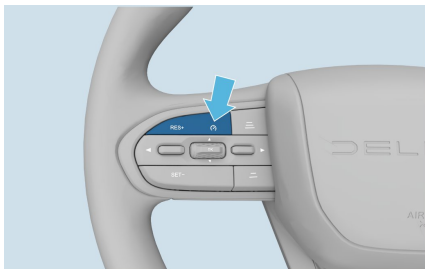

When driving and ACC activation conditions are met, a white indicator illuminates on the instrument pack. Press and hold the button on the left side of the steering wheel to activate ACC. A blue indicator illuminates, an audible prompt sounds and the voice prompt says "Cruise control activated". The blue indicator means ACC is in cruise/following control mode.

Adaptive Cruise Control Activation Conditions

The following conditions must all be met to activate Adaptive Cruise Control:

- Vehicle speed is 0-135 km/h.
 - The function can be started at 0 km/h only when there is a vehicle ahead. If there is no vehicle ahead, the minimum activation speed is 15 km/h.
- The vehicle is in D.
- The brake pedal is not depressed.
- All doors, the bonnet and the tailgate are closed.
- The driver's seat belt is fastened.
- The parking brake is not applied.
- The anti-lock braking system is not active.
- The vehicle stability control system is enabled but not active.
- Hill Descent Control (HDC) is not enabled.
- Active Speed Limiter (ASL) is not enabled.
- There are no other vehicle faults, such as tyre pressure warnings, braking system faults or steering system faults.
- Related system modules have no faults; for example, sensors such as cameras and radar sensors are operating normally.

- Other driver assistance functions are not active.

caution

Before using driver assistance functions, make sure all the above conditions are satisfied. If any condition is not met, the system may degrade or exit. Be ready to take over at any time.

warning

- When ACC is activated, the vehicle may not immediately reach a stable state. Keep both hands on the steering wheel at all times.
- When activating ACC, make sure the area around the vehicle is safe and do not rely excessively on the system. For example, if your vehicle is too close to the vehicle ahead, the target may not be recognised correctly. Visually check the situation and respond promptly.
- Remain fully attentive while driving, keep your hands on the steering wheel, continuously monitor road conditions around the vehicle and be ready to take control at any time. Do not rely on Adaptive Cruise Control to handle sudden emergencies, as this may result in serious injury or death.

Adaptive Cruise Control Deactivation

After Adaptive Cruise Control is activated, briefly press the button on the left side of the steering wheel or lightly depress the brake pedal to exit Adaptive Cruise Control.

Adaptive Cruise Control Deactivation Conditions

Adaptive Cruise Control deactivates if any of the following occurs while cruising, including but not limited to:

- Lightly depress the brake pedal;

- The driver continuously overrides the accelerator pedal for more than 15 minutes;
- Vehicle rolls backward;
- Apply the electronic parking brake;
- The gear position is not D;
- The bonnet or a door is open;
- The driver's seat belt is not fastened;
- The vehicle stability system is operating;
- The anti-lock braking system is operating;
- The automatic emergency braking system is operating;
- The vehicle stability system is not enabled;
- Adaptive Cruise Control system fault.
- Brake Pad Temperature Too High
- Maximum Energy Efficiency Mode enabled
- Towing Mode Activation


Take Over Immediately

If the current situation exceeds ACC control capability, the voice prompt says "Please drive manually" and the instrument pack displays "Cruise control exited". Take control of the vehicle immediately.

Cruise Control

Initial Cruise Speed

After ACC is activated for the first time, the cruise speed can be set between 15 and 130 km/h. The driver may use the accelerator to increase speed up to 135 km/h, at which point ACC exits. Adjusting the Cruise Speed

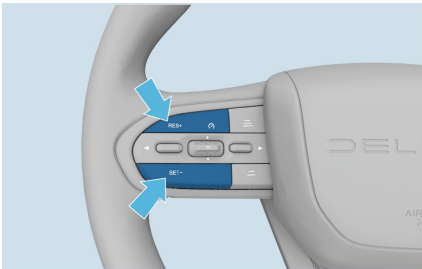

When no vehicle ahead is preventing your vehicle from travelling at the set cruise speed, ACC assists the driver in maintaining the set speed. Adjust the target speed as follows:

1. Briefly press "RES+" on the left side of the steering wheel once to increase the target cruise speed by 1 km/h; press and hold to

increase it by 5 km/h. If the current speed is not a multiple of 5, the cruise speed first rounds up to the next multiple of 5.

2. Briefly press "SET-" on the left side of the steering wheel once to decrease the target cruise speed by 1 km/h; press and hold to decrease it by 5 km/h. If the current speed is not a multiple of 5, the cruise speed first rounds down to the previous multiple of 5.
3. While the driver actively depresses the accelerator, the system no longer assists with speed control and a message appears on the infotainment display. When accelerator intervention ends, speed control resumes. Prolonged accelerator intervention may cause ACC to exit.
4. While actively depressing the accelerator pedal, press and hold the "SET-" thumbwheel on the left side of the steering wheel to set the current vehicle speed as the target cruise speed.

warning

- ACC may not immediately reduce the vehicle speed to the desired value. Do not rely excessively on driver assistance to reduce speed sufficiently.
- While the driver is depressing the accelerator and controlling vehicle speed, the system cannot decelerate the vehicle or respond to a target vehicle or obstacle ahead. If the driver does not take timely action in a hazardous situation, a collision may occur.
- If the cruise speed has reached the maximum (minimum) value, continuing to increase (decrease) the cruise speed will not change the setting;
- Use cruise acceleration only when road conditions are safe. Remain fully attentive, keep your hands on the steering wheel, monitor the road around the vehicle and be ready to take control at any time. Do not rely on Adaptive Cruise Control to handle sudden emergencies, as serious injury or death may result.

Curve Speed Control

When entering a bend during cruising, the system appropriately reduces vehicle speed to assist the driver through the bend.

warning


- You remain responsible for controlling the vehicle throughout. Reduce speed as much as possible before entering bends.
- When entering a bend, sensor detection limitations may prevent timely detection of a vehicle ahead following the same path. Be ready to take control at any time.

Following Distance

When a vehicle ahead prevents your vehicle from travelling at the set cruise speed, ACC automatically accelerates or decelerates according to the speed of the vehicle ahead to help maintain the set safe following distance.

Adjusting the Following Distance

When ACC is switched on, briefly press the “Time Gap +” or “Time Gap -” button to adjust the following time gap.

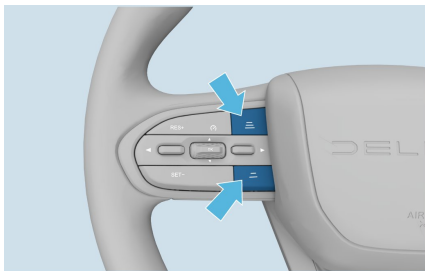

- Briefly press the “Distance +” button to increase the following distance.
- Briefly press the “Distance -” button to decrease the following distance.

Each brief press of the following time-gap adjustment button increases or decreases the setting by one level only. Press-and-hold continuous adjustment is not supported.

There are three following time-gap levels, with Level 2 set by default. The selected time-gap

level is saved and used as the default the next time adaptive cruise following is used.

warning

- The shorter the following distance, the less reaction time is available. The driver is always responsible for selecting a suitable safe following distance. Do not rely excessively on ACC speed or time-gap adjustment to maintain an accurate safe distance.
- The driver should adjust vehicle speed and following distance cautiously according to local traffic laws, traffic flow ahead, real-time weather and road conditions, and make timely adjustments as conditions change to ensure safe driving at all times.
- Pressing the Cruise Main button on the left side of the steering wheel while the vehicle is stopped and waiting may cause ACC to exit and the vehicle may unexpectedly creep forward, creating an accident risk. Pay attention to system prompts and the driving environment at all times. If the vehicle begins to creep, correct it promptly and take control to ensure safe driving.
- The driver must remain alert to surrounding hazards and intervene or take control when necessary, such as by slowing, braking or steering, to ensure safe driving. Failure to do so may cause an accident, property damage, injury or death.

Stop-and-go

During adaptive cruising, if the vehicle ahead slows to a stop, ACC will follow it and decelerate the vehicle to a stop; the instrument pack displays “” indicator illuminates. If the vehicle ahead moves off again within a certain period after stopping, ACC responds as follows:

- If the stop lasts less than 3 seconds, ACC automatically follows the vehicle ahead when it moves off.

- If the stop-follow time is between 3 seconds and 3 minutes, when the vehicle ahead moves off the driver must depress the accelerator pedal before ACC resumes moving.
- If the stop lasts more than 3 minutes, ACC automatically deactivates and applies the electronic parking brake.

Switching the Target Vehicle

- During ACC cruising or following, if another vehicle ahead becomes the nearest obstruction, ACC switches the follow target to that vehicle and automatically adjusts speed to maintain a safe distance.
- If the vehicle ahead moves away and no target vehicle remains ahead, your vehicle enters cruising mode.

warning

- If no vehicle ahead is detected, Adaptive Cruise Control controls the vehicle at the set cruise speed. Keep both hands on the steering wheel, continuously observe the road ahead and take control immediately if necessary.
- During cruising, keep your eyes on the road, monitor surrounding traffic and be ready to take control at any time.

Adaptive Cruise Control Precautions

Adaptive Cruise Control (ACC) is a driver assistance function. The driver is responsible for controlling the vehicle and for vehicle safety at all times. ACC has limitations and may not respond effectively or may exit in the following situations.

Sensor performance may be affected by the following factors, including but not limited to:

- There are modifications or accessories around the sensors, such as a number plate frame.
- Dirt, leaves, ice or snow obstructs the field of view.
- Night-time, strong light, backlighting, reflections from standing water or extreme light contrast.

- Vibration or impact may reduce sensor performance or cause sensor failure. In this case, have the sensor recalibrated at an Authorised Service Centre as soon as possible.

Do not use driver assistance in situations close to or beyond system performance limits, including but not limited to:

- override the laws of physics.
- Tunnels, overpasses, width/height restriction structures and similar locations may affect positioning signal strength.
- Narrow roads, sharp bends, mountain roads, slopes, banked roads, tunnels, slippery roads, uneven roads and similar conditions.
- Severe weather, such as rain, snow, dense fog, crosswinds, dust storms, high temperatures or extreme cold.
- Particularly complex roads, such as temporarily closed lanes, long-term complex roadworks, non-primary roads or roads other than motorways.

ACC is intended for motorways and roads in good condition. It may not respond effectively in complex road environments and the driver must take control promptly, including but not limited to:

- at a red-light intersection.
- Obstacles ahead of the vehicle, such as traffic cones or barriers, or other road users, such as vehicles, pedestrians, bicycles or animals.
- If your vehicle is too close to a vehicle in an adjacent lane, the system may select it as the following target and respond to it.
- The vehicle ahead suddenly decelerates or turns around.
- The vehicle quickly cuts in behind a vehicle travelling more slowly.
- If an unconventional vehicle such as construction equipment or an unusually shaped vehicle is ahead, driver assistance may not identify its rear outline accurately and may detect only part of it, such as the rear axle of a high-chassis truck or the upper part of a low flatbed trailer. Correct stopping distance cannot be guaranteed and a collision may occur.

The driver should avoid the following behaviours, including but not limited to:

- The driver has set the cruise speed too high. Observe road traffic laws and do not exceed speed limits. ACC is a comfort function, not a collision-avoidance system, and its maximum deceleration is limited. Do not rely on driver assistance to reduce speed sufficiently to avoid a collision. Observe the road ahead and be ready to take corrective action immediately.
- If the driver inadvertently keeps a foot on the accelerator pedal, the system will not apply the brakes.
- Setting too short a following distance may leave insufficient braking distance. Always maintain a safe distance, particularly in congestion, tunnels, at night or when following vehicles carrying long loads. Remain highly attentive to prevent collisions.
- The driver has already identified a hazard but waits for a takeover request before controlling the vehicle. Take control immediately when a risk is identified.

The above cautions do not cover every circumstance that may affect normal system operation. The system may fail to perform as expected for other reasons, and the driver is responsible for maintaining control of the vehicle at all times.

Intelligent Cruise Assistance (ICA)

Intelligent Cruise Assistance uses the front camera to detect lane markings and control the vehicle longitudinally and laterally. In monotonous driving or congestion, it can accelerate and brake to maintain distance from the vehicle ahead and steer to keep the vehicle centred in its lane.

Intelligent Cruise Assistance

Activation

On the infotainment display, go to  → **Driver Assistance** → **Intelligent Assistance** → **Intelligent Cruise Assistance**, tap to enable this function.

Takeover Reminder

In ICA mode, if the lateral function exits or can no longer control the vehicle within its lane, the system provides timely visual, text and audible takeover prompts to alert the driver and reduce potential risk.

- When you release the steering wheel or only rest your hands lightly on it on clearly marked curved roads such as ring roads or motorway ramps.
- On a straight road, when the vehicle is close to losing lateral control (hands off the wheel, crossing a lane line or excessive lateral acceleration).

Intelligent Evasive Assist

On the infotainment display, go to  → **Driver Assistance** → **Intelligent Assistance** → **Intelligent Evasive Assist**, tap to turn this function on or off.

In ICA mode at 60–130 km/h, when overtaking a large vehicle in an adjacent lane, such as a truck or bus, the system may move the vehicle laterally away from it until the overtake is complete.

Intelligent Evasive Assist can be activated only when the following conditions are met:

- Intelligent Cruise Assistance (ICA) is enabled.
- Intelligent Evasive Assist is enabled.
- The wipers are not at the highest speed setting.
- The exterior lamps or fog lamps are not switched on.
- Vehicle speed ≥ 60 km/h.
- The vehicle speed exceeds the speed of the large vehicle by more than 5 km/h.
- There is no Emergency Lane Keeping target on the evasive side and that side is not the road edge.

Forward Safety Assistance

Intelligent High Beam Control (IHBC)

IHBC requests high-beam switching according to traffic, environmental and vehicle conditions and can automatically turn high beam on or off during night driving. Ambient conditions are assessed using factors such as the presence

of multiple street lamps and surrounding brightness. When switch-off conditions are met, high beam is switched off immediately; when switch-on conditions are met, high beam is switched on after a delay.

- When lighting conditions are poor, the system automatically switches on the main-beam headlamps.
- When the system detects a vehicle ahead, such as an oncoming or preceding vehicle, or when ambient brightness increases, it automatically switches off the high beam.
- Approximately 3 seconds after the vehicle ahead is no longer detected, the main-beam headlamps switch on again.
- When the system detects that the vehicle is overtaking, it automatically switches between main-beam and dipped-beam headlamps.

On the infotainment display, go to  → **Exterior Lighting**, turn Intelligent High Beam on/off.

Status	Indicator Lamp
Operation Indicator Lamp	
Malfunction Indicator Lamp	

Activation Conditions:

- The automatic main-beam function is enabled.
- The headlamp switch is in the dipped-beam position.
- Ambient light is low enough for the dipped-beam headlamps to switch on automatically.
- Vehicle speed is 40-135 km/h.
- Cameras, lamp assemblies and other systems are operating normally

Caution

Any driver operation to switch the lamps on or off or flash the lamps will suppress IHBC operation.

warning

- Automatic High Beam Control is a driver assistance function and cannot replace the driver's judgement. Manual intervention is required according to actual traffic conditions.
- Automatic High Beam Control cannot identify areas where high beam is prohibited. The driver must comply with road safety regulations, remain alert to surrounding road conditions and be ready to take control at any time while using driver assistance.

Forward Collision Warning (FCW)/ Automatic Emergency Braking (AEB)

Forward Collision Warning and Automatic Emergency Braking work together. If the system detects a potential collision risk with a vehicle or pedestrian ahead, it warns the driver. If the driver does not react quickly enough, the vehicle may brake automatically to reduce collision severity.

Forward Collision Warning

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning**

On the Safety Warning screen, set Forward Collision Warning and related parameters:

- Forward Collision Warning: Turn Forward Collision Warning on or off.
- Set Forward Collision Warning sensitivity to Low, Medium or High.

Automatic Emergency Braking

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning** Turn Automatic Emergency Braking on/off.

Status	Indicator Lamp
Operation Indicator Lamp	
Indicator Lamp Off	

Status	Indicator Lamp
Fault Status	

Caution

Automatic Emergency Braking/Forward Collision Warning does not respond to obstacles other than vehicles and pedestrians.

caution

- The driver must make sure seat belts are fastened and doors are closed; otherwise Forward Collision Warning may not operate.
- After the vehicle is brought to a stop by assisted braking, it will not remain stationary indefinitely. The driver must take manual control of the vehicle.
- Forward Collision Warning does not issue a warning below 5 km/h or above 130 km/h.
- While Automatic Emergency Braking is active, rapidly turning the steering wheel or depressing the accelerator pedal deeply will cancel the function.
- Vehicle Stability Control, Forward Collision Warning and Automatic Emergency Braking must be switched on. Otherwise, Forward Collision Warning and Automatic Emergency Braking will not operate.
- Instrument pack  yellow indicator lamp illuminates. Have the vehicle inspected at an Authorised Service Centre as soon as possible.
- Automatic Emergency Braking operates from 5–130 km/h for vehicle targets and from 5–130 km/h for pedestrian and cyclist targets.

warning

- Throughout the process, the driver remains responsible for controlling the

warning

vehicle and intervening when necessary to avoid danger.

- Automatic Emergency Braking (AEB) is an assistance function only and cannot operate normally under all driving, weather, traffic or road conditions.
- Automatic Emergency Braking can detect passenger cars, buses and trucks. Detection of some modified or special-purpose vehicles, such as cement mixers or vehicles with unusually high or low chassis, is limited.
- Automatic Emergency Braking performs best when it can detect human and bicycle outlines and normal cycling motion. A cyclist approaching head-on towards the vehicle is not treated as a target by the system.
- Automatic Emergency Braking performs best when it can detect characteristics of normal walking, such as a person's head and swinging arms and legs. A pedestrian is treated as a target mainly when crossing the vehicle's path. Pedestrians walking longitudinally in the lane, on a bend or obscured by other objects may not be treated as targets.
- Automatic Emergency Braking cannot always detect vehicles, cyclists or pedestrians. Various factors may cause unnecessary automatic braking or prevent operation. Even within its operating speed range, collisions cannot always be avoided. The system is only a driver assistance function intended to reduce collision severity. The driver remains responsible for controlling the vehicle and intervening when necessary.

Automatic Emergency Braking Precautions

- Automatic Emergency Braking cannot overcome the laws of physics and has limitations. The driver must always maintain control of the vehicle and remains fully responsible for the vehicle.

- The driver must maintain a speed and following distance appropriate for the weather, road and traffic conditions.
- Automatic Emergency Braking does not respond to animals or vehicles crossing the road, nor to oncoming vehicles, bicycles or pedestrians.
- System performance is significantly limited for targets that cut into the lane quickly, targets detected only after your vehicle changes lane, and targets on bends.
- All occupants must wear their seat belts correctly and all loads must be secured to prevent hazards if Automatic Emergency Braking is activated.
- If the Automatic Emergency Braking (AEB) system has a fault, the instrument pack “” yellow indicator lamp remains illuminated. Have the vehicle inspected at an Authorised Service Centre as soon as possible.
- Turn off Forward Collision Warning and Automatic Emergency Braking when the vehicle is tested on a roller test bench.
- In some special environments, Automatic Emergency Braking may issue unnecessary warnings or braking interventions. Sensor detection can be impaired by conditions such as tunnels, lights from oncoming vehicles or reflections from wet roads, affecting related system functions.
- The front radar (if equipped) and front-view camera are installed in the front area of the vehicle and behind the windscreen. Their fields of view must not be obstructed by contamination, and no modifications or accessories such as decorative licence plate frames should be installed in the surrounding area. Complete snow coverage may cause system exit. Vibration or impact may also affect sensors and reduce or disable AEB performance; have the sensors recalibrated at an Authorised Service Centre as soon as possible.

Automatic Emergency Braking must be turned off in the following situations:

- when the vehicle is being towed.

- When the vehicle is on a roller test bench.
- When the installation position of a radar sensor or camera has changed (for example, after a rear-end collision).

The Automatic Emergency Braking system may not activate or its performance may be reduced under the following conditions, including but not limited to:

- override the laws of physics.
- The driver depresses the accelerator pedal firmly.
- Special vehicles with indistinct rear contours or irregular shapes.
- When sensors are obstructed by snow, ice, dirt, bird droppings, insects or similar material.
- Oncoming vehicles, cyclists, pedestrians and crouching pedestrians.
- Irregularly shaped obstacles and other road objects such as traffic cones, barriers and directional signs.
- Modified vehicles, such as cement tankers and special vehicles with unusually high or low chassis.
- Pedestrians or animals moving longitudinally in the lane, moving on a bend or obscured by other objects.
- Targets cutting quickly into the lane, targets detected only after your vehicle changes lanes, and targets on bends.
- Severe weather (such as dense fog, heavy rain, heavy snow or hail) and slippery road surfaces (such as icy, snowy, wet or waterlogged roads).
- Structural modifications to the vehicle (such as lowering the chassis height, changing the front licence plate mounting bracket, or adding a decorative licence plate frame).
- If the radar installation position changes, for example due to strong vibration or a minor impact, have the sensor recalibrated at an Authorised Service Centre as soon as possible.
- Cameras may not operate in cold or severe weather. Rain, snow, fog and low light can affect pedestrian recognition and reduce Automatic Emergency Braking performance for pedestrians.

- Certain environments can impair sensor detection, such as tunnels, lights from oncoming vehicles or reflections from wet roads. Automatic Emergency Braking may issue unnecessary warnings or braking interventions.

The above cautions do not cover every circumstance that may affect normal operation of Automatic Emergency Braking. The system may fail to perform as expected for other reasons, and the driver is responsible for maintaining control of the vehicle at all times.

Lateral Safety Assistance

Lane Departure Warning (LDW)

Lane Departure Warning continuously monitors the vehicle's position relative to lane markings at higher speeds. When the vehicle is about to leave its lane, it warns the driver and may control lateral movement to help keep the vehicle in its lane and improve safety.

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning** Turn Lane Departure Warning on/off and configure related functions on this screen:

- Warning Method: Set Lane Departure Warning to Sound, Vibration or Sound + Vibration.
- Lane Departure Warning sensitivity can be set to Low, Medium or High.

Status	Indicator Lamp
Lane Departure Warning is limited	
Lane Departure Warning is enabled	
Lane Departure Warning Fault Status	

Caution

The system deactivates when vehicle speed is below 65 km/h or above 155 km/h.

Lane Departure Warning may deactivate or be unavailable in the following situations, including but not limited to:

- When vehicle speed is outside the normal operating range.
- When changing lanes or steering too quickly.
- When the driver operates the steering wheel.
- When the accelerator pedal is depressed firmly.
- When the brake pedal is depressed firmly.
- When the hazard warning lamps are switched on.
- When the direction indicator on the side of departure is switched on.
- When the road is too narrow or too wide.
- When driving through a bend with a very small radius.
- The warning function is suppressed when ABS or the vehicle stability system is active.
- When lane markings are too narrow, too wide, damaged, unclear or absent on the departure side.
- When the camera is obstructed or unavailable.

caution

- The warning function can be activated when the lane marking on the corresponding side is detected. The warning function is suppressed if both lane markings are lost.
- If the road has a lane marking on only one side, Lane Departure Warning will issue a warning only on the side where the lane marking is present when the vehicle departs the lane.
- On sharp bends, the driver must actively control the vehicle.
- When lanes are added or merge, the driver must actively control the vehicle.
- In complex traffic environments, such as junctions or congested roads, the driver must actively control the vehicle.
- Lane Departure Warning performance is affected by sloping roads and may be significantly reduced or unavailable on

caution

bends and ramps. On large bends, the driver must actively control the vehicle.

warning

- When using driver assistance, the driver remains responsible for controlling the vehicle and intervening when necessary.
- Lane Departure Warning is an assistance function only and cannot operate normally under all driving, weather, traffic or road conditions.

Blind Spot Detection (BSD) (if equipped)

Blind Spot Detection (BSD) monitors the driver's blind spots on both sides. If a vehicle is detected approaching in the rear-side monitoring area, the system issues a warning to alert the driver to a potential collision risk.

At vehicle speeds of 15 km/h or above, the Blind Spot Detection system monitors the detection zones and detects other vehicles in the exterior rearview mirror blind spots.

Warning Display:

When a target vehicle enters the rear-side blind spot and warning conditions are met, a Level 1 warning is triggered and the indicator in the corresponding exterior rearview mirror illuminates continuously. If the driver then uses the turn signal on that side, a Level 2 warning is triggered: the mirror indicator flashes and an audible warning sounds.

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning** Turn Blind Spot Detection and its audible warning on or off.

Status	Indicator Lamp
Level 1 Warning	Exterior rearview mirror "  " indicator lamp remains illuminated

Status	Indicator Lamp
Level 2 Warning	Exterior rearview mirror "  " indicator lamp flashes
Malfunction Indicator Lamp	Instrument pack "  " indicator lamp remains illuminated

warning

Blind Spot Monitoring cannot accurately identify every hazardous situation and cannot replace the driver's observation and judgement of traffic. The driver remains fully responsible for safe driving and compliance with road traffic laws and regulations.

Door Opening Warning (DOW) (if equipped)

When the vehicle is stationary, if an approaching vehicle, cyclist or pedestrian from either rear side may make door opening unsafe or cause a collision, Door Opening Warning issues an alert to remind you to open the door carefully.

On the infotainment display, go to  → **Driver Assistance** → **Door Opening Warning** Turn Door Opening Warning and its audible warning on or off.

When the vehicle is stationary and a target vehicle enters the Door Opening Warning detection area:

- If no door on that side is opened, the exterior rearview mirror indicator on that side remains illuminated;
- If a door on that side is opened, the exterior rearview mirror indicator on that side flashes and an audible warning sounds.

Status	Indicator Lamp
Level 1 Warning	Exterior rearview mirror "  " indicator lamp remains illuminated
Level 2 Warning	Exterior rearview mirror "  " indicator lamp flashes
Malfunction Indicator Lamp	Instrument pack "  " indicator lamp remains illuminated

 **caution**

- When the indicator on the exterior rearview mirror or door flashes, occupants should make sure there is no approaching vehicle behind before opening the door.
- The system may warn of a nearby vehicle approaching slowly or may not warn of a distant vehicle approaching quickly. Occupants must observe traffic conditions and should not rely excessively on Door Opening Warning.

Blind Spot Assist (if equipped)

Rear Cross Traffic Alert (RCTA)/Rear Cross Traffic Braking (RCTB) (if equipped)

When the vehicle is moving slowly, if a pedestrian or vehicle crosses behind and a collision risk exists with your path, the system warns the driver. If the driver does not take timely steering or braking action, the vehicle may brake automatically to reduce collision severity.

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning** Turn Rear Cross Traffic Alert and its audible warning on/off.

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning** Turn Rear Cross Traffic Braking on/off.

When vehicle speed is below 15 km/h and R is selected, Rear Cross Traffic Alert is active. In other gears, the system is in standby.

When reversing (R selected), if the Blind Spot Assist system detects an approaching pedestrian or vehicle on either side of the vehicle, the exterior rearview mirror "  " yellow indicator lamp remains illuminated/flashes and a warning tone sounds.

Status	Indicator Lamp
Level 1 Warning	Exterior rearview mirror "  " indicator lamp remains illuminated
Level 2 Warning	Exterior rearview mirror "  " indicator lamp flashes
Malfunction Indicator Lamp	Instrument pack "  " indicator lamp remains illuminated

 **warning**

- When using driver assistance, the driver remains responsible for controlling the vehicle and intervening when necessary.
- Rear Cross Traffic Assist is an assistance function only, cannot detect every obstacle, and cannot operate normally under all driving, weather, traffic or road conditions.

Camera System

Rear View Camera (RVC) (if equipped)

The Rear View Camera (RVC) uses a rear-view camera to capture images behind the vehicle

and displays the rear view and dynamic reversing guidelines on the infotainment display to assist safe and easy parking.

Activation Method:

When vehicle speed is below 25 km/h, selecting R automatically opens the parking camera screen and displays the parking view and dynamic reversing guidelines. The guidelines move with steering wheel angle to predict the wheel path while reversing.

Exit Method:

After shifting out of R, the parking camera system exits automatically within 2 seconds.

caution

- Distances are for reference only (for example, on slopes).
- The vehicle-width guide lines and predicted path are wider than the actual path.
- Do not scratch the lens when removing dirt or snow from the camera surface.
- If tyres of a different size are fitted, the displayed projected path may differ from the actual path. Use the mirrors and direct observation to judge the distance to other objects.

warning

- When reversing, make sure the tailgate is securely closed.
- Do not allow images on the display to distract you from surrounding traffic conditions.
- Due to the limited monitoring range, the Rear View Camera (RVC) cannot show areas directly beneath or at the corners of the bumper.
- Take particular care around small children, animals and objects when reversing, as the camera may not detect them.
- Because the rear-view camera uses a wide-angle lens, objects shown by the Rear View Camera (RVC) may appear at

warning

a different distance from their actual distance.

- Do not strike the cameras. They are precision instruments and impact may cause malfunction or damage, which could result in fire or electric shock.
- When pressure-washing the body, do not spray water around the cameras. Water entering a camera may condense on the lens and cause malfunction, fire or electric shock.
- The Rear View Camera (RVC) provides convenience but does not replace correct reversing procedures. When reversing, always look around to make sure it is safe and reverse slowly.
- The rear-view camera lens magnifies and distorts the field of view, so objects shown on the display may differ from their actual appearance or distance. Blind spots and a slight display delay also exist.

Around View Monitor (AVM) (if equipped)

The Around View Monitor system uses four cameras to capture images around the vehicle and displays the surrounding view and guidance lines on the infotainment display to assist safe and easy parking.

Camera Location

- Front camera location: in the front bumper air intake grille.
- Left/right camera location: underside of the left/right exterior rearview mirror.
- Rear camera location: centred above the rear number plate.

Opening the Panoramic View System

1. When vehicle speed is below 25 km/h, on the infotainment display go to **App Centre** → **All Apps** →  **Enter**.
2. When vehicle speed is below 25 km/h, enter the function using the voice assistant or the steering wheel custom button (the custom

button must first be assigned to Around View Monitor).

- Operating a direction indicator opens the corresponding rear-view pop-up; the view can be selected in Settings.
- Shift into R to open the Around View Monitor; shift out of R to exit it.

Caution

In R, neither the view nor the switch can be selected.

- When radar-triggered Around View is enabled, the Around View Monitor opens when the vehicle is too close to an obstacle.


Caution

When the vehicle power mode is switched to OFF or the vehicle speed exceeds 30 km/h, the Around View Monitor system exits.

Caution

Around View Monitor is a convenience aid, but displayed objects do not represent their true size or distance and the images have slight delay and blind spots. It cannot replace driver operation or judgement. Observe the surroundings and drive safely whenever using or switching the function.

Panoramic View System Settings

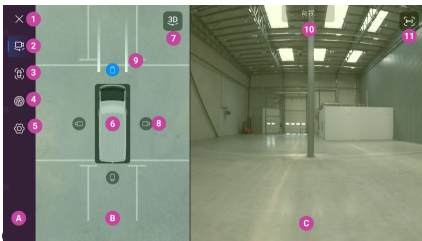

Tap "X" to exit the Around View Monitor.

- Tap "Normal View" to display the normal view.
- Tap "Front/Rear View" to display a dual-side view.

- Tap "Wheel View" to display the auxiliary wheel view.
- Tap "Settings" to enter the settings screen.
 - Radar-triggered Around View: When enabled, a radar warning automatically activates the AVM display.
 - 3D Surround View: when enabled, the first time AVM is opened after the vehicle is powered on, it displays a 360° view around the vehicle from a 3D perspective.
 - 3D Radar Wall: when enabled, the first time AVM is opened after the vehicle is powered on, it displays a 360° view around the vehicle from a 3D perspective.
 - Turn Signal-linked View: When enabled, operating a direction indicator displays the corresponding linked view.
 - Start Assist: when enabled, AVM is activated when the vehicle speed is ≤ 25 km/h and D is selected.
 - Transparent Chassis: when enabled, the vehicle model in the panoramic and viewing areas becomes transparent, and while driving the area beneath the vehicle displays camera images.
- Tap "3D" to switch to the corresponding 3D view.

Parking Assist Sensors (if equipped)

The parking sensor system uses radar sensors to detect obstacles in front of and behind the vehicle. The infotainment system displays obstacle distance and provides audible warnings to assist the driver with safe and easy parking. When vehicle power is on and R is selected, the parking sensors are activated. When an obstacle is detected, the infotainment display indicates obstacle distance using red, orange, yellow and green zones and provides audible warnings.

Caution

The detection distance is the shortest perpendicular distance between the obstacle and the radar sensor.

caution

- The radar sensors do not warn of obstacles outside their detection range.
- When the vehicle moves, be aware that parking sensors on the opposite side may approach other obstacles.


Function Limitations

The parking sensor system may not operate correctly in the following situations:

- When the vehicle is on a steep slope.
- When driving in slushy snow or rain.
- Low objects such as rocks may not be detected.
- Objects higher than the bumper may not be detected.
- Thin objects such as wires, fences and ropes may not be detected.
- When high-frequency radio equipment or an added antenna is in use on the vehicle.
- If the radar sensor surface is frozen, no obstacles can be detected.
- If a radar sensor is covered by dirt, snow or mud, it may not detect obstacles.
- Objects that readily absorb ultrasonic waves, such as soft snow, cotton or sponge, may not be detected.
- There is loud noise near the vehicle, such as horns, motorcycle engines, air brakes on large vehicles or other strong ultrasonic noise sources.
- If multiple parking sensors detect obstacles, the infotainment system displays the relative distance detected by each sensor simultaneously, while the audible warning is based on the nearest obstacle.

Traffic Sign Recognition (TSR)

Traffic Sign Recognition uses the front camera to recognise common traffic signs such as speed limits and no-overtaking signs and displays them on the instrument pack to alert the driver.

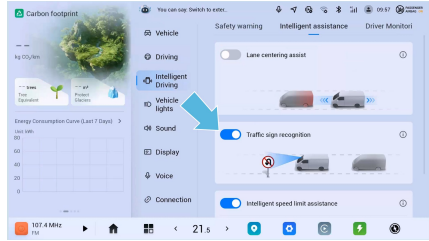

On the infotainment display, go to  → **Driver Assistance** → **Intelligent Assistance** → **Traffic Sign Recognition** to turn this function on/off.

caution

- Traffic Sign Recognition only displays traffic signs and provides reminders; it does not actively intervene in or adjust vehicle behaviour.
- Traffic Sign Recognition is an assistance function and cannot cope with all traffic, weather, visibility, road and vehicle conditions. It cannot replace attentive driving and accurate driver judgement.
- Traffic Sign Recognition information is not always accurate. Always follow actual road signs and conditions and do not rely excessively on information provided by Traffic Sign Recognition.

Intelligent Speed Assistance (ISA)

Intelligent Speed Assistance (ISA) detects road speed-limit signs and obtains speed-limit information from navigation maps, then provides visual or audible prompts to help the driver comply with local limits. If the vehicle exceeds the detected limit, the speed-limit indicator flashes and an audible alert sounds until indicated vehicle speed falls below the detected limit.

On the infotainment display, go to  → **Driver Assistance** → **Intelligent Assistance**, turn this function on/off.

Overspeed Warning and Speed Limit Control are secondary switches. When the master switch is off, both are switched off and greyed out. When

the master switch is on, each can be enabled or disabled manually. If both are off, only speed-limit information prompts remain available.

- **Overspeed Warning:** after the system recognises a speed-limit sign, if vehicle speed exceeds the detected limit it alerts the driver with visual and audible warnings to help comply with local traffic regulations.
- **Speed Control:** using the Front Camera Module (FCM), this function adds intelligent speed-limit adjustment to ACC/ICA. When valid speed-limit information is received and activation conditions are met, the instrument pack asks whether to adjust the limit. After driver confirmation, the set cruise speed is replaced by the recognised valid limit and vehicle speed is controlled accordingly.

Intelligent Speed Assistance (ISA) may not recognise the following situations:

- Faded markings.
- Signs located on a bend.
- Rotated or damaged signs.
- Signs positioned high above the road.
- Signs not positioned in accordance with road regulations.
- Signs that are fully or partly obstructed or located in concealed positions.
- Signs fully or partly covered by frost, snow or dust.

warning

- The Speed Limit Assistance system is camera-based and is greatly affected by weather and lighting conditions. It is not suitable for all situations.
- Speed Limit Assistance is a driver assistance function only. Speed-limit and vehicle-speed information is for reference and cannot replace driver observation. Obstructed cameras or radar, incorrect/missing map speed limits, complex roads and severe weather may affect operation. The driver must always monitor vehicle speed and road limits and control speed appropriately.

Lane Keeping Assist (LKA)

Building on Lane Departure Warning (LDW), Lane Keeping Assist (LKA) controls the steering system, continuously monitoring the vehicle's position relative to lane markings and applying lateral control continuously or when necessary to keep the vehicle in its lane. If the driver unintentionally departs the lane, LKA provides steering assistance to help prevent the vehicle leaving the lane.

On the infotainment display, go to  → **Driver Assistance** → **Safety Warning** → **Lane Keeping Assist**, tap to turn this function on or off.

When vehicle speed is 60–130 km/h and the lane markings ahead are clearly visible, Lane Keeping Assist may activate if the vehicle unintentionally departs the lane.

Lane Keeping Assist cannot operate under any of the following conditions, including but not limited to:

- Vehicle speed < 55 km/h or > 135 km/h
- Lane width < 2.5 m for more than 3 seconds
- Lane markings not detected
- ABS or ESP activation
- ABS or ESP fault
- The direction indicator on the relevant side is on and Blind Spot Detection on that side is not issuing a warning
- Hazard warning lamps are on
- Gear position is not D
- Towing Mode Activation

12 V Power Supply

A 12 V power outlet in the centre console can power small in-vehicle electronic devices.



This interface is located above the centre console storage area. Rated output is 12 V, with a maximum output power of 120 W (maximum current 10 A). Use only compliant in-vehicle electrical equipment.

caution

- Keep the protective cover closed when the 12 V interface is not in use to prevent liquid or metal objects entering and causing a short circuit. If liquid enters, do not connect electrical equipment and have the interface inspected at an Authorised Service Centre promptly.
- Only compliant electrical devices whose power consumption does not exceed the rated limit of the outlet may be used.

caution

- Keep the protective cover closed when the interface is not in use to prevent liquid or metal objects entering and causing a short circuit. If liquid enters, do not connect electrical equipment and have the interface inspected at an Authorised Service Centre promptly.
- Only compliant electrical devices whose power consumption does not exceed the rated limit of the outlet may be used.

warning

- Do not insert fingers or metal objects into the power outlet. Doing so may cause a short circuit or electric shock, resulting in personal injury.
- Do not connect electrical equipment exceeding the rated power, damaged wiring or modified multi-way sockets. Doing so may burn the interface or wiring and may cause a vehicle fire.
- Do not use this interface to supply power for an extended period after the vehicle is switched off. Continuous power consumption may discharge the low-voltage battery and prevent normal vehicle starting.
- Do not connect life-support or precision medical equipment. Children must not operate this power outlet unsupervised.

Wireless Charging (if equipped)



Once the vehicle is powered on and ready, place a device that supports the wireless charging standard flat in the wireless charging pad area to start charging automatically.

Caution

- This function supports only electronic devices compatible with the standard wireless charging protocol.
- An excessively thick device case, incorrect placement or foreign objects in the charging area can reduce charging efficiency or prevent charging.

Caution

- Some third-party devices and magnetic accessories may have compatibility issues, resulting in charging being unavailable at certain positions.

caution

- Do not place coins, metal keys, metal rings, vehicle keys or other metal objects in the charging area together with the charging device. Phone cases with magnetic components such as MagSafe can cause local overheating and permanent damage to the device or charging pad.
- Do not place RF cards such as bank cards, transport cards, ID cards, NFC access cards or vehicle key cards in the charging area together with the device. The electromagnetic field may damage card chips or circuitry.
- A rise in temperature of the charging pad and device during charging is normal. If the temperature rises rapidly, remove the device immediately and retry after it has cooled sufficiently.

warning


- Persons with pacemakers or implanted electronic medical devices should not keep such devices close to the wireless charging area for extended periods, as electromagnetic fields may interfere with normal operation and create health risks.
- Do not leave metal objects in the charging area for extended periods or leave charging unattended for a long time, as overheating and fire may result. Do not continue using this function after the vehicle is switched off, to avoid discharging the low-voltage battery.
- Do not allow children to touch or operate the wireless charging pad unsupervised,

warning

as misplaced metal objects may overheat and cause burns.


Power Outlets

The vehicle is equipped with multiple integrated Type-A (USB) and Type-C ports for data transfer, smartphone connectivity and charging/powering small electronic devices.

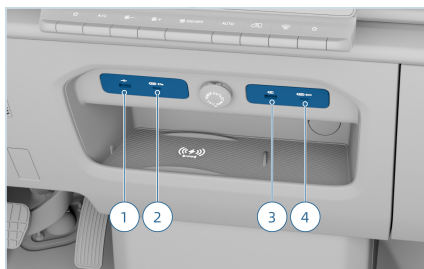

The centre console storage area contains two Type-A and two Type-C ports, supporting USB flash drive data reading, smartphone connectivity and charging of low-power devices. Port specifications are as follows:

1. Type-A standard data and power interface.
2. Type-C fast-charging port, rated maximum output power 27 W.
3. Type-A standard data and power interface.
4. Type-C fast-charging port, rated maximum output power 60 W.

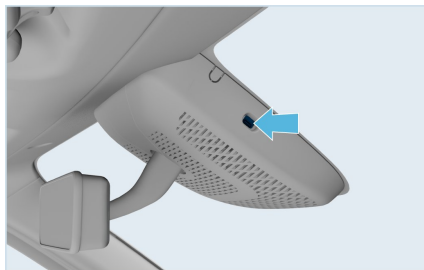

A dedicated Type-C power port is provided on the side of the interior rearview mirror cover. It

is intended only to power a dash cam and has a maximum rated output of 27 W.

caution

- Each interface has a rated maximum output power. Do not connect electrical devices that exceed the rated power.
- Do not use damaged or aged cables, modified extension leads or multi-way split sockets with the interface, as these may cause poor contact or circuit overload.
- If liquid is accidentally spilled onto the port, stop using it immediately. Wait until the port is completely dry or have it inspected at an Authorised Service Centre.

warning

- Do not connect high-power heating devices such as electric cups or heated seat cushions through this type of interface. Circuit overload may burn the wiring harness and may cause a vehicle fire.
- Do not continue drawing power for a long time after the vehicle is switched off. Prolonged power consumption may discharge the low-voltage battery and prevent the vehicle from powering on.
- Persons with pacemakers or implanted electronic medical devices should not keep such devices close to the interface or connecting wiring for extended periods, as electromagnetic fields may interfere with normal operation of medical devices.
- Do not allow children to insert metal or conductive objects into the interface, as short circuits or electric shock may cause burns or injury.
- This interface does not support life-support or precision medical equipment. Do not connect such devices.

Convenience Power Supply

Three 220 V AC convenience sockets are provided in the rear cargo area, with a combined peak system output of 6600 W at AC 220 V/50 Hz. They are intended only for low-power capacitive electronic equipment such as laptops and audio/video equipment. Do not connect high-power resistive heating appliances.



On the infotainment display, go to **Infotainment Display**→**Energy Management**→**Charging and Discharging Settings**, set the charging/discharging lower limit. This setting applies for one power cycle only and resets automatically when the vehicle exits READY. It must be enabled manually again after the next power-on.

Caution

- Use only cables and electrical equipment with mandatory 3C certification. Non-compliant products may damage the socket or the vehicle high-voltage system.
- Do not allow liquid to splash or enter the outlet during use, as this may trigger short-circuit protection.
- When traction battery state of charge falls below the protection threshold, the system automatically cuts off the 220 V output. Recharge the battery to a safe level before enabling discharging again.
- During AC charging, the vehicle's convenience power supplies automatically limit output power. During three-phase fast charging, the socket may be switched off completely so the vehicle system can prioritise traction battery charging.

Caution

- When used in very hot or very cold conditions, the system automatically reduces discharge power according to battery temperature. This function must not be used at extreme temperatures.

caution

- When the outlet is not in use, fit the dust cover to prevent metal fragments or debris entering and causing a short circuit.
- If the socket triggers automatic power-off protection, remove all external loads immediately and allow it to cool for 5 minutes before trying again. If overload protection is triggered repeatedly, have the high-voltage system inspected at an Authorised Service Centre.
- A slight rise in temperature of the traction battery and socket during discharging is normal. Stop use immediately if abnormal overheating occurs.

Caution

A slight rise in temperature of the traction battery and socket during discharging is normal. Stop use immediately if abnormal overheating occurs.

warning

- Do not allow children to touch the socket, power cable or external electrical equipment unattended. The 220 V AC supply poses a risk of fatal electric shock.
- The total load must not exceed the system peak of 6600 W, and the load on any single socket must not exceed 2200 W. Excessive power may burn high-voltage wiring and cause a vehicle fire.
- Do not use the 220 V AC socket in rain, during car washing, when water has accumulated in the cargo compartment

warning

or in very humid conditions. Moisture ingress may cause electrical leakage or electric shock.

- Do not connect high-power resistive heating equipment such as electric heaters, induction cookers, electric pots, welding machines or kettles. Do not daisy-chain multi-way power strips or use damaged or aged extension leads.
- Do not leave external discharging enabled for a long time while the vehicle is unattended, as sustained high temperature may create a fire hazard. Discharging while the switched-off vehicle is stationary rapidly consumes traction battery energy and may leave the vehicle unable to drive.
- Persons with pacemakers or implanted electronic medical devices should not remain close to the AC socket or cables, as electromagnetic fields may interfere with normal operation of medical devices.
- Do not use this outlet to power life-support or precision medical equipment.

Charging Port Flap

Operating Method



Open: Press the right side of the charging port flap; the flap will pop open automatically.

Close: With the charging port flap open, push the flap until it is fully closed.

caution

- Open and close the charging port flap only by pressing it as designed. Do not pull, pry or force the flap, as this may break the internal clips and prevent the flap from closing correctly.
- If the charging port flap is frozen and stuck in low winter temperatures, do not force or pry it open. Wait until the ice has melted naturally before operating it.
- After charging, make sure the charging port flap is fully closed. Sand, mud or rainwater entering the port may corrode the metal contacts and cause charging faults.
- If the charging port flap cannot open or closes with resistance, do not disassemble or repair it yourself. Contact an Authorised Service Centre for inspection.

warning

- Never open the charging port flap while the vehicle is moving. At high speeds, the flap could detach and cause a traffic accident.
- Before charging, park the vehicle securely, shift into P (Park), apply the parking brake and power off the vehicle. Working on an energised system may cause electric shock or fire.
- Do not touch the charging port with wet hands. In rain or high humidity, do not leave the charging port flap open for long periods. Water ingress may cause a short circuit or fire.
- Never insert metal objects, paper scraps or other foreign objects into the charging port, as this can easily cause a short circuit and fire.
- Children must be supervised at all times. Never allow a child to touch the charging port or charging connector without adult supervision, to prevent electric shock or burns.

Vehicle Charging Instructions

To maintain the traction battery and vehicle in good operating condition, charge the vehicle promptly when the state of charge is low. Do not leave the vehicle parked for a long time at a low state of charge, as this may cause irreversible battery degradation.


Charging Safety Warnings

This section contains mandatory requirements under electric vehicle safety regulations. Failure to follow them may result in electric shock, fire or battery damage.


- The charging area must be dry and well ventilated. Do not charge the vehicle in rain or immediately after the vehicle has been immersed in water. Keep the charging area away from open flames and high-temperature heat sources.
- Do not charge the vehicle in areas where petrol, paint or other flammable or explosive hazardous materials are stored or used.
- Do not modify or disassemble high-voltage charging components such as the charging connector, vehicle charging port or external charging equipment. Unauthorised modifications may cause charging failure, short circuits or even a vehicle fire.
- Before charging, inspect the charging cable. Do not use it if the insulation or housing is cracked or damaged. If the cable is damaged, replace it only with an approved genuine part. Do not wrap it with tape or continue using it after a temporary repair.
- Before charging, inspect the external charging equipment. Do not start charging if the equipment housing is damaged, metal parts are corroded, the unit is wet, or foreign objects are trapped inside.
- Before charging, inspect the vehicle charging port. There must be no standing water or debris inside, and the metal terminals must show no signs of rust, overheating damage or corrosion. If corrosion is found, stop charging and have the vehicle inspected at an Authorised Service Centre.

- If severe weather occurs during charging (strong wind, rain, snow or thunderstorms), promptly make sure the charging connector remains securely connected and the equipment stays dry. During thunderstorms, do not touch the charging cable or metal parts of the vehicle to avoid electric shock from lightning.
- If you notice a burnt or pungent smell from the vehicle during charging, stop charging immediately, disconnect the external power supply and contact an Authorised Service Centre.
- Do not bend, squeeze or run over the charging cable during charging, as this may break the internal conductors and cause a high-voltage fault.
- Do not unplug the charging connector until the charging process has fully ended. Doing so may create a high-voltage arc at the charging port, causing burns or component damage.
- Children and persons who lack full legal capacity must not operate charging equipment independently. An adult must supervise the entire charging process (mandatory requirement in the EU and Gulf regions).
- Do not touch the metal terminals inside the charging port while the vehicle is charging. There is a risk of high-voltage electric shock.
- After charging, do not plug in or unplug the charging connector with wet hands, as water may conduct electricity and cause electric shock.
- Before driving, make sure the charging connector is fully unplugged and the charging port dust cover is fully closed and latched.

Charging Ports

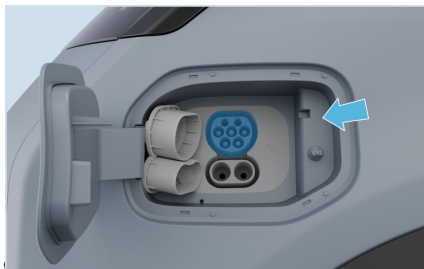

AC Charging Port

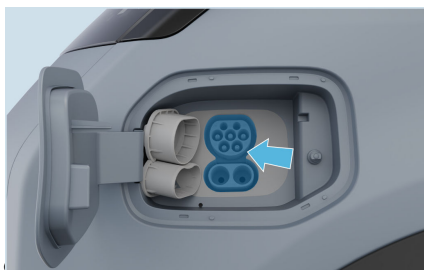

DC Fast Charging Port

Charging Port Dust Cover

The charging port incorporates separate dust covers. During charging, any port not connected to a charging connector is covered by its dust cover to help prevent dust, water and debris from entering and to protect the metal terminals from corrosion.

Vehicle Charging - AC Charging

The vehicle supports AC charging from home chargers and public AC charging stations.

1. Stop the vehicle, shift into P (Park) and apply the electronic parking brake.
2. Open the charging port flap and remove the AC charging port dust cap.
3. Remove the AC charging connector, align it with the AC charging port and insert it fully. Charging starts automatically after vehicle recognition.

4. After charging is complete, unlock the vehicle to release the charging connector electronic lock and unplug the connector. Refit the AC charging port dust cap and close the charging port flap.

caution

- During normal charging, if charging is stopped by an operation from the vehicle or cloud service, the charging system locks that charging session. Disconnect and reconnect the charging connector before the next normal charging session can begin.
- Use only AC charging stations that comply with applicable national standards. In some regions, GSO grounding and high-temperature resistance requirements must also be met.

warning

- Do not pull out the charging connector directly during charging. Doing so may damage the charging port or create an electric shock hazard, resulting in personal injury.
- If abnormal noise, smoke, interface overheating or an unusual smell occurs during charging, stop charging through the infotainment system or charging station and wait until the equipment is fully powered off and cooled before handling it. Do not forcibly unplug the connector.
- Never touch the metal terminals of the charging connector with wet hands. Do not charge the vehicle if the charging station grounding is faulty.

Vehicle Charging - DC Fast Charging

This vehicle can only use public DC fast-charging stations for fast charging. Household

AC charging stations do not support fast charging.

1. Stop the vehicle, shift into P (Park) and apply the electronic parking brake.
2. Open the charging port flap and remove the DC fast-charging port dust cap.
3. Remove the DC fast-charging connector, align it with the DC charging port and insert it fully. Charging starts automatically after vehicle recognition.
4. After charging is complete, unlock the vehicle to release the charging connector electronic lock and unplug the connector. Refit the DC fast-charging port dust cap and close the charging port flap.

caution

- For vehicles with a 98 kWh battery pack, use a high-voltage DC charging station with an output voltage greater than 650 V for efficient charging.
- Use only DC fast-charging stations that comply with applicable national DC standards. In some regions, GSO grounding and high-temperature resistance requirements must also be met.

warning

- Do not pull out the charging connector before the DC fast-charging process has fully stopped. Forcibly unplugging it may damage the vehicle DC fast-charging port and charging station and creates a high-voltage electric shock hazard that can cause burns or other serious injury.
- If abnormal noise, smoke, interface overheating, unusual smells or an infotainment fault pop-up occurs during charging, stop charging through the charging station or infotainment display first. Wait until the equipment is fully powered off and cooled before handling

warning

it. Do not pull the charging connector forcefully.

- Do not perform DC fast charging for extended periods in an enclosed, unventilated garage. Heat generated during charging must be dissipated.

Vehicle State of Charge and Charging Display

Whether the vehicle is moving or stationary, the instrument pack and infotainment display can show traction battery state of charge, charging/discharging status and energy consumption data.

Instrument Pack State-of-charge Icon Levels

- : indicates that the traction battery state of charge is > 20%;
- : indicates that the traction battery state of charge is ≤ 20%;
- : indicates that the traction battery state of charge is ≤ 10%.

caution

In high-temperature environments (ambient temperature >45°C), a stationary vehicle loses traction battery charge more quickly. For long-term storage, maintain a state of charge of 30%–70%.

Energy Management

Charging and Discharging Settings

On the infotainment display, go to **Energy Management**→**Charging and Discharging Settings**, enter the Charging/Discharging Settings screen. During vehicle charging, tap the vehicle state-of-charge display on the right to view charging progress.

Trip Records

On the infotainment display, go to **Energy Management**→**Trip Records**, enter the Trip Records screen, which displays trip mileage, total mileage, distance since last charging and other information.


Energy Consumption Report

On the infotainment display, go to **Energy Management**→**Energy Consumption Report**, enter the Energy Consumption Report screen to view daily or weekly electricity consumption.

Scheduled Charging

Scheduled Charging can help you use electricity more efficiently. If electricity prices are lower during a certain period, you can schedule vehicle charging for that period.

1. On the infotainment display, go to →→**Charging and Discharging Settings**Enter the settings screen.

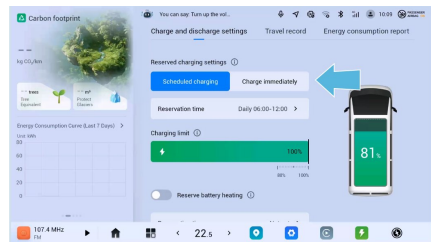

2. Tap Scheduled Charging and set the desired charging time in the time-setting area below.

caution

- Use an AC charging station that meets the applicable standards.
- Strictly follow the operating procedure of the AC charging station when starting or stopping charging. Do not connect or disconnect the AC charging connector at will during charging.

Charging with the Portable Charging Connector (if equipped)

Charging Operation

1. Stop the vehicle, shift into P (Park) and apply the electronic parking brake.
2. Open the charging port flap and remove the AC charging port dust cap.
3. Insert the portable charging connector smoothly and fully into the AC charging

port. A locking “click” indicates that it is fully inserted and locked.

4. Connect the mains plug of the portable charging connector to a 220 V household wall socket with reliable protective earthing. AC charging starts automatically after the device self-check is complete.

Operations After Charging

1. Stop charging on the infotainment display and confirm that charging has ended.
2. Unplug the mains plug from the socket, then unplug the charging connector from the vehicle.
3. Refit the AC charging port dust cap and close the charging port flap.
4. Straighten all charging cables completely and store them in the vehicle storage area.

Caution

If time-of-use electricity pricing applies locally, on the infotainment display go to **Charging and Discharging Settings** → **Charging Settings** enable Scheduled Charging and set charging to start automatically during off-peak electricity periods to reduce charging cost.

Caution

Before charging, fully uncoil and straighten the charging cable. Coiled or piled cables prevent heat dissipation; prolonged high temperature can damage insulation and cause short circuit or fire.

Vehicle-to-Load (V2L) Discharging

This vehicle supports Vehicle-to-Load (V2L) external discharging. A dedicated V2L discharge connector is connected to the vehicle's AC charging port to supply electrical equipment. The complete operating procedure is as follows:

1. Stop the vehicle, select P (Park) and apply the parking brake. If D or R is selected, the V2L

function is automatically locked and cannot be enabled.

2. Open the charging port flap and remove the AC charging port dust cap.
3. Insert the V2L connector into the AC charging port. A click indicates that it is fully connected and locked.
4. After the connector is recognised, the infotainment display automatically shows a [Start external discharging?] pop-up. Tap [Discharge] to confirm. When power output starts, the AC charging port indicator illuminates blue continuously.
5. After discharging is complete, on the infotainment display go to  →  → **Charging and Discharging Settings** screen, tap to stop external discharging. A pop-up message displays [Discharging ended. Please unplug the connector], and the vehicle cuts off external power output.
6. Press the release button on the V2L connector handle and unplug the connector after the electronic lock releases.

Caution

If electronic release fails and the charging connector cannot be removed, pull the emergency mechanical release for the vehicle AC charging port.

7. Refit the AC charging port dust cap and close the charging port flap.

Caution

- If the total external load is below 500 W, the vehicle cannot start external discharging. The total external load must also not exceed the vehicle's rated discharge power limit.
- The dedicated V2L connector is optional and must be purchased separately. Contact an Authorised Service Centre for details.
- Before starting discharging, on the infotainment display go to **Energy Management** → **Charging and Discharging**

Caution

Settings On the screen, confirm that the traction battery state of charge is above the preset discharge limit.

caution

- Do not use V2L external discharging while the vehicle is charging. Charging and discharging functions cannot operate simultaneously.
- Do not continue discharging when the traction battery state of charge falls below the customised discharge limit. Deep discharge can permanently damage battery cells and significantly shorten traction battery life.
- During discharging, do not place the discharge connector socket or external electrical equipment in the front compartment, near the tyres or inside an enclosed container, as high temperature may damage equipment and create electric shock or fire hazards.
- V2L outputs 220 V AC high voltage. Never touch metal terminals of the discharge socket with wet hands. Children must not touch the discharge connector, cable or socket at any time.
- Do not use external discharging outdoors during heavy rain, over large areas of standing water or where flammable or explosive materials are stored. In dusty or sandy areas, thoroughly clean the discharge connector terminals before use to prevent short circuits.
- When the ambient temperature is above 45°C, prolonged external discharging is not recommended. High temperature may trigger battery overheat protection and automatically cut off the power supply.
- Do not lengthen, modify or cut the original V2L discharge cable. Stop using it immediately if the cable is cracked, swollen or abnormally hot.


caution

- If an external load emits an unusual smell, becomes abnormally hot or trips a circuit breaker, first switch off the vehicle discharging function, then disconnect the external device. Do not unplug the connector while live.

Discharging Limit

You can set a minimum traction battery discharge threshold from 20% up to the current state of charge (maximum 100%). When the battery reaches the set limit, the vehicle automatically stops external discharging to protect against deep discharge.

On the infotainment display, go to  →  → **Charging and Discharging Settings** screen to configure the setting.

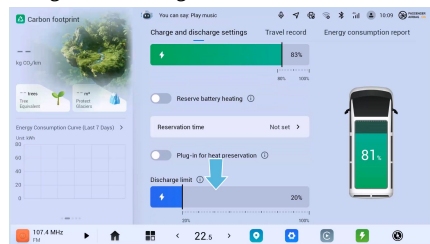

Maintenance Notes

Vehicle maintenance is preventive work performed at specified intervals, including inspection, cleaning, fluid replenishment, lubrication, adjustment and component replacement. Correct scheduled maintenance helps maintain stable, optimum vehicle performance and provides the following benefits:

- Maintains stable vehicle operation and helps ensure powertrain and electronic control functions remain available;
- Extends the service life of the vehicle, electric powertrain systems and core components, helping preserve the vehicle's overall value;
- Improves overall vehicle energy efficiency, reduces energy consumption and slows abnormal component and tyre wear;
- Identify ageing components and system abnormalities early to eliminate potential faults;
- Helps ensure driving and high-voltage electrical safety and provides a stable, reliable driving experience.

caution

Failure to follow the manual's maintenance schedule may cause system faults, accelerate component wear, increase long-term running costs and create driving or high-voltage electric shock hazards. High-voltage battery, motor and electronic-control systems must be serviced only by certified technicians at an Authorised Service Centre; do not disassemble or modify them yourself.

Failure to maintain the vehicle correctly and on schedule may cause faults, affect function performance, increase running costs and create safety hazards. We strongly recommend following the maintenance schedule in this manual and visiting an Authorised Service Centre regularly, where genuine parts, professional

repair and maintenance, paint repair and other quality services are available.

Routine Maintenance

This manual provides the most appropriate and detailed vehicle maintenance schedule. Following this schedule consistently will help keep your vehicle in optimum condition.

caution

- Vehicle damage or faults caused by improper maintenance are not covered by the warranty.
- If the vehicle is used for prolonged periods under extreme operating conditions or harsh environments, such as high temperatures, severe cold or dusty conditions, increase the maintenance frequency as appropriate.


Front Wiper Blade Replacement

Maintenance and Inspection Requirements

Regularly clean and inspect the edges of the front wiper blade rubber for cracks, hardening, roughness or other damage. Replace the blade immediately if any damage is found to prevent scratching the windscreen during wiping.

Replacement Procedure

1. Turn off all wiper controls and shift the vehicle into P.
2. Hold the wiper arm and slowly lift it away from the windscreen.
3. Press the blue retaining clip in the centre of the wiper blade and pull the old blade outward to remove it.

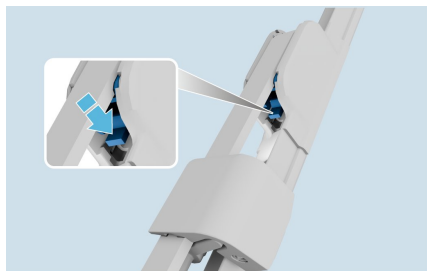

4. Align the new wiper blade with the slot and push it inward until the retaining clip engages automatically. Gently pull the wiper blade to make sure it is secure.

caution

- When lifting the metal wiper arm, keep hold of it throughout the operation. Do not release it midway, as it may spring back and strike the windscreen, causing breakage or scratches.
- Do not forcefully bend or twist the metal wiper arm. Deformation may cause juddering, missed wiping or abnormal noise.
- Take care not to trap your hands in the wiper arms during operation.
- Do not wipe the wiper rubber with corrosive chemicals such as petrol or solvents. Clean it only with clean water or a dedicated vehicle glass cleaner.
- If the windows are iced or snow-covered in winter, melt the ice/snow before operating the wipers. Forced dry wiping may tear the rubber blades.

Testing After Replacement

After installation, operate the wipers at low speed, high speed and intermittent settings to make sure there is no judder, abnormal noise or missed wiping area.

Caution

Dispose of replaced rubber wiper blades in accordance with local waste-sorting and

Caution

recycling regulations. Do not discard them improperly.

Adding Windscreen Washer Fluid

The washer fluid reservoir is located on the right side of the front compartment. When the washer fluid level is low, a message will appear on the instrument pack. Add approved washer fluid promptly.

1. Open **Bonnet**.



2. Open the washer fluid reservoir cap.
3. Slowly add genuine approved windscreen washer fluid. Do not overfill; leave a small amount of space below the filler neck to allow for thermal expansion and prevent overflow.
4. Close the washer fluid reservoir cap and make sure it is secure and there is no leakage.

Caution

When adding washer fluid, pour slowly into the reservoir opening to avoid splashing. If washer fluid is spilled on components in the front compartment or on painted body surfaces, immediately rinse and wipe the affected area thoroughly with clean water to prevent corrosion or ageing.

caution

- Before adding washer fluid, clean sand and dust from around the filler opening to prevent foreign matter from entering the reservoir and blocking the lines or washer nozzles.
- Use only windscreen washer fluid approved for the vehicle. Do not mix water or household cleaners to make washer fluid, and do not mix washer fluids of different brands. Mixing fluids may produce sediment, causing streaking and blocking the lines.
- Never use other acidic or alkaline liquids in place of the specified washer fluid. Doing so may corrode the washer pump and rubber hoses and cause permanent damage.
- Do not operate the windscreen washer when the reservoir is empty. Running the pump dry may burn out the washer pump.
- Check regularly that the washer nozzles are clear. If blocked, gently clear them with a fine, soft needle. Do not use hard or sharp tools.
- Before winter, replace the washer fluid with a winter-grade fluid suitable for the expected low temperatures to prevent freezing, reservoir cracking or blocked lines.

warning

Windscreen washer fluid contains irritating chemicals such as ethylene glycol. Do not drink it. Avoid prolonged skin contact. If it gets into your eyes, rinse immediately with plenty of clean water and seek medical attention. Keep it out of reach of children.

Adding Coolant

Coolant provides freeze protection, high-temperature protection and corrosion protection for the cooling circuit. Maintaining the correct

level is essential for stable operation of the vehicle power system.

Use only coolant of the officially approved specification for this vehicle. For the specific type and capacity, refer to “Specifications and Parameters” in the “[Recommended Fluids and Capacities](#)”.

Coolant Level Check

warning

Allow the coolant to cool completely before checking the level. Never open the expansion tank cap when the system is hot.

1. Open [Bonnet](#).
2. Locate the coolant expansion tank and visually check the fluid level.



3. If the level is below the MIN mark, immediately visit an Authorised Service Centre for a cooling-system leak inspection. Qualified personnel should top up coolant so the level remains between MIN and MAX.

Caution

- Do not remove the coolant expansion tank pressure cap yourself. Coolant filling and topping-up must only be performed by qualified personnel at an Authorised Service Centre.
- Before winter, have the cooling system antifreeze protection checked thoroughly at an Authorised Service Centre. Make sure the coolant freezing point is suitable for the lowest local winter temperature to

Caution

prevent freezing damage to the cooling circuit.

caution

- The coolant reservoir contains high-pressure, high-temperature fluid. Opening the cap at this time may cause hot coolant to spray out violently and result in severe burns.
- Use only original coolant of the specified type. Do not mix different brands or formulations and do not dilute coolant with tap water. Mixing can form scale or deposits that block coolant passages and cause overheating.
- Coolant contains toxic ethylene glycol. Do not drink it. Avoid prolonged skin contact. If it enters the eyes, rinse continuously with plenty of clean water and seek medical attention promptly. Store it out of the reach of children.
- If coolant is spilled onto paintwork or rubber/plastic components in the front compartment, immediately rinse and wipe the area with clean water to prevent chemical corrosion, component ageing or paint damage.
- If the coolant level repeatedly falls below the MIN mark within a short period, the cooling system may be leaking. Do not continue driving for an extended period; contact an Authorised Service Centre for inspection and repair as soon as possible.

Caution

Used coolant is hazardous waste and must not be poured onto soil or into drains. All waste coolant and empty containers must be handed to an Authorised Service Centre for disposal in accordance with local hazardous-waste regulations.

Adding Brake Fluid

If brake fluid falls below the normal range, the brake system warning indicator may illuminate or a driving warning may be displayed. Slow down smoothly, pull over safely and do not continue driving. Contact an Authorised Service Centre immediately for repair.

Brake Fluid Level Check

warning

Before working on components in the front compartment, power off the vehicle to prevent electrical injury.

1. Open the bonnet.
2. Locate the brake fluid reservoir and visually check the fluid level.



3. If the level is below the MIN mark, immediately visit an Authorised Service Centre to check the cooling system for leaks. Qualified personnel should top up the specified fluid so the level remains between MIN and MAX.

warning

- The braking system is directly related to driving safety, and brake fluid inspection or topping-up is professional work. Users without appropriate qualifications and special tools must not remove the reservoir cap or add brake fluid. Incorrect operation can directly cause brake failure and a serious accident.

 warning

- Always power off the vehicle before working in the front compartment. Working on an energised vehicle creates risks of electric shock and unintended component movement.
- If brake pedal travel increases or brake fluid is consumed rapidly over a short period, the brake circuit may be leaking. Continued driving can greatly increase braking distance and, in extreme cases, cause complete brake failure. Stop immediately and arrange repair.
- Brake fluid is a toxic and corrosive hazardous chemical. Keep the reservoir sealed at all times and out of the reach of children. If swallowed, seek medical attention immediately.
- If brake fluid contacts the skin or splashes into the eyes, rinse the affected area continuously with plenty of running water. Seek medical attention promptly if severe discomfort persists.
- Brake fluid is highly corrosive. If it spills onto paintwork or rubber/plastic components in the front compartment, immediately rinse and wipe thoroughly with clean water to prevent corrosion, ageing or permanent whitening damage to the paint.
- Brake fluid readily absorbs moisture from the air. Opening the reservoir unnecessarily lowers its boiling point and may cause vapour lock and brake failure during high-speed or long downhill braking. Do not mix brake fluids of different DOT specifications or brands, as the mixture may corrode brake lines.

 Caution

Used brake fluid is hazardous industrial waste and must not be poured onto soil or into drains. All waste brake fluid and empty containers must be handed to an Authorised Service Centre for recycling and disposal

 Caution

in accordance with local hazardous-waste regulations.

Tyre Inspection and Maintenance

Tyres have a major influence on vehicle handling. Tyre type, size, pressure, speed rating and correct maintenance are important factors in vehicle performance.


Correct tyre pressure and good driving habits help extend tyre service life.

- Check the tyre pressures regularly.
- Regularly check the tyres for abnormal wear or damage, such as cuts or cracks.
- Do not allow the tyres to contact grease, lubricating oil or fuel.
- Avoid sudden steering or rapid acceleration.
- Store removed wheels or tyres in a cool, dry place wherever possible. Do not store them close to corrosive solvents, petrol, lubricating oil or similar substances.

 warning

- Defective tyres create a driving hazard. If a tyre is damaged, excessively worn or has abnormal pressure, do not drive the vehicle and contact an Authorised Service Centre for inspection and repair as soon as possible.
- Pay close attention to tyre condition while driving and regularly inspect the tread and sidewalls for deformation or bulges, abnormal wear, cracks, punctures or embedded nails.

Tyre Wear

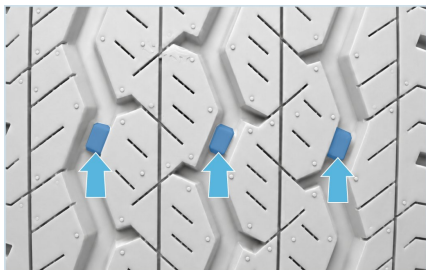

The tread wear indicator is a narrow raised bar across a longitudinal groove in the tyre tread. The tyre sidewall has a tread-wear indicator symbol. Replace the tyre as soon as the tread surface is level with the wear indicator.

warning

As tyre tread wears, grip is reduced and vehicle handling may be affected.


caution

- Do not mix tyres of different manufacturers, models or tread patterns. Also, do not mix tyres with significantly different levels of tread wear.
- Do not mix tyres of different constructions (radial, belted-bias or bias-ply tyres).
- Do not mix summer, all-season and winter tyres.

Caution

Tyre pressure changes with temperature. Check tyre pressures before driving, especially before a long journey. When inflating tyres, always inflate them to the pressure specified on the tyre pressure label.

Tyre Rotation

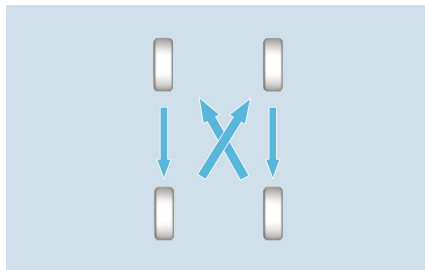

To extend tread life, maintain traction and stable handling, and ensure even use of all wheels, it is recommended that the wheels be rotated periodically.

caution

- Front-to-rear tyre rotation is permitted only when the front and rear tyres are the same size.
- Whether tyres are rotated front-to-rear or crosswise depends on their actual wear condition.
- Because the recommended tyre pressures differ between the front and rear tyres, check and adjust the pressure of each tyre after tyre rotation.
- After rotating or replacing a wheel, or replacing a tyre pressure monitoring sensor, the tyre pressure sensor must be paired again. Contact an Authorised Service Centre.

Tyre Pressure Monitoring System

The vehicle is equipped with a Tyre Pressure Monitoring System that monitors each tyre in real time. The instrument pack displays individual tyre pressures. If tyre pressure is too low/high or tyre temperature is too high, the tyre pressure warning indicator illuminates.

warning

Tyre pressures outside the normal range can cause tyre overheating, cracking, tread

 warning

separation, blowout or unexpected loss of vehicle control, increasing the risk of accident or injury. Underinflation also reduces driving range and tyre life.

 Caution

- Tyre pressure changes with temperature. Check tyre pressures before driving, especially before a long journey.
- When inflating a tyre, inflate it to the pressure specified on the tyre pressure label.

Winter Tyres

Before driving on icy or snow-covered roads, fit winter tyres to the vehicle. All four wheels must use winter tyres of the same brand, construction and tread pattern. Contact an Authorised Service Centre for winter tyre recommendations.

 caution

- When using winter tyres, maintain adequate tread depth. Insufficient tread depth reduces grip.
- On dry roads, winter tyres may provide less grip than the original tyres.

Snow Chains

When driving in harsh winter conditions such as snow-covered or icy roads, snow chains can increase tyre grip and reduce skidding. Remove the snow chains immediately when entering a road without snow or ice.

 caution

Use partial-coverage snow chains with a thickness of less than 15 mm. Thicker chains may interfere with components around the tyre and cause damage.

Snow Chain Installation Position	Front Wheels
Tyre Size Compatible with Snow Chains	215/75R16LT
Wheel Rim Size Compatible with Snow Chains	16×6.5J
Snow Chain Thickness	< 15mm
Snow Chain Type	Partial-coverage Snow Chain

 caution

- Incorrect snow chains may damage the tyres, wheels and braking system. Carefully check the original tyre specifications and the snow-chain manufacturer's instructions.
- Do not exceed 50 km/h or the speed limit specified by the snow-chain manufacturer, whichever is lower.
- Drive carefully when snow chains are fitted. Avoid sharp turns, hard braking, road humps, potholes and wheel lock-up, as these may adversely affect the vehicle.
- When using snow chains, comply with applicable local regulations.
- Incorrect use of snow chains may seriously damage the vehicle and may cause an accident.

Brake Pad and Brake Disc Inspection and Maintenance

The brake pads are equipped with wear indicators. When a pad reaches its wear limit, the indicator contacts the brake disc and produces a high-pitched scraping sound. If this occurs, have the vehicle inspected at an Authorised Service Centre.

Brake pad and disc wear depends greatly on driving style and operating conditions, so wear cannot be determined solely by mileage. Inspect brake pad thickness and brake disc condition regularly.

When driving in rain or on icy or snowy roads, occasionally apply the brakes lightly. Friction between the calipers and pads generates heat that dries the pads and helps maintain braking effectiveness in an emergency. Do the same in very wet or cold weather.

After washing the vehicle, lightly apply the brakes for a short period to dry them, maintain braking performance and reduce brake-disc corrosion.

Under certain vehicle speeds, braking forces and environmental conditions (such as temperature and humidity), the brakes may emit a high-pitched noise.


Air-conditioning Filter Inspection and Maintenance

The cabin air filter prevents dust entering the cabin through the air vents. It may become blocked after extended use. If air conditioning efficiency drops significantly, inspect the filter and replace it if necessary.

Caution

- The air conditioning filter must be replaced by qualified personnel. Contact an Authorised Service Centre.
- Using the air conditioning system with the cabin air filter removed may reduce dust filtration performance and affect air conditioning efficiency.

Fuse Box

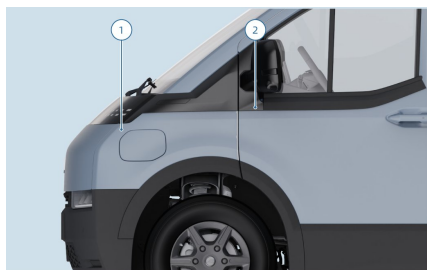

1. Front Compartment Fuse Box

2. Instrument Panel Fuse Box

Front Compartment Fuse Box

The front compartment fuse box is installed on the left side inside the front compartment. The bonnet must be opened to inspect the fuses or relays. Do not attempt this operation unless properly trained. If a fuse or relay needs to be checked, contact an Authorised Service Centre.

Instrument Panel Fuse Box

The instrument panel fuse box is installed at the front of the driver's knee trim panel. The trim panel must be removed to inspect the fuses or relays. Do not attempt this operation unless properly trained. If a fuse or relay needs to be checked, contact an Authorised Service Centre.

caution

- The vehicle power supply must be switched off before replacing a fuse or relay.
- When replacing a fuse or relay, only use a replacement with the same rating and specification. An incorrect fuse or relay may damage the electrical system or even cause a fire.

12 V Battery Maintenance

The vehicle uses a 12 V low-voltage battery, either a 12 V lead-acid battery or a 12 V lithium iron phosphate battery. Service life and condition are affected by deep discharge, driving habits, road conditions, temperature and humidity. Maintenance requirements differ; routine inspection requirements are as follows:

- Check that the 12 V battery cables are correctly connected and secure.
- Check and make sure that the battery terminals are free of corrosion, the connections are not loose, the battery case has no cracks and the retaining clamp is secure.

- Repeated complete discharge of the battery may shorten its service life. Keeping the battery adequately charged helps extend its service life.

warning

- All 12 V battery work requires specialist knowledge. If in doubt, contact an Authorised Service Centre.
- Avoid contact of battery electrolyte with eyes, skin, fabrics or paintwork. The battery contains sulphuric acid. If contact occurs, rinse immediately with water and seek medical attention immediately.
- The 12 V battery can generate explosive flammable gases. Do not smoke or allow open flames or sparks nearby.
- Wear eye protection and remove all jewellery when handling the 12 V battery or working near it.
- Battery posts, terminals and related accessories contain lead and lead compounds. Wash your hands after handling the battery.
- Do not disconnect the 12 V battery after the vehicle has been started.

High-voltage Traction Battery Maintenance and Recycling

The traction battery is a key drive component. Observe the following precautions during daily use:

- For daily use, avoid frequent prolonged DC fast charging. Use AC charging where practical to help extend battery life.
- Use charging equipment that meets the specified charging requirements and charge the vehicle correctly according to the charging station instructions.
- When storing the vehicle, park it in a cool, dry place and avoid extremely high or low temperatures to help preserve traction battery life.

- Because the traction battery is located under the vehicle, avoid driving through water for extended periods.
- When driving over bumps, gravel or raised obstacles, slow down or avoid the obstacle to prevent damage to the chassis or traction battery pack. If the traction battery exterior shows impact marks or damage, contact an Authorised Service Centre.
- If the vehicle has been parked for more than 3 months, check for traction battery warning lamps or warning messages before use. If any are present, contact an Authorised Service Centre.

caution

- Owners and repair technicians not authorised by an Authorised Service Centre must not disassemble or repair any part of the traction battery. Never open or modify the traction battery. Contact an Authorised Service Centre for all related work.
- When the displayed remaining range is below 20 km, charge the vehicle promptly. If remaining range reaches 0 km, charge immediately to restore battery performance. Prolonged failure to charge may cause irreversible battery damage.
- Do not expose the vehicle continuously to very low or very high temperatures for extended periods, as this may damage battery performance and create a hazard.

Traction Battery Recycling Notes

The traction battery is installed beneath the vehicle and improper disposal may pollute or harm the environment. Follow the information and requirements below and have it recycled by an Authorised Service Centre or designated partner.

- Personnel Requirements: Disassembly must be performed by qualified professionals.

- High-voltage safety: the vehicle contains high-voltage components such as the traction battery and high-voltage wiring harness. Appropriate electrical insulation protection must be used before opening covers or disassembling components.
- Transport: Use a transport organisation qualified to transport traction batteries.
- Storage: store the removed high-voltage traction battery in a dry environment at normal temperature, away from flammable materials, heat sources and water.
- Internal components: the high-voltage traction battery consists of lithium battery cells/modules, circuit boards, wiring, a metal enclosure and other components.

Used traction batteries from scrapped vehicles or other sources should be handled by designated recycling service outlets. For traction battery repair, reuse and disposal information, contact an Authorised Service Centre.

warning

- Do not illegally scrap or dispose of the traction battery.
- The traction battery is designed exclusively for new-energy vehicles. Do not use it outside the vehicle or modify it in any way.

caution

In accordance with applicable national regulations, repair, replacement and recycling of new-energy vehicle traction batteries must be carried out by an aftersales service organisation with the appropriate capabilities. If you transfer a used traction battery to another organisation or individual for unauthorised dismantling or disassembly, you are responsible for any resulting environmental pollution or safety incident.

Exterior Cleaning and Maintenance

Regular and proper exterior cleaning and maintenance preserves the vehicle's appearance, slows paint ageing and helps maintain vehicle value. Adjust washing frequency according to usage and parking environment, such as garage parking, parking under trees or prolonged outdoor sun exposure.

When washing the vehicle, observe the following precautions:

- Wash the vehicle in a shaded area after it has cooled sufficiently. Avoid direct sunlight, which may damage the paintwork.
- Before washing the vehicle, remove contaminants from the paintwork, such as bird droppings, tree resin, insects, tar spots, road salt and industrial dust.
- When washing the vehicle in winter, wipe the seams around the door handles dry to prevent them from freezing.
- Use a dedicated vehicle cleaner when washing the vehicle. Check the expiry date before use and store it out of the reach of children after use.

When cleaning the vehicle exterior, on the infotainment display go to **Status Bar**→**Scenario Mode**→**Car Wash Mode**Enable Car Wash Mode.

warning

- Do not wash the vehicle while it is powered on.
- Do not rinse the inside of the front compartment with water.

caution

- Close all windows before washing the exterior of the vehicle.
- Do not clean the vehicle with acidic cleaners. Acid may damage vehicle surfaces and affect appearance.

caution

- Do not clean the vehicle with strongly alkaline soap, harsh chemical cleaners, petrol or solvents, as these may affect the vehicle's appearance.
- In regions where road salt is used in winter, clean the underside of the vehicle regularly to prevent salt accumulation and accelerated corrosion of the underbody and suspension.
- After washing, wipe the vehicle surfaces dry. Residual cleaning agent may damage the exterior finish.
- In winter, wash the vehicle with warm water where possible. This reduces icing and helps prevent paint damage when rinsing or wiping the body.
- After washing the vehicle in winter, use compressed air where possible to remove residual water from door gaps, door handles, door locks and similar areas to prevent freezing or damage.

High-pressure Washing

When washing the vehicle with a high-pressure washer, follow these instructions:

- Water may enter the passenger compartment. Do not direct a water jet close to gaps around the doors or window edges, and do not spray these areas continuously.
- When washing the vehicle, do not direct high-pressure water at the vehicle cameras or surrounding areas. High-pressure water impact may prevent the equipment from operating normally.
- Do not direct a high-pressure water jet close to dust boots, wiring harness connectors, suspension components, braking system components or other precision structures.
- Do not use a high-pressure washer to clean the underside of the vehicle.
- Keep the water-jet nozzle at least 30 cm from the vehicle body. Otherwise resin parts such as protective strips and bumpers may deform

or be damaged. Do not continuously direct the jet at one area of the body.

Wiper Blade

Clean the wiper blades with a clean cloth and suitable cleaner. Do not use alcohol- or petroleum-based cleaners.

Windows and Rearview Mirrors

Clean the inside and outside surfaces of all windows regularly with glass cleaner.

Clean the inner surface of the rear window with a soft cloth, wiping horizontally. Do not scrape the glass or use abrasive cleaners, as this may damage the heating elements.

Clean rearview mirrors with soapy water where possible. Do not use abrasive cleaners, as they may damage the mirror surface.

caution

Do not use acidic, alkaline, active-agent, alcohol-based or organic-solvent cleaners on exterior rearview mirrors, including alcohol wipes, adhesive remover or tar remover. These may corrode, whiten or crack the mirror surface.

Exterior Lamps

Use a neutral cleaner on lamp surfaces. Avoid cleaners containing acids, alkalis, active agents or ethanol, as they may corrode the lamp lens surface.

Do not expose lamps to abnormal operations such as high-temperature baking, as this may damage them.

After the lamps have been on for a long time in hot summer or high-temperature conditions, their surfaces may be hot. Do not immediately apply cleaner or cold water, as rapid temperature change may damage the lamps.

caution

Do not use cleaners containing acids, alkalis, active agents, alcohol or solvents on lamps, such as adhesive remover, tar remover or

caution

alcohol wipes. These products may corrode the lamp lens or cause surface cracking.

Plastic Parts

Clean plastic parts using normal cleaning methods. If stains remain, use only a solvent-free cleaner specifically designed for plastics, otherwise plastic parts may be damaged.

Wheels and Wheel Trims

- Use a neutral cleaning agent to remove dirt promptly.
- Rinse off the cleaning agent with water immediately after use.
- To prevent paintwork damage, observe the following precautions.
 - Do not use acidic, alkaline or abrasive cleaning agents.
 - Do not use a hard-bristled brush.
 - Do not use cleaning agents on hot wheels, for example after driving or parking in hot weather.

caution

Do not clean the wheel rims with hard-bristled brushes, wire wool or similar items, as this may damage the finish.

Paintwork Maintenance

Regular waxing helps protect the paintwork and maintain the appearance of the vehicle.

Caution

Waxing cannot restore the gloss of damaged paintwork.

Interior Cleaning and Maintenance

To keep the vehicle interior clean and attractive, clean it regularly using suitable cleaners and care products. Vacuum the interior before using cleaning products.

Caution

- Some clothing materials, such as dark denim and sheepskin garments, may stain interior upholstery. If this occurs, clean and care for the affected material as soon as possible.
- Do not use strong solvents such as heavy-duty cleaners, petrol, alcohol or petroleum solvents, as these may damage interior surface materials such as leather and fabric.
- Do not spray cleaner directly onto components with electrical buttons or controls, such as door switches, window switches, seat adjustment controls, steering wheel buttons, reading lamp switches or the infotainment display. Apply cleaner to a soft cloth and wipe the surface instead.
- Sharp objects may damage interior surface materials.

Interior Trim and Fabrics

Interior trim and textile materials on the doors, tailgate and roof must be cleaned using dedicated cleaners, dry foam and a soft brush.

Clean fabric surfaces with a dedicated automotive interior cleaner and a soft brush to remove dust and stains. Avoid acidic or alkaline cleaners. Prevent water and stains soaking into the fabric or use a dedicated automotive fabric water-repellent. Avoid prolonged direct sunlight, which can fade and age fabric, and avoid rubbing with rough objects or tools. Regular use of suitable interior care products helps maintain softness and appearance and extend service life.

Caution

- Do not use solvent-based cleaners such as alcohol to clean the instrument panel, airbag covers or leather.
- Avoid prolonged exposure of the vehicle to strong sunlight to prevent leather fading. If the vehicle must be parked

 Caution

outdoors for an extended period, cover leather surfaces.

- Take care with sharp items on clothing, such as zips, rivets or sharp belts, as they may scratch leather surfaces.
- If leather is stained by coffee or sunscreen, remove the stain as soon as possible using mild soapy water to prevent permanent marks on the leather.
- Do not spray formaldehyde-based cleaner or disinfectant onto leather surfaces, as this may leave difficult-to-remove white marks.

 caution

When cleaning the seats, do not use excessive amounts of water-based cleaner, as moisture may penetrate the seats and damage electronic equipment.

Cleaning the Seat Belts

Dirty seat belts can impair retraction and safety performance. Clean them only with a mild soap solution. Do not remove the seat belts from the vehicle, and allow them to dry completely before retracting them.

 caution

- Seat belts must be cleaned in the vehicle and must not be removed unnecessarily.
- Do not use bleach, dyes or cleaning solvents, as they can reduce seat belt durability.
- Allow the seat belt to dry completely before retracting it to avoid damaging the retractor.

 warning

Chemical cleaners can damage seat belt webbing and reduce its protective performance, creating a risk of serious injury or death.

Car Wash Mode

When preparing to wash the vehicle, enable Car Wash Mode. The vehicle automatically checks component closure status and performs actions such as closing windows, disabling automatic wipers and Walk-away Locking, and folding exterior rearview mirrors to reduce the risk of water ingress during washing.


Enabling Car Wash Mode

1. Shift the vehicle into P or N.
2. On the infotainment display, go to **Status Bar**→**Scenario Mode**→**Car Wash Mode**, a pop-up asks whether to enable Car Wash Mode. Tap "Enable" or "Cancel".

 caution


- If using an automatic conveyor car wash, shift into N.
- If air conditioning is required during a car wash, use recirculation mode.

Warning Symbol Information

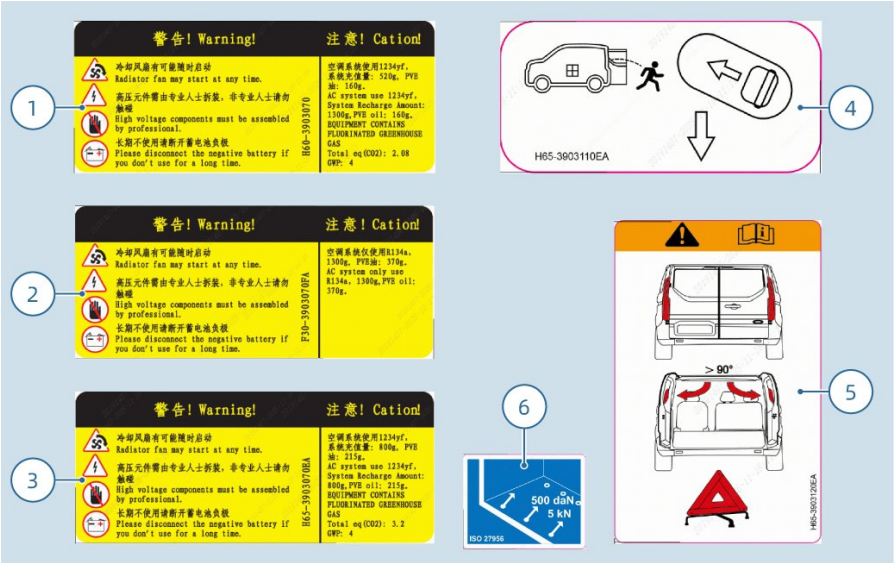

No.	Name
1	EV Warning Label (Standard Version)
2	EV Warning Label
3	EV Warning Label (Enhanced Version)
4	Emergency Door Opening Label
5	Warning Triangle Symbol
6	Anchor Point Label

Vehicle Tools

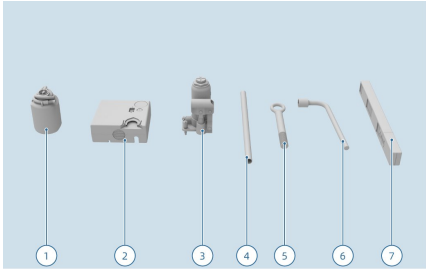

1. Tyre Sealant Bottle (if equipped)

- 2. Inflator (if equipped)
- 3. Jack (if equipped)
- 4. Crank Handle
- 5. Towing Eye
- 6. Wheel Wrench
- 7. Warning Triangle

The jack is stored on the floor between the driver and front passenger seats.


The vehicle tools are stored in the front passenger under-seat storage compartment. Access them as follows:

- To unfold the front passenger seat cushion, see “Cabin Storage”.



- Enter the cargo compartment and open the access panel to remove the vehicle tools.

Placing the Warning Triangle

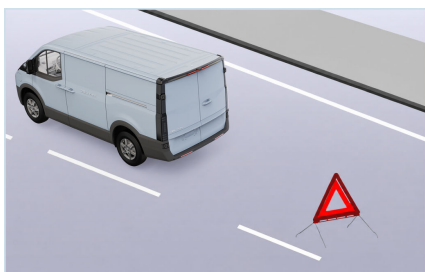

In an emergency, stop the vehicle in a safe place and shift into P. Switch on the hazard warning lamps, put on a reflective vest, remove and unfold the warning triangle, and place it at an appropriate distance behind the vehicle in the same lane.

caution

- For your own safety, put on a reflective vest before placing the warning triangle.
- On ordinary roads, place the warning triangle 50-100 m behind the vehicle. On motorways, place it more than 150 m behind the vehicle; in rain or fog, increase this distance to 200 m. At night, add a further 100 m to the applicable distance

caution

for ordinary roads or motorways. If the incident occurs on a bend, place the warning triangle before the entrance to the bend to warn approaching vehicles to avoid the disabled vehicle.

- Place the warning triangle in accordance with applicable local regulations.

Fire Extinguisher

The vehicle is equipped with a dry-powder fire extinguisher that complies with applicable national standards. It is emergency safety equipment intended for small incipient vehicle fires. Familiarise yourself with its location and operation so it can be used correctly and quickly in an emergency.

Storage Location

The fire extinguisher is secured in a dedicated bracket between the driver and front passenger seats. To remove it, release the bracket retaining clip and lift it out smoothly. Do not pull forcefully and damage the bracket.

Correct Operating Procedure

If an incipient vehicle fire occurs and your own safety is assured, proceed as follows:

1. Remove the fire extinguisher carefully and quickly check that the cylinder is undamaged and the pressure gauge needle is in the green normal range.
2. Hold the fire extinguisher handle and remove the safety pin and seal at the top.
3. Hold the front of the nozzle with one hand and squeeze the handle firmly with the other, keeping the extinguisher upright.
4. Stand upwind of the fire, 1.5–2 m away. Aim the nozzle at the base of the flames and sweep from side to side until the fire is completely extinguished.

warning

- This fire extinguisher is intended only for small incipient fires. If the fire spreads

Warning


rapidly or there is heavy smoke, evacuate immediately to a safe area, call the local fire and rescue service, and state that the vehicle is a new-energy vehicle.

- Do not aim the extinguisher nozzle at people. The high-pressure discharge may cause injury.
- If a new-energy vehicle fire involves the high-voltage battery or high-voltage wiring, do not touch high-voltage components. Only visible external flames may be tackled. Evacuate first and wait for professional fire and rescue services.
- After using the fire extinguisher, replace it promptly with a new compliant unit so it remains available for future emergencies.

Emergency Call

In the event of an injury accident or another emergency, Emergency Call can be triggered manually or automatically by the vehicle to call a rescue centre for assistance.

Manual Call

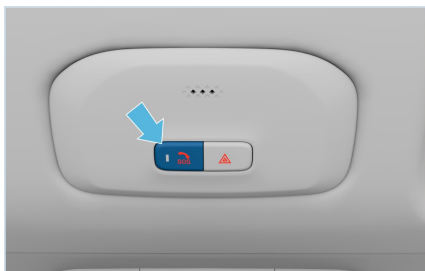

Press the SOS button manually to activate Emergency Call. Vehicle status information such as location, time and vehicle data is automatically sent to the rescue centre and the call screen opens on the infotainment display. The rescue centre provides assistance based on the uploaded information and call details.

Caution

Use the SOS button only in an emergency, such as an injury accident, illness or a threat to an occupant.

Automatic Call

When a collision occurs and the vehicle receives a collision signal, Emergency Call is activated automatically. Vehicle status information such as location, time and vehicle data is sent to the rescue centre and the call screen opens on the infotainment display.

Emergency Evacuation

If the vehicle is involved in water immersion, a collision, fire or another emergency, move away from the vehicle immediately and do not attempt to rescue the vehicle yourself.

Occupants should attempt emergency evacuation as follows:

- Try to open it using the normal method [Doors](#).
- If the door still cannot be opened, try [Emergency Call](#), and wait for rescue personnel.

Jump Starting

If a discharged 12 V battery prevents the vehicle from starting, the vehicle can be jump-started.

To avoid vehicle damage or personal injury caused by incorrect operation, if you do not understand how to perform the steps, seek assistance from qualified repair personnel or an Authorised Service Centre.

Jump-start Procedure

1. Switch off all unnecessary electrical equipment. If the auxiliary battery is installed in another vehicle, make sure the vehicles are not touching each other.
2. Open the bonnet and lift the 12 V battery protective cover.
3. Connect the red jumper cable to the positive terminal of the rescue vehicle's front compartment fuse box, then connect the

other end to the positive terminal of the disabled vehicle's front compartment fuse box. Connect the black jumper cable to the negative terminal of the rescue vehicle's front compartment fuse box, then connect the other end to the negative grounding point of the disabled vehicle's charging/DC power distribution 3-in-1 assembly.

4. Start the donor vehicle first, then depress the brake pedal in your vehicle and start it.
5. After the vehicle starts, first remove the black jumper cable from the negative grounding point of the disabled vehicle's charging/DC power distribution 3-in-1 assembly. Then remove the black jumper cable from the negative terminal of the rescue vehicle's front compartment fuse box and take the cable away. Next remove the red jumper cable from the positive terminal of the disabled vehicle's front compartment fuse box, then remove the red jumper cable from the positive terminal of the rescue vehicle's front compartment fuse box and take the cable away.

caution

- Make sure the donor battery voltage is between 12 and 13 V before jump starting.
- During jump starting, do not select D; keep the vehicle parked.
- Do not tilt the 12 V battery while making connections.
- Do not allow the jump-lead clamps to touch each other or any other metal part of the vehicle.
- If the first starting attempt fails, check that the jumper cable clamps are secure and try starting the vehicle again normally. If it still does not start, contact an Authorised Service Centre for inspection and repair as soon as possible.

warning

- Approved jump leads must be used.

warning

- Take care not to touch high-voltage components.
- Take care when connecting jump leads to prevent contact with other metal parts and a short circuit.
- Do not use this vehicle to jump-start another vehicle, as this may damage electrical components or the low-voltage battery.
- Do not use a jump starter with regenerative current feedback capability to jump-start this vehicle, as this may damage vehicle electrical components or the low-voltage battery.

Tyre Inflation

Tyre Inflation Kit (if equipped)

The tyre inflation tools are stored in [Front Passenger Under-seat Storage Compartment](#), lift the front passenger seat cushion and remove the tools.

Tyre Inflation Procedure

1. Remove the tyre valve dust cap.
2. Connect the electric inflator fitting to the tyre valve. Make sure the inflator power switch is off (press the "0" side), then plug it into the 12 V power outlet while keeping the vehicle powered on.
3. Switch on the electric inflator (press the "—" side) to begin inflating the tyre. It takes approximately 18 min to inflate the tyre to the specified pressure.

Caution

To prevent excessive 12 V battery discharge, it is recommended that you run the vehicle.

Caution

When the inflator pressure gauge first starts operating, it may briefly indicate

Caution

up to 600 kPa (6 bar) before returning to the normal pressure reading.

4. When the tyre reaches the specified pressure, switch off the air compressor by pressing the "0" side.

Caution

If the tyre does not reach the specified pressure within 18 min, remove the tyre repair kit and move the vehicle a distance equivalent to one wheel revolution, then inflate again. If the specified pressure still cannot be reached, the tyre is severely damaged and cannot be repaired. Contact an Authorised Service Centre.

Caution

Operating the electric air compressor continuously for more than 18 min may overheat and damage its motor.


5. Disconnect the electric inflator from the tyre valve, unplug it from the 12 V power outlet, then organise and stow the inflator.
6. Check the tyre pressure. Continue driving only if the pressure has reached the specified value. Do not exceed 80 km/h or travel more than 200 km.

Tyre Repair

Tyre Repair Kit (if equipped)

The tyre repair tools are stored in [Front Passenger Under-seat Storage Compartment](#), lift the front passenger seat cushion and remove the tools.


Tool Identification

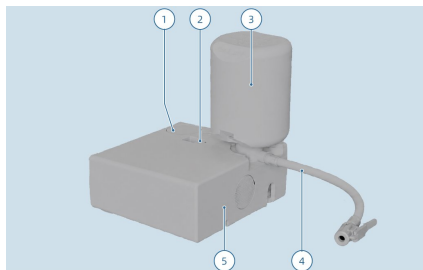

1. Tyre Pressure Gauge
2. Power Switch
3. Tyre Sealant Bottle
4. Air Compressor Hose
5. Electric Air Compressor

Tyre Repair Procedure

1. Remove the label from the bottom of the tyre sealant bottle and attach it to the steering wheel to remind the driver not to exceed 80 km/h.

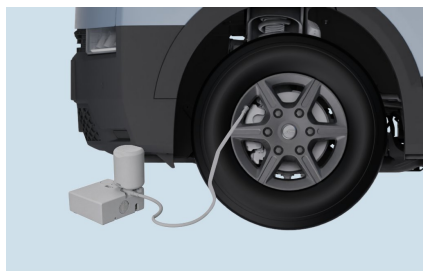

2. Connect the electric inflator air hose to the tyre sealant bottle and fit the bottle upside down into the inflator slot. Remove the dust cap from the damaged tyre valve and connect the sealant hose to the valve. Make sure the inflator power switch is off (press the "0" side), then plug the inflator into the 12 V power outlet and keep the vehicle powered on.

Caution

To prevent excessive 12 V battery discharge, it is recommended that you run the vehicle.

3. Switch on the electric inflator (press “—”) to begin injecting sealant into the tyre. The sealant bottle takes approximately 30 s to empty. It takes approximately 18 min for the tyre to reach the specified pressure.

Caution

When the inflator pressure gauge first starts operating, it may briefly indicate up to 600 kPa (6 bar) before returning to the normal pressure reading.

4. When the specified pressure is reached, switch off the air compressor by pressing “0”.

Caution

If the tyre does not reach the specified pressure within 18 min, remove the tyre repair kit and move the vehicle a distance equivalent to one wheel revolution, then inflate again. If the specified pressure still cannot be reached, the tyre is severely damaged and cannot be repaired. Contact an Authorised Service Centre.

Caution

Operating the electric air compressor continuously for more than 18 min may overheat and damage its motor.

5. Remove the tyre sealant bottle from its slot and disconnect the bottle hose from the tyre valve. Unplug the electric inflator from the 12 V power outlet, then organise and stow the tyre repair tools.
6. Within one minute after completing the above procedure, drive the vehicle to distribute the sealant evenly inside the tyre. Do not exceed 80 km/h or travel more than 5 km. Stop and check tyre pressure after driving.
If tyre pressure is between 80 kPa (0.8 bar) and the specified pressure, use the electric

inflator to reinflate the tyre to the specified pressure.

If tyre pressure equals the specified pressure, you may continue driving, but do not exceed 80 km/h or travel more than 200 km.

Replacing the Spare Wheel (if equipped)

Vehicle Tyre Deflation


If a tyre is deflated or damaged and cannot be used, replace it with the spare tyre as follows:

1. Preparations Before Replacing a Deflated Tyre
 - 1). Park the vehicle on firm, level ground.
 - 2). Apply the parking brake and shift into P.
 - 3). Power off the vehicle and switch on the hazard warning lamps.
 - 4). All occupants should leave the vehicle and move to a safe location away from traffic.
 - 5). After putting on a reflective vest, place the warning triangle 50–150 m behind the vehicle, as appropriate.

Caution

Do not continue driving with a deflated tyre. Even driving a short distance may damage the tyre beyond repair.

2. Remove the spare tyre.
 - 1). Open the front passenger under-seat storage compartment and remove the vehicle tools. To open the front passenger seat cushion, see “[Cabin Storage](#)”.

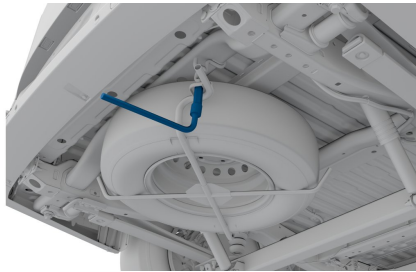

- 2). The spare tyre is located under the rear floor. Insert the wheel wrench into the spare-tyre retaining bolt.
- 3). Use the wheel bolt wrench to turn anticlockwise and release the spare tyre.
- 4). When the spare tyre has been lowered fully, remove the retaining-device hook and take out the spare tyre.

i Caution

Use the vehicle tools carefully when removing the spare tyre to avoid scratching or damaging the interior trim.

- 3). Remove the deflated tyre.
 - 1). Place a wheel chock, stone, wooden block or other sturdy object under the tyre diagonally opposite the deflated tyre to prevent unintended movement.

Deflated Tyre	Wheel Chock Position
Left Front Wheel	Behind the Right Rear Wheel
Right Front Wheel	Behind the Left Rear Wheel
Left Rear Wheel	In Front of the Right Front Wheel
Right Rear Wheel	In Front of the Left Front Wheel

- 2). Fit the wheel bolt wrench onto a wheel bolt of the damaged wheel with the handle to the left. Hold the end of the handle and press down to loosen each wheel bolt by approximately half a turn.

i Caution

When removing wheel bolts with the wheel bolt wrench, prevent the wrench from slipping off the bolt, as this may damage the wheel bolt.

! warning

Do not remove the wheel bolts completely while the vehicle is supported, as the wheel may spring outward and cause injury or death.

- 3). Place the jack on firm, level ground. Turn the jack handle until the jack groove contacts the correct jacking point.

i Caution

- ◆ Lift the vehicle only high enough to replace the tyre.
- ◆ Rated load of the jack: 2,000 kg.

! warning

When the vehicle is raised with the jack, never place any part of your body underneath it.

- 4). After aligning the jack groove with the correct jacking point, use the jack handle to tighten the release valve clockwise.
- 5). Insert the jack handle into the pump body socket and move the handle up and down repeatedly to raise the vehicle to a suitable height.
- 6). Use the wheel bolt wrench to remove the wheel bolts anticlockwise, then remove the deflated tyre.

i Caution

When placing the deflated tyre on the ground, position the wheel rim face upward to avoid scratching it.

4. Install the spare tyre.

- 1). Remove all contamination from the mounting surfaces, make sure the hub and wheel surfaces make good contact, and install the spare tyre.
- 2). When installing wheel bolts, screw all bolts in clockwise by hand, correctly position the spare wheel, and pre-tighten all wheel bolts with the wheel bolt wrench.

Caution

Do not apply engine oil or any lubricant to the wheel bolts.

- 3). Make sure everyone around the vehicle is in a safe area. Use the jack handle to turn the release valve anticlockwise and lower the vehicle.
- 4). Use the wheel bolt wrench to tighten the bolts in a diagonal cross pattern. Repeat the process 2-3 times to make sure the wheel bolts are fully tightened.

Caution

Wheel	Bolt	Tightening
Torque: 180±18 N·m.		

- 5). Store the deflated tyre and return the jack, warning triangle and vehicle tools to their original locations.
- 6). If the spare tyre pressure is insufficient after replacement, drive slowly to the nearest Authorised Service Centre and inflate the tyre to the correct pressure.

Vehicle Emergency Rescue Information

Vehicle Emergency Rescue Information

Before carrying out rescue operations, provide the rescuers with the following vehicle information.

Rescue Protective Equipment

The vehicle power system is driven by a traction battery. A severe collision may cause high-voltage leakage or electrolyte leakage. Rescue operations must be performed by trained personnel wearing appropriate protective equipment.

warning

When working on the vehicle, make sure you are not carrying or wearing metal objects such as necklaces or watches, to avoid electric shock injury.

Recommended Equipment for Emergency Responders

In the event of electrical leakage, wear the following protective equipment to prevent electric shock.




1. Safety Helmet
Used to protect the head.
2. Insulating Gloves
Used to protect against high-voltage electric shock.
3. Fire Extinguisher
Used for extinguishing fires.
4. Insulated Tools
Used for high-voltage operations.
5. Insulating Shoes
Used to protect against high-voltage electric shock.
6. Insulating Protective Clothing
Used to protect against high-voltage electric shock and heat generated by electrical arcing.

Emergency Rescue


If a battery leak occurs, wear the following protective equipment for chemical protection to prevent injury to the skin and face.

Disconnecting the High-voltage Circuit

If the high-voltage circuit must be disconnected, disconnect the service disconnect.

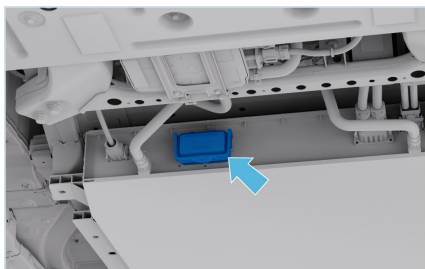

1. The service disconnect is located at the front of the vehicle traction battery.

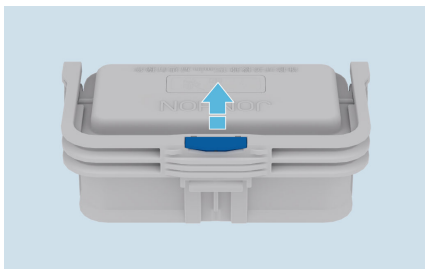

2. Lift the handle retaining clip upward.



3. Rotate the handle to the vertical position.

Caution

When an airbag collision signal is received, the vehicle automatically disconnects high

Caution

voltage, switches on the hazard warning lamps and unlocks the doors.

warning

- In an emergency, rescue work may begin after the high-voltage system has been disconnected, but insulated protective equipment must be worn. Failure to do so may cause serious injury or death.
- Follow the high-voltage isolation procedure strictly; failure to do so may result in serious injury or death.
- Do not attempt to power on the vehicle while high-voltage isolation work is being performed.

caution

After disconnecting the negative terminal of the low-voltage battery, protect the negative cable to prevent accidental contact and reconnection to the battery negative terminal.

Towing an Accident-Damaged Vehicle

Use the correct towing method when towing the vehicle.

Before towing, activate Towing Mode, switch on the hazard warning lamps and close all doors.

warning

- When towing the vehicle, no one should stand in front of or behind the vehicle, as this may cause an accident.
- When towing the vehicle, no one should remain inside the vehicle, as this may cause an accident.

⚠ caution

- When loading the vehicle onto a flatbed recovery vehicle, secure all tyres with tie-down straps to prevent accidents.
- Wheel chocks are not supplied with this vehicle. Before carrying out the relevant operation, use stones, wooden blocks or other sturdy objects to chock the wheels and prevent unintended vehicle movement.

If the vehicle breaks down and needs to be towed, contact an Authorised Service Centre before towing.

Emergency Towing

If a flatbed recovery vehicle is not available in an emergency, a tow rope or chain may be securely attached to the towing eye to tow the vehicle temporarily. This method may be used only for a short distance at low speed on a hard paved road.


A driver must remain in the vehicle to control the steering wheel and brake pedal. The wheels, driveline, steering and brakes must be in good working condition.

Towing Method

1. Remove the towing eye from the vehicle tool kit. See "Vehicle Tools".



2. The towing eye must be installed before use. Use a suitable tool to pry open the front towing eye cover from below.

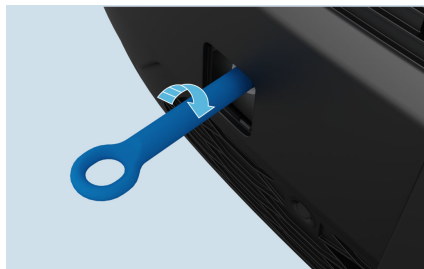


3. Screw the towing eye clockwise into the towing eye mounting hole and tighten it fully.
4. After use, restore the towing eye and towing eye cover to their original positions.

Towing Mode

On the infotainment display, go to **Scenario Mode** → **Towing Mode** to turn Towing Mode on or off. When Towing Mode is enabled, the towing mode icon is shown on the infotainment display.

Towing an Accident-Damaged Vehicle

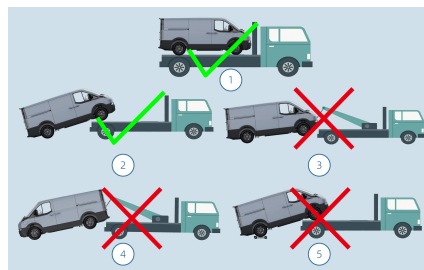

When towing the vehicle, use towing methods (1) or (2). Do not use methods (3), (4) or (5) shown above.

Before towing, switch on the hazard warning lamps and close all doors.

⚠ warning


- When towing the vehicle, no one should stand in front of or behind the vehicle, as this may cause an accident.
- When towing the vehicle, no one should remain inside the vehicle, as this may cause an accident.

caution

When loading the vehicle onto a flatbed recovery vehicle, secure the tyres with tie-down straps and wheel chocks to prevent accidents.

Vehicle Lifting

Because the traction battery is installed under the vehicle, always lift the vehicle only at the specified lifting points to avoid damage.

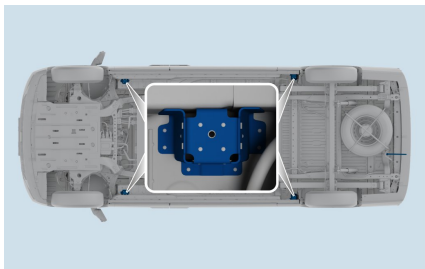

Lifting Method:

1. Shift into P and power off the vehicle.
2. Make sure all doors, the tailgate and bonnet are closed, then position the lifting equipment contact pad beneath specified lifting point ①.
3. Adjust the height and position of the lifting equipment contact pads to ensure correct placement.
4. When raising the lifting equipment, make sure the contact pad remains at the specified lifting point ①.

warning

- Do not lift the vehicle on a slope or on icy or slippery surfaces.
- Do not lift the vehicle while it is charging or connected to a charging cable.
- Before lifting the vehicle, make sure all occupants have exited.
- When lifting the vehicle, do not place any part of your body underneath it.
- Before lifting the vehicle, make sure the lifting equipment contact pads are

warning

positioned at the specified lifting points to prevent vehicle damage, personal injury or death.

- Vehicle lifting should be performed by qualified repair personnel approved by an Authorised Service Centre. Because the traction battery is installed beneath the vehicle, lifting by unqualified persons may damage the high-voltage system or cause the vehicle to slip or fall.

Water-immersed Vehicle Rescue

Avoid driving in deep water for extended periods, as this may damage high-voltage components.

If the body and chassis are undamaged, short-term submersion does not itself create a greater electric-shock risk. However, trained rescue personnel must wear suitable protective equipment, remove the submerged vehicle from the water first, and then disconnect the high-voltage system.

warning

Wear appropriate protective equipment when handling a water-immersed vehicle to prevent electric shock.

Vehicle Fire Rescue

If the vehicle is involved in a fire or other abnormal situation and conditions permit high-voltage shutdown, disconnect the high-voltage system immediately.

If the vehicle catches fire while driving, stop the vehicle immediately when it is safe to do so and leave the vehicle to ensure personal safety.

If a fire is small, such as an interior fabric fire, and has not spread to the traction battery, a CO₂ or dry-powder extinguisher may be used if it is safe to do so.

If a vehicle fire is out of control or the traction battery shows abnormal signs such as smoke or fire, immediately evacuate everyone to an

area 10–15 m away and notify fire and rescue personnel. Firefighters may use high-pressure water to extinguish the fire.

warning

- If the vehicle catches fire, do not touch any part of the vehicle directly. Only trained rescue personnel wearing appropriate protective equipment should handle the vehicle.
- In the event of a fire, assume the vehicle is electrically energised and do not touch any part of it.
- A traction battery fire may take a long time to extinguish completely. Even after visible flames have been extinguished, continue cooling with water and monitor the traction battery surface temperature to prevent reignition.
- Airbags and air-suspension air reservoirs may expand due to heat and potentially explode in high-temperature environments. Professional rescue personnel must exercise caution before operating on them to avoid injury.

High-voltage Traction Battery Leakage Rescue


If traction battery electrolyte leaks, high temperatures or even fire may occur. If a traction battery electrolyte leak is detected, contact an Authorised Service Centre as soon as possible.

warning

- Do not approach a vehicle with a traction battery electrolyte leak.
- If traction battery electrolyte leaks, handling must be carried out by qualified personnel.
- If leaked fluid contacts the body, remove contaminated clothing if possible and immediately wash the affected area with soap and plenty of water for 15 minutes until no chemical residue remains. If symptoms persist or discomfort occurs, seek medical attention immediately.

Vehicle Cutting Areas

If cutting is required during rescue operations, use suitable cutting tools.

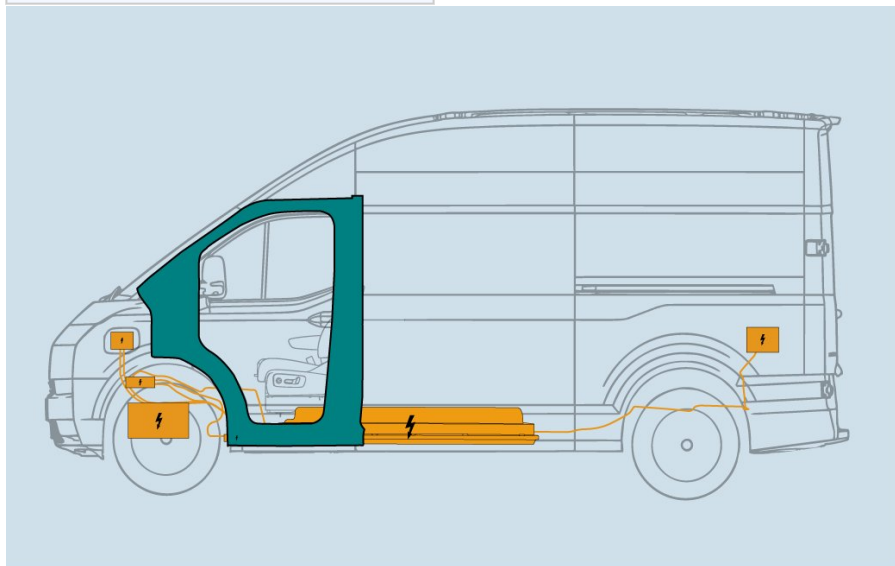

Emergency Rescue

Icon	Name
	High-strength Areas
	High-voltage Traction Battery Pack
	High-voltage Cables
	High-voltage Components

Do not cut high-voltage components such as the traction battery or high-voltage cables. If cutting is absolutely necessary in an emergency, avoid high-temperature/high-voltage areas including the traction battery, drive motor, high-voltage cables, high-voltage electrical equipment and airbag-related components.

Vehicle Specifications

Name	Parameter
Length A (mm)	≤ 4995
Width B (mm) (excluding exterior rearview mirrors)	≤ 1999
Height C (mm)	≤ 1999
Wheelbase D (mm)	3050
Front Track E (mm)	1745
Rear Track F (mm)	1740
Front Overhang G (mm)	≤ 825
Rear Overhang H (mm)	≤ 1120
Ground Clearance (mm)	Unladen: ≥153 Fully laden: ≥144
Drive Type	4×2 Front-wheel Drive
Maximum Speed (km/h)	140
Maximum Gradeability	
Approach Angle	Unladen: ≥23 Fully laden: ≥21
Departure Angle	Unladen: ≥21 Fully laden: ≥18
Seating Capacity	1; 2; 3

Mass Parameters

Name	Parameter
Kerb Mass (Unladen Mass) (kg)	
Mass of the bodied vehicle in running order (including coolant, lubricants, fuel, tools, spare wheel and driver) (kg)	
Distribution of this mass among the axles (kg)	Front Axle
	Rear Axle
Technically Permissible Maximum Laden Mass Specified by the Manufacturer (kg)	
Distribution of this mass among the axles; for a semi-trailer or centre-axle trailer, the coupling point load must also be specified (kg)	Front Axle
	Rear Axle

Specifications and Parameters

Name	Parameter
Technically Permissible Maximum Mass on Each Axle (kg)	Front Axle
	Rear Axle

Towing Hitch Specifications

Name	Value	Description
Maximum Combination Mass (Braked Trailer) (kg)		Maximum permitted total mass of the towing vehicle (including occupants and cargo), towing device and trailer (including trailer and cargo).
Maximum Combination Mass (Unbraked Trailer) (kg)		Maximum permitted total mass of the towing vehicle (including occupants and cargo), towing device and trailer (including trailer and cargo).
Maximum Permissible Front/Rear Axle Load (kg)		Maximum load permitted on the front and rear axles of the towing vehicle.
Trailer Mass (Braked) (kg)		Maximum permitted total mass of the trailer, including the trailer itself and its cargo.
Trailer Mass (Unbraked) (kg)		Maximum permitted total mass of the trailer, including the trailer itself and its cargo.
Towing Device Rear Overhang (Recommended) (mm)		Permitted horizontal distance between the centre of the towing device coupling point and the centreline of the towing vehicle rear axle.
Static Vertical Load at Coupling Point (kg)		Maximum vertical load that the connection between the trailer and towing device can withstand when the vehicle is stationary.

Drive Motor Specifications

Name	Parameter					
	170KW+50k Wh	170KW+50k Wh	170KW+70k Wh	170KW+70k Wh	170KW+98k Wh	170KW+98k Wh
	Base Version	High-spec Version	Base Version	High-spec Version	Base Version	High-spec Version
Drive Motor Type	Permanent Magnet Synchronous Motor	Permanent Magnet Synchronous Motor	Permanent Magnet Synchronous Motor	Permanent Magnet Synchronous Motor	Permanent Magnet Synchronous Motor	Permanent Magnet Synchronous Motor
Drive Motor Model	TZ220QY037	TZ220QY037	TZ220QY037	TZ220QY037	TZ220QY041	TZ220QY041
Drive Motor Rated Power/ Torque (kW/ N·m)	80/120	80/120	80/120	80/120	80/125	80/125
Drive Motor Peak Power/ Torque (kW/ N·m)	170/325 (3-in-1 drive unit peak power: 170 kW)	170/325 (3-in-1 drive unit peak power: 170 kW)	170/325 (3-in-1 drive unit peak power: 170 kW)	170/325 (3-in-1 drive unit peak power: 170 kW)	170/325 (3-in-1 drive unit peak power: 170 kW)	170/325 (3-in-1 drive unit peak power: 170 kW)

Wheel and Tyre Specifications

Name		Parameter					
		170KW+50 kWh	170KW+50 kWh	170KW+70 kWh	170KW+70 kWh	170KW+98 kWh	170KW+98 kWh
		Base Version	High-spec Version	Base Version	High-spec Version	Base Version	High-spec Version
Tyre Size		215/75 R16 LT 10PR	215/75 R16 LT 10PR	215/75 R16 LT 10PR	215/75 R16 LT 10PR	215/75 R16 LT 10PR	215/75 R16 LT 10PR
Tyre Pressure (bar)	Unladen: Front/Rear	400/520 kPa	400/520 kPa	400/520 kPa	400/520 kPa	400/520 kPa	400/520 kPa
	Fully Laden: Front/Rear	400/520 kPa	400/520 kPa	400/520 kPa	400/520 kPa	400/520 kPa	400/520 kPa
Front Wheels	Toe	10'±6'	10'±6'	10'±6'	10'±6'	10'±6'	10'±6'
	Kingpin Inclination	13°30'±45'	13°30'±45'	13°30'±45'	13°30'±45'	13°30'±45'	13°30'±45'

Specifications and Parameters

Name		Parameter					
		170KW+50 kWh	170KW+50 kWh	170KW+70 kWh	170KW+70 kWh	170KW+98 kWh	170KW+98 kWh
		Base Version	High-spec Version	Base Version	High-spec Version	Base Version	High-spec Version
Front Wheels	Camber	28'±45'	28'±45'	28'±45'	28'±45'	28'±45'	28'±45'
	Caster	2°41'±45'	2°41'±45'	2°41'±45'	2°41'±45'	2°41'±45'	2°41'±45'
Rear Wheels	Toe	0±30'	0±30'	0±30'	0±30'	0±30'	0±30'
	Camber	0±45'	0±45'	0±45'	0±45'	0±45'	0±45'
Wheel Bolt Torque (N·m)		180±18N·m	180±18N·m	180±18N·m	180±18N·m	180±18N·m	180±18N·m

High-voltage Traction Battery Specifications

Name		Parameter	
		170KW+50kWh	170KW+70kWh
High-voltage Traction Battery Cell	Type	Lithium Iron Phosphate	Lithium Iron Phosphate
	Rated Voltage (V)	3.22	3.22
	Rated Capacity (Ah)	165	178
High-voltage Traction Battery Pack System	Rated Voltage (V)	309.12	386.4
	Rated Capacity (Ah)	165	178
	Length × Width × Height (mm)	1321.6 × 1170 × 243	1321.6 × 1170 × 243
	Number of Cells in Battery Pack	96	120
	Battery Pack Weight (kg)	370	451

Brake System and Suspension Specifications

Name	Parameter	
	Front	Rear
Brake Pad Thickness (mm)	New:	New:
	Wear Limit:	Wear Limit:
Brake Disc Thickness (mm)	New:	New:

Name	Parameter	
	Front	Rear
Brake Disc Thickness (mm)	Wear Limit:	Wear Limit:

Recommended Fluids and Capacities

Name	Type	Capacity
Brake Fluid		0.9 ± 0.05 L
Coolant		Base version: 12.8 ± 0.5 L High-spec version: 14.5 ± 0.5 L
Refrigerant		Base version: 800 ± 20 g High-spec version: 1500 ± 20 g
Windscreen Washer Fluid		2.5 L
Gearbox Oil		

Seat Specifications

Manufacturer-specified seat fore/aft position and seatback angle used when measuring seat cushion depth.

Item	Parameter		
Seating Position		Driver Side	Front Passenger Side
Specified Seat Fore/Aft Position	Forward Slide (mm)	180	180
	Rearward Slide (mm)	20	20
Specified Seatback Angle	Adjustable	Yes	Yes
Normal Use Position of Seatback	Adjust Forward	20	20
	Adjust Rearward	60	60

Personal Information Protection

The entity responsible for the processing of personal data referred to below is CHERY COMMERCIAL VEHICLE UK LTD. (hereinafter referred to as “we” or “us”), a private company with limited liability established under the laws of UK, having its statutory seat at C910 3 Kenyons Steps, Liverpool, United Kingdom, L1 3BH. To ensure compliance with European data protection legislation, CHERY COMMERCIAL VEHICLE UK LTD. is the data controller of this personal data.

We give top priority to the protection of your personal data, and we process your data in accordance with applicable data protection laws. This Privacy Policy provides comprehensive information about the processing of personal data when you use our connected vehicle and the associated connected services provided by us.

Kindly note that data processing depends on your vehicle's specific features and the services you choose to activate; therefore, this Privacy Policy encompasses the broadest scope of potential processing. It is important to note that data processing related to a specific feature will not occur if you own an older vehicle model, or a new model that does not include that feature.

This Privacy Policy does not apply to:

1. The processing of personal data when you interact with distributors, dealers, or retailers (such as when you purchase your vehicle or have it repaired);
2. The use of software and third-party apps/services within the vehicle. The data processing of these apps is subject to their individual privacy policies, which we strongly advise you to read carefully;
3. The use of mobile apps provided by us. For more information, please see our App Privacy Policy;
4. Third-party value-added services based on vehicle data (such as driving behaviour-based insurance); or

5. The provision of the internet service in your vehicle, supplied independently by a mobile network operator distinct from us.

This Privacy Policy contains:

1. What personal data do we collect and how do we use it?
2. What third-party services do we use?
3. Who do we share this data with?
4. How do we transfer your data outside the EU?
5. What rights do you have in relation to your personal data?
6. How long do we retain your data?
7. How do we protect your data?
8. How can you contact us and make a request?
9. How will we update this Privacy Policy?

1. What personal data do we collect and how do we use it?

To enhance your vehicle's continuous performance, facilitate predictive maintenance, and improve overall functionality and experience, we may collect and process data related to the usage, operation, and condition of your vehicle.

To enable Advanced Driver Assistance Systems (ADAS), including Lane Departure Warning (LDW), Automatic Emergency Braking (AEB), Emergency Lane Keeping (ELK), Adaptive Cruise Control (ACC), Lane Centering Control (ICC), Traffic Sign Recognition (TSR), Intelligent Speed Assistance (ISA), Intelligent High Beam Control (IHBC), Blind Spot Information System (BSIS), Moving Off Information System (MOIS), Door Opening Warning System (DOW), Rear Cross Traffic Alert (RCTA), and Blind Spot Monitoring System (BSD), Lane Keeping Assist(LKA), Forward Collision Warning(FCW), Rear Cross Traffic Braking(RCTB), we may collect and process anonymised data from the front-facing camera, front radar, and other radar sensors.

We process this data based on legitimate interests and legal obligations. Furthermore, the data collected for the aforementioned features is

necessary solely for ADAS, and the data will only be stored within the vehicle.

1.2 Data we collect for OTA System Update

To update your vehicle's infotainment system, we may collect your Vehicle Identification Number (VIN), update log records, and Electronic Control Unit (ECU) version data to match the update tasks and perform the corresponding system updates.

We process this data based on legal obligations.

1.3 Data we collect for Vehicle Security Operations Center

To ensure the safe operation of vehicles, we may collect VIN and device number data.

We process this data based on necessary for the performance of a contract.

1.4 Data we collect for Public Key Infrastructure

Since only vehicles with the correct VIN and device serial number can apply for a digital certificate, we need to collect the VIN and device serial number to authenticate the identity of the vehicle's equipment when applying for a certificate on the vehicle end through the PKI platform.

We process this data based on necessary for the performance of a contract.

1.5 Data we collect for DMS

Our vehicle's Driver Monitoring System (DMS) works to detect signs of driver fatigue. It does this by monitoring a range of parameters from recent video footage. The system uses this data to make a comprehensive judgement about driver fatigue and issue alerts as necessary. It is collected for immediate processing, and is not stored. The collected data is used for algorithmic recognition and discarded immediately after use. All data is processed within the vehicle and does not leave the vehicle.

We process this data based on legal obligations.

1.6 Data we collect for Voice Services

To provide voice services, including voice control, voice search, and voice interaction, and to enhance the accuracy of voice recognition, we may collect voice audio, device data, log data, network status, contacts, vehicle location, navigation destinations, search functions and routes, local music and video data, voice

recognition results or interaction records, calendar entries, application lists, and storage space.

We process this data based on your consent.

1.7 Data we collect for Anti-Theft Alert

Our vehicles are equipped with anti-theft alert and stolen vehicle tracking features to ensure the security of your vehicle. You can manually activate or deactivate the vehicle's alarm status. If an alarm is triggered due to a theft, we may collect the stolen vehicle alarm signal to send app notifications or SMS alerts to the user. Additionally, in the event of a vehicle theft, we will utilise the vehicle's location data to transmit it to your mobile phone to assist you in locating the vehicle.

We process this data based on your consent.

1.8 Data we collect for Bluetooth Services

Our vehicles offer Bluetooth services, primarily to enable you to make and receive calls, view call logs, synchronise contacts, and play music. To this end, we may collect microphone data, contacts, call logs, and Bluetooth music data. The aforementioned data will only be collected after a successful Bluetooth connection has been established and authorisation has been granted. Collection will cease once the Bluetooth connection is terminated. All data will be stored within the vehicle and will not be transmitted outside the vehicle.

We process this data based on your consent.

1.9 Data we collect for Account System

Our vehicles can manage an account system, which is used to record user-related data and manage user accounts. As such, we may collect the following data: user ID, avatar, mobile phone number (anonymised), nickname, registration status, VIN, account status, vehicle binding and unbinding status, and update status. During vehicle authentication, we may collect the VIN, engine number, nickname, mobile phone number, vehicle nickname, license plate number, and authentication time.

We process this data based on your consent.

1.10 Data we collect for Remote Diagnostics

To provide you with remote diagnostic services, we need to review the vehicle's condition and

analyse driving behaviour to infer the vehicle's fault conditions. Therefore, we may collect the following data: a list of fault codes, VIN, DTC (Diagnostic Trouble Codes), component version numbers, and vehicle condition signals.

We process this data based on your consent.

1.11 Data we collect for Emergency Call (eCall)

eCall is an emergency service that intervenes swiftly during road accidents or when the SOS button is pressed, alerting rescue teams for rapid assistance. It transmits critical accident data to emergency services, enhancing rescue efficiency and minimising casualties. In this process, we may collect the following data: Location of vehicle (GPS), VIN.

We process this data based on legal obligations.

1.12 Data we collect for Weather Services

To enable you to check the weather conditions, we may collect the following data: Location of vehicle (GPS), in order to show you your precise geographic location.

We process this data based on your consent.

1.13 Data we collect for Map Services

Map services support map browsing, destination search, route planning, navigation, trip record display and driving range management. We may collect the following data: VIN, vehicle location data, search logs, vehicle status data, battery status data and trip records.

We process this data based on your consent.

1.14 Data we collect for Electronic Fences Services

You may set up electronic fences for your vehicle to restrict its travel areas. We may collect the following data: VIN, Location of vehicle (GPS).

We process this data based on your consent.

1.15 Data we collect for Data Top-Up Services

To provide you with data top-up services, we may collect the following data: VIN, Integrated Circuit Card Identifier (ICCID), mobile phone number and license plate number.

We process this data based on your consent.

1.16 Data we collect for Fleet Management System

You may activate the fleet management system by registering an account. After successful registration, you can use this system to conduct

vehicle management, real-time monitoring, vehicle status analysis and generate vehicle operation reports. We may collect the following data: mobile phone number, email address, password, vehicle license, license plate number, VIN, Location of vehicle (GPS), vehicle status data, vehicle diagnostic data, battery data and fault data.

We process this data based on your consent.

2. What third-party services do we use?

In order to provide you with better service, we may entrust a cooperative third party to process your personal data.

3. Who do we share this data with?

In general, we do not share your personal data with anyone for any purpose, except for the following circumstances:

3.1 Affiliates and subsidiaries

To assist, operate, enhance, and fulfil services on our behalf based on our legitimate interests to outsource certain operations, we share personal data with our affiliates and subsidiaries.

3.2 Service providers and business partners as data processors

We share data with our services providers and partners to maintain our business operations, our relationship with you, and provide you with our services.

3.3 Law enforcement and government authorities

To fulfil our legal obligations, we may be required to disclose information in response to subpoenas, court orders, or lawful requests from government authorities conducting investigations. This includes compliance with law enforcement requirements, regulatory inquiries, and the verification or enforcement of our policies and procedures. We may also disclose information in emergency situations to prevent or halt potentially illegal, unethical, or legally actionable activities. When we receive a request for personal data from a law enforcement authority, we assess the necessity and proportionality of the requested information.

4. How do we transfer your data outside the EU?

In principle, the personal data we collect is stored within the countries of your place of residence, within the European Economic Area (EEA), or in the UK. In some cases, your personal data may be processed outside your country of residence. Regardless of where your personal data is processed, we apply the same protections as described in this Privacy Policy. We transfer your personal data in accordance with the legal frameworks required by different jurisdictions. Recipients of your personal data are required to adhere to the same level of privacy safeguards as mandated by applicable data protection laws. These include, but are not limited to:

1. Adequacy decisions, such as:
 - European Commission adequacy decisions
 - UK adequacy regulations
2. Agreements, such as:
 - EEA Standard Contractual Clauses (SCCs)
 - UK International Data Transfer Agreement (IDTA)

5. What rights do you have in relation to your personal data?

5.1 Right to withdraw consent

Where you have given consent for the processing of your personal data, you may withdraw your consent at any moment with effect for the future.

5.2 Right to access your personal data

You have the right to request information about the personal data we hold regarding you. Upon request, we will provide you with a copy of your personal data.

5.3 Right to rectification

You may request from us the rectification of incorrect or incomplete personal data concerning you. We make reasonable efforts to keep personal data in our possession or control, which are used on an ongoing basis, accurate, complete, current and relevant, based on the most recent information available to us.

5.4 Right to restriction

You may request from us the restriction of processing of your personal data, if:

- You contest the accuracy of your personal data. You can request the restriction of processing for the duration of verification of the accuracy of the data;
- The processing is unlawful and you request the restriction of processing rather than erasure of your personal data;
- We no longer need your personal data for the processing purpose, but you require them for the establishment, exercise, or defence of legal claims; or
- You object to the processing while we verify whether our legitimate grounds override yours.

5.5 Right to portability

You have the right to receive your personal data provided to us and, where technically feasible, request its transfer to another organisation. This right applies if we process your personal data through automated means, based on your consent or for the performance of a contract you are a party to. Your personal data must have been provided by you, and this right should not adversely affect the rights and freedoms of others. You can receive your personal data in a structured, commonly used, and machine-readable format. The transmission of your personal data to another organisation is subject to technical feasibility.

5.6 Right to erasure

You have the right to request that we delete the personal data we process about you. We must comply with this request unless the processing of your personal data is necessary for:

- Compliance with a legal obligation requiring processing by laws to which we are subject;
- Archiving purposes in the public interest, scientific or historical research purposes, or statistical purposes; or
- The establishment, exercise, or defence of legal claims.

5.7 Right to object

You have the right to object, at any time, to the processing of your personal data based on our

legitimate interests or the legitimate interests of a third party, provided that the processing is not based on your consent. If you exercise this right, we will no longer process your personal data unless we can demonstrate compelling legitimate grounds that override your interests, rights, and freedoms, or if the processing is necessary for legal claims. If you object to the processing, please let us know if you also wish for your personal data to be erased.

5.8 Right to be informed

You have the right to be informed about the collection and use of your personal data. We have prepared this Privacy Policy for this purpose, and you will be informed of any changes to this Privacy Policy.

5.9 Right to lodge a complaint

You have the right to lodge a complaint with your local data protection supervisory authority or with any other data protection authority in the EU. However, we would appreciate it if you first contact us to try to solve your issue – you can find our contact details in Section 8.

6. How long do we retain your data?

We retain data related to our provided services in accordance with legal obligations. If you are a customer, we will keep your data for the duration of any contractual relationship you have with us, and, where permitted, beyond the end of that relationship for as long as necessary to fulfil the purposes set out in this Privacy Policy.

We retain the data we collect from or about you for the period necessary to fulfil the purposes outlined in this Privacy Policy, unless a longer retention period is required or permitted by law. Once the data is no longer necessary for these purposes, we either delete it or retain it in an anonymised form. In determining the appropriate retention period, we take into account various criteria, including the type of services requested by or provided to you, the nature of our relationship with you, the potential impact on the services we provide to you if we delete certain data about you, and the retention periods mandated by law.

7. How do we protect your data?

We strive to maintain high security standards and have implemented robust technical and organisational measures to protect your data, in accordance with the current, general state of technology. We ensure that your personal data is adequately secured against loss, falsification or unauthorised access. However, please note that the transmission of information via the internet is not completely secure. While we do our best to protect your personal data, we cannot guarantee 100% security of your data transmitted to us. Once we have received your personal data, we use strict procedures and security features to prevent unauthorised access. In the unfortunate event of a personal data breach, we will report it and take remedial measures in accordance with the requirements of the law and regulatory authorities.

8. How can you contact us and make a request?

If you have any questions about the processing of your personal data, we recommend reading through this Privacy Policy first.

To make a query, raise a concern, or exercise your data subject rights, please feel free to contact us at CCVUK@cheryholding.com. This applies if you are based within the EEA and the UK.

We take your privacy seriously and aim to respond to you within one month or within the timeline specified by the relevant local privacy protection law, after confirming your identity.

If you believe that we have not adequately addressed your complaints or concerns, you have the right to lodge a complaint with a competent data protection authority.

9. How will we update this Privacy Policy?

We may update this Privacy Policy, for example, to reflect changes in our business operations and measures for protecting personal information. If we make changes to this Privacy

Policy, we will notify you. Where changes to this Privacy Policy significantly impact the nature of our data processing or have a substantial effect on you, we will provide sufficient advance notice, allowing you the opportunity to exercise any applicable rights.

Event Data Recorder (EDR)

The vehicle is equipped with an Event Data Recorder (EDR), which can record data from driving and restraint systems during a collision or similar event, such as airbag deployment or impact with an obstacle. The data can assist analysis or reconstruction of vehicle parameters and driving conditions for post-accident investigation, cause analysis and responsibility determination. Recorded data includes but is not limited to:

- Longitudinal Delta-V.
- Maximum recorded longitudinal Delta-V.
- Time at which the maximum longitudinal Delta-V was recorded.
- Vehicle speed.
- Service braking.
- Driver's seat belt status.
- Accelerator pedal position.
- Power cycles during the event.
- Power cycle at the time of reading.
- Event data recording completeness.
- Time interval from the previous event to the current event.
- Vehicle Identification Number (VIN).
- Hardware number of the ECU that records EDR data.
- Serial number of the ECU that records EDR data.

- Software number of the ECU that records EDR data.

Caution

- The vehicle speed data recorded by the Event Data Recorder (EDR) is sourced from the output of the integrated brake control assembly.
- For Event Data Recorder (EDR) storage, unlocked events are overwritten sequentially. An unlocked event cannot overwrite a locked event, while a locked event can overwrite an unlocked event.

caution

- The vehicle records Event Data Recorder (EDR) data only in a significant collision.
- During normal driving, the Event Data Recorder (EDR) does not record data, nor does it record personal data or information such as name, sex, age or collision location.

Reading the Event Data Recorder (EDR)

Event Data Recorder (EDR) data must be read using diagnostic equipment. For more information, contact an Authorised Service Centre.

Data Disclosure

The Company may use data recorded by the EDR for fault diagnosis, product development and quality improvement.

Except in the following circumstances, we will not disclose event data obtained and recorded by the EDR to any third party:

1. With the consent of the vehicle owner or lessee.
2. Used in legal proceedings in response to official requests from police, courts or government authorities.
3. as required by applicable laws and regulations.